

Manuals.plus /

› Narita /

› Narita Electric Hot Water Dispenser (2.3L) Instruction Manual

## Narita B06X1CMDDX

# Narita Electric Hot Water Dispenser (2.3L) Instruction Manual

Model: B06X1CMDDX

## IMPORTANT SAFEGUARDS

---

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- This appliance is for household use only. Do not use outdoors.
- Always place the dispenser on a stable, flat, heat-resistant surface.
- Keep out of reach of children. Hot water can cause severe burns.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the lid is securely closed during operation.
- Do not fill above the maximum fill line.
- Use only cold, potable water in the dispenser.

## PRODUCT OVERVIEW

---

The Narita Electric Hot Water Dispenser is designed for convenient access to hot water. It features a durable stainless steel housing and inner liner, with a 2.3-liter capacity. The unit includes an automatic re-boil and keep warm function, and a 360-degree rotating base for ease of use.

### Key Features:

- **3-Way Dispensing System:** Air Pump, Electric Pump, and Cup Touch.
- Stainless Steel Housing and Inner Liner.
- Automatic Re-boil and Keep Warm Function.
- 360° Rotating Base.
- 2.3 Liter Capacity.

### Components:

- Main Unit (Dispenser Body)
- Lid Assembly
- Power Cord
- Water Level Indicator
- Dispensing Spout
- Control Panel (Buttons for Electric Pump, Re-boil, Lock/Unlock)
- Air Pump Button

## SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove the dispenser from its packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, clean the interior of the dispenser.
  - Open the lid and wipe the interior with a damp cloth.
  - Fill the dispenser with clean water up to the MAX line.
  - Boil the water and dispense it completely. Discard this water.
  - Repeat this process 2-3 times to ensure thorough cleaning and remove any manufacturing residues.
3. **Placement:** Place the dispenser on a stable, flat, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
4. **Power Connection:** Plug the power cord into a standard 120V/60Hz electrical outlet.

## OPERATING INSTRUCTIONS

---

### Filling the Dispenser:

1. Ensure the dispenser is unplugged.
2. Open the lid.
3. Fill the inner pot with cold, potable water. Do not exceed the "MAX" fill line.
4. Close the lid securely until it clicks into place.
5. Plug the dispenser into a power outlet. The unit will automatically begin heating the water to boiling point.

### Dispensing Hot Water (3 Ways):

The Narita Electric Hot Water Dispenser offers three convenient methods for dispensing hot water:



This image illustrates the three dispensing methods: Air Pump, Electric Pump, and Cup Touch. Each method is shown with a hand demonstrating the action on the dispenser.

#### 1. Air Pump Dispensing:

This method does not require electricity. Press the large air pump button located on the top of the lid repeatedly to manually pump water out of the spout. This is useful during power outages or when the unit is unplugged.

#### 2. Electric Pump Dispensing:

Ensure the dispenser is plugged in and powered on. Press the "Unlock" button (if locked) and then press and hold the "Electric Pump" button on the control panel. Water will dispense from the spout. Release the button to stop the flow.

#### 3. Cup Touch Dispensing:

Ensure the dispenser is plugged in and powered on. Press the "Unlock" button (if locked). Position your cup against the lever located behind the dispensing spout. The pressure from the cup will activate the dispenser, and water will flow. Remove the cup to stop the flow.

### Re-boil and Keep Warm Function:

- After boiling, the dispenser automatically switches to the "Keep Warm" mode, maintaining the water at a hot temperature.
- If the water temperature drops below the desired level, or if you add new cold water, you can press the "Re-boil" button to bring the water back to boiling point.

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your hot water dispenser.

### Exterior Cleaning:

- Always unplug the dispenser and allow it to cool completely before cleaning.

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
- Ensure no water enters the electrical components.

### Interior Cleaning and Descaling:

Over time, mineral deposits (limescale) can build up inside the dispenser, especially in hard water areas. Descaling is recommended every 1-3 months, depending on water hardness and usage.

1. Unplug the dispenser and empty any remaining water.
2. Fill the dispenser with a solution of water and white vinegar (e.g., 1 part vinegar to 2 parts water) or a commercial descaling agent suitable for hot water dispensers. Do not exceed the MAX fill line.
3. Close the lid and plug in the dispenser. Allow the solution to boil and then remain in the "Keep Warm" mode for approximately 1 hour.
4. Unplug the dispenser and carefully pour out the descaling solution.
5. Rinse the interior thoroughly with clean water several times to remove any residue and vinegar smell.
6. Perform an initial cleaning cycle (fill with clean water, boil, dispense, discard) 2-3 times before resuming normal use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser does not heat water.	Not plugged in; power outage; faulty outlet.	Check power cord connection; check circuit breaker; try a different outlet.
Water is not dispensing.	Unit is locked; insufficient water; dispensing button not pressed correctly.	Press "Unlock" button; ensure water level is adequate; press and hold electric pump button or use air pump/cup touch correctly.
Water tastes strange or has odor.	First use residue; mineral buildup; water quality issue.	Perform initial cleaning cycles; descale the unit; use filtered water.
Slow water dispensing.	Mineral buildup in spout or pump.	Descalate the dispenser thoroughly.

## SPECIFICATIONS

- **Model:** B06X1CMDDX
- **Brand:** Narita
- **Capacity:** 2.3 Liters
- **Voltage:** 120V
- **Frequency:** 60Hz
- **Power Consumption:** 750W
- **Material:** Stainless Steel (Housing and Inner Liner)
- **Color:** Silver

- **UPC:** 643108235082

## **WARRANTY AND SUPPORT**

---

This Narita Electric Hot Water Dispenser is covered by a manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included with your purchase or contact Narita customer service directly.

Please have your model number (B06X1CMDDX) and purchase date available when contacting support.