

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fellowes](#) /

› [Fellowes 5742801 Lunar+ A4 Laminator Instruction Manual](#)

Fellowes 5742801

Fellowes 5742801 Lunar+ A4 Laminator Instruction Manual

Model: 5742801

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Fellowes 5742801 Lunar+ A4 Laminator. Please read this manual thoroughly before using the device and retain it for future reference. The Lunar+ A4 Laminator is designed for laminating documents up to A4 size, suitable for various personal and office applications.

2. SAFETY INSTRUCTIONS

- Always connect the laminator to a grounded power outlet.
- Do not operate the laminator with a damaged power cord or plug.
- Keep hands and loose clothing away from the feed opening during operation.
- Do not laminate objects thicker than recommended pouch thickness (80-125 microns).
- Avoid laminating heat-sensitive materials without proper precautions.
- Ensure adequate ventilation around the laminator during use.
- Unplug the laminator when not in use or before cleaning.
- This appliance is not intended for use by children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Fellowes 5742801 Lunar+ A4 Laminator
- Instruction Manual
- (Optional: Starter pack of laminating pouches)

4. SETUP

1. **Unpack the Laminator:** Carefully remove the laminator from its packaging. Retain packaging for

storage or transport.

2. **Placement:** Place the laminator on a stable, flat surface. Ensure there is sufficient space around the machine for proper ventilation and for documents to exit freely.
3. **Power Connection:** Plug the power cord into a suitable electrical outlet.
4. **Power On:** Turn on the laminator using the power switch. The indicator light will illuminate, signaling that the machine is warming up.
5. **Warm-up Time:** Allow approximately 4 minutes for the laminator to reach its operating temperature. The ready indicator light will change color (e.g., from red to green) when the machine is ready for use.



Figure 1: Fellowes 5742801 Lunar+ A4 Laminator. This image shows the laminator with its blue and white casing, power switch, and feed opening.

5. OPERATING INSTRUCTIONS

1. **Prepare Document:** Place the document you wish to laminate inside a laminating pouch. Ensure the document is centered and leaves a small margin around the edges.
2. **Select Pouch Thickness:** The Lunar+ A4 Laminator supports 80 and 125 micron laminating pouches. Ensure you are using the correct pouch thickness for your application.
3. **Feed Pouch:** Once the laminator is ready (indicated by the light), insert the sealed edge of the laminating pouch into the feed opening. Feed the pouch straight and evenly. The laminator will automatically pull the pouch through.
4. **Lamination Process:** The laminator will process the pouch at a speed of approximately 30 cm per minute. Do not pull or push the pouch during lamination.
5. **Retrieve Laminated Document:** Once the pouch has fully exited the machine, carefully remove the laminated document. It may be warm, so handle with care. Place it on a flat surface to cool and flatten.
6. **Jam Release Mechanism:** In case of a misfeed or jam, activate the jam release mechanism (usually a lever or button) to release the pressure on the rollers. This allows you to carefully pull out the misfed pouch. Realign the document in a new pouch if necessary and attempt lamination again.
7. **Power Off:** After use, turn off the laminator using the power switch and unplug it from the electrical outlet.

6. MAINTENANCE

- **Cleaning:** Ensure the laminator is unplugged and cool before cleaning. Wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Roller Cleaning:** Periodically run a laminator cleaning sheet (available separately) through the machine to remove adhesive residue from the rollers.
- **Storage:** Store the laminator in a clean, dry place when not in use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Laminator does not turn on.	No power supply.	Check power cord connection and wall outlet. Ensure power switch is ON.
Document jams in the laminator.	Pouch inserted incorrectly or too thick.	Activate the jam release mechanism. Carefully pull out the pouch. Ensure pouch is inserted sealed-edge first and is within recommended thickness.
Laminated document is cloudy or has bubbles.	Incorrect temperature or pouch quality.	Ensure laminator is fully warmed up. Use high-quality laminating pouches.
Laminator is slow to warm up.	Normal operation.	Allow the specified 4 minutes for warm-up.

8. SPECIFICATIONS

Brand	Fellowes
Model Number	5742801
Laminating Capacity	Up to A4 format
Pouch Thickness	80 and 125 microns
Warm-up Time	4 minutes
Laminating Speed	30 cm/minute
Number of Rollers	2
Maximum Laminating Width	21 cm
Product Dimensions (L x W x H)	15.88 x 40.01 x 10.95 cm
Item Weight	1.18 kg
Color	Blue

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Fellowes website. Keep your purchase receipt as proof of purchase.

© 2023 Fellowes. All rights reserved.