

[Manuals.plus](#) /

› [Nostalgic](#) /

› Nostalgic Warehouse Craftsman Double Dummy Door Knob (Model 723719) Instruction Manual

Nostalgic 723719

Nostalgic Warehouse Craftsman Double Dummy Door Knob (Model 723719) Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Nostalgic Warehouse Craftsman Plate with Keyhole Double Dummy Waldorf Black Door Knob in Satin Nickel (Model 723719). A double dummy door knob is a non-functioning decorative hardware piece designed for doors that require only a push/pull function, such as closet doors or French doors where no latching or locking mechanism is needed. Please read these instructions carefully before beginning installation.



Image: The assembled Nostalgic Warehouse Craftsman Double Dummy Door Knob in Satin Nickel, showcasing the Waldorf black knob and the Craftsman plate with keyhole.

SAFETY INFORMATION

Always exercise caution when installing hardware. Wear appropriate safety gear, such as gloves and eye protection. Keep small parts away from children. Ensure all tools are used correctly to prevent injury or damage to the product or door. If you are unsure about any step, consult a qualified professional.

PACKAGE CONTENTS

Verify that all components are present before beginning installation. Your package should include:

- Non-functioning door knob (2)
- Craftsman plate with keyhole (2)
- Dummy spindles (2)
- Mounting screws (various sizes)
- Hex key (for set screws)



Image: All included components for the Nostalgic Warehouse Craftsman Double Dummy Door Knob, including plates, knobs, spindles, screws, and a hex key.

SETUP (INSTALLATION)

This double dummy set is designed for easy installation on modern pre-drilled doors and is also suitable for restoration projects. It provides a complete set for both sides of one door.

1. **Prepare the Door:** Ensure your door is clean and free of debris. For new installations, ensure the door is pre-drilled with standard bore holes.
2. **Attach Dummy Spindles:** Insert the dummy spindles through the door's bore hole. These spindles do not engage a latch mechanism but provide a mounting point for the knobs.
3. **Position Plates:** Place one Craftsman plate on the interior surface of the door and the other on the exterior surface,

aligning them with the dummy spindles and screw holes.

4. **Secure Plates:** Attach the long plates to both the interior and exterior surfaces of the door using the provided mounting screws. Ensure the plates are level and securely fastened. Do not overtighten.
5. **Install Knobs:** Slide the Waldorf door knobs onto the dummy spindles. Secure each knob by tightening the set screw located on the knob's shank with the provided hex key.
6. **Final Check:** Gently pull and push the knobs to ensure they are firmly attached and do not wobble.

**Long plates must be attached to interior and exterior surface of door with screws.
All necessary fasteners provided.**

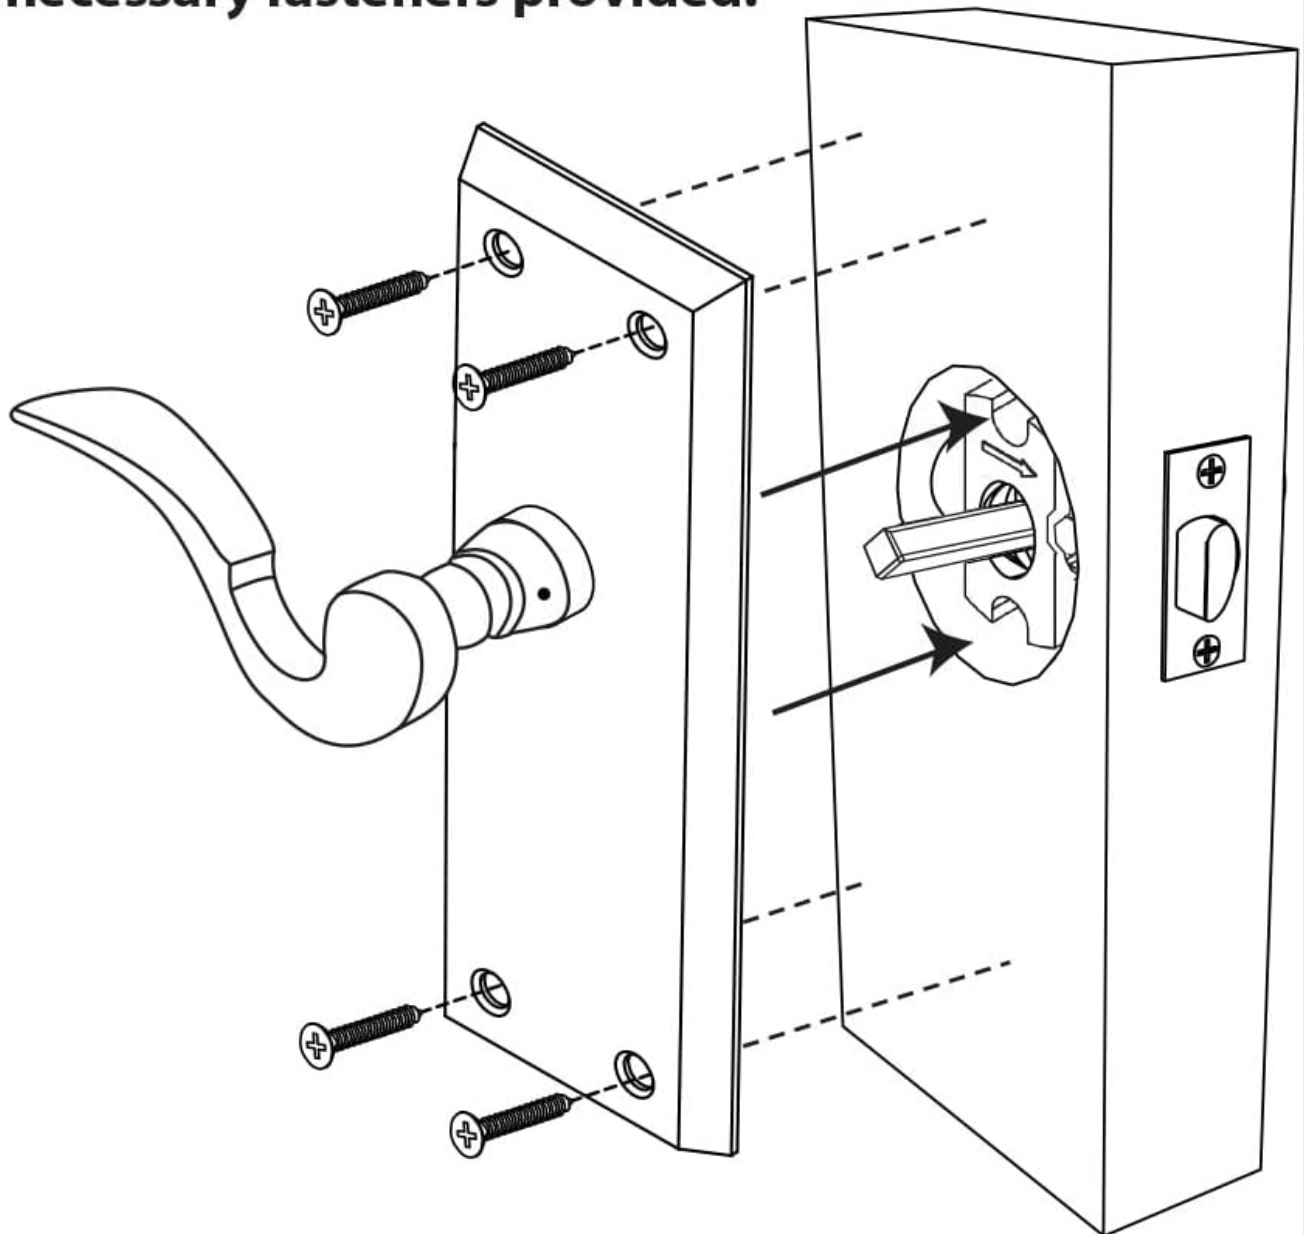


Image: A line drawing illustrating the process of attaching the long plates to the door's interior and exterior surfaces with screws, showing the dummy spindle passing through the door.

OPERATING

The Nostalgic Warehouse Craftsman Double Dummy Door Knob is designed for doors that only require a push or pull function. It does not contain a latching or locking mechanism. To open or close the door, simply push or pull the door using the knob as a handle.

MAINTENANCE

To maintain the finish and functionality of your door knob:

- **Cleaning:** Clean regularly with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or polishing agents, as these can damage the satin nickel finish and crystal knob.
- **Inspection:** Periodically check all mounting screws and set screws for tightness. Tighten if necessary to prevent wobbling or loosening.
- **Crystal Care:** For the Waldorf black crystal knob, use a mild glass cleaner on a soft cloth if needed, then wipe dry immediately.

TROUBLESHOOTING

Most issues with a double dummy knob are related to installation.

- **Knob is Loose:** If the door knob feels loose, check the set screw on the knob's shank. Use the hex key to tighten it securely. Also, ensure the mounting screws holding the plates to the door are tight.
- **Plate is Loose:** If the decorative plate is loose, tighten the mounting screws that secure it to the door.
- **Knob Does Not Turn:** This is a double dummy knob, designed not to turn or engage a latch. Its function is purely as a fixed handle for pushing and pulling the door.

SPECIFICATIONS

Feature	Detail
Model Number	723719
Brand	Nostalgic Warehouse
Material	Solid Forged Brass (Plates), Genuine Lead Crystal (Knobs)
Color	Satin Nickel (Finish), Black (Knob)
Style	Craftsman Plate, Waldorf Knob
Product Dimensions (Plate)	6.75"L x 3"W
Exterior Finish	Nickel
Shape	Round (Knob)
Handle Type	Knob
Projection Distance	2.59 Inches
Unit Count	1.0 Count (for one door)
Number of Items	1 (set for one door)

WARRANTY

Nostalgic Warehouse provides a **5-year warranty** on this product. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the official Nostalgic Warehouse warranty policy.

SUPPORT

If you have any questions regarding the installation, operation, or maintenance of your Nostalgic Warehouse door knob, or if you require technical assistance, please contact Nostalgic Warehouse customer support. Refer to the product packaging or the official Nostalgic Warehouse website for contact information.

© 2023 Nostalgic Warehouse. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question