

[Manuals.plus](#) /

› [CucinaPro](#) /

› CucinaPro Empanada & Churro Maker Machine User Manual

CucinaPro 1552

CucinaPro Empanada & Churro Maker Machine

Model: 1552

INTRODUCTION

The CucinaPro Empanada & Churro Maker Machine is designed to simplify the creation of delicious empanadas and churros in your home. This versatile electric cooker features removable non-stick plates, allowing you to easily switch between making two large empanadas or six mini churros. A dough cutting circle is included for precise dough measurement.



Image: The CucinaPro Empanada & Churro Maker Machine, displaying both empanadas and churros, along with the removable plates and dough cutting circle.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.

COMPONENTS

The CucinaPro Empanada & Churro Maker Machine comes with the following components:

- Main Unit with Heating Elements
- 2 Sets of Removable Non-Stick Plates:
 - Empanada Plates (for 2 large empanadas)
 - Churro Plates (for 6 mini churros)
- Dough Cutting Circle

2-in-1 Compact Baker



Image: Detailed view of the appliance components, including the non-stick interior, dough cutter, and both sets of removable plates.

SETUP

1. **Unpack:** Carefully remove all packaging materials and any labels from the appliance.
2. **Initial Cleaning:** Before first use, wipe the non-stick plates with a damp cloth and dry thoroughly. Do not immerse the main unit in water.
3. **Install Plates:** Choose either the empanada or churro plates. Align the plates with the slots on the upper and lower heating elements and gently press down until they click into place. Ensure they are securely fastened.
4. **Placement:** Place the appliance on a stable, heat-resistant, and dry surface, away from the edge of the counter. Ensure there is adequate ventilation around the unit.

OPERATING INSTRUCTIONS

The appliance operates without a power button; it begins heating as soon as it is plugged in. The indicator lights will

guide you through the cooking process.

Preheating

- Plug the appliance into a standard electrical outlet. The red indicator light will illuminate, indicating that the unit is heating.
- Allow the appliance to preheat for approximately 5-8 minutes, or until the green indicator light illuminates. This indicates the unit has reached the optimal cooking temperature.

Making Empanadas

1. Ensure the empanada plates are installed and the unit is preheated (green light on).
2. Use the included dough cutting circle to cut your empanada dough to the correct size.
3. Carefully place one dough circle onto each empanada mold on the lower plate.
4. Add your desired filling to the center of each dough circle, ensuring not to overfill.
5. Gently close the lid. The appliance will press and seal the empanadas as they cook.
6. Cook for approximately 8-12 minutes, or until the empanadas are golden brown and cooked through. Cooking time may vary based on dough thickness and filling.
7. Once cooked, carefully open the lid and remove the empanadas using a heat-resistant plastic or wooden utensil. Avoid using metal utensils to prevent scratching the non-stick coating.



Make 2 Large Empanadas! Filled to Perfection

Image: The Empanada Maker in action, cooking two large empanadas to perfection.

Making Churros

1. Ensure the churro plates are installed and the unit is preheated (green light on).
2. Prepare your churro batter according to your recipe.
3. Carefully pour or pipe the churro batter into each of the six churro molds on the lower plate. Do not overfill.
4. Gently close the lid.
5. Cook for approximately 5-8 minutes, or until the churros are golden brown and firm. Cooking time may vary based on batter consistency.
6. Once cooked, carefully open the lid and remove the churros using a heat-resistant plastic or wooden utensil.
7. For best results, roll the hot churros in cinnamon sugar immediately after removal.

Make 6 Mini Churros at Once Fresh & Golden Every Time!



Image: The Churro Maker in use, preparing six mini churros simultaneously.

Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the features and use of the Empanada and Churro Maker Machine.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Remove Plates:** Once cool, gently press the release buttons (if present) and lift the removable plates from the main unit.
3. **Clean Plates:** The non-stick plates can be washed by hand with warm, soapy water and a soft sponge. For stubborn residue, soak the plates for a few minutes before cleaning. Rinse thoroughly and dry completely. The plates are not dishwasher safe.

- 4. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
- 5. **Storage:** Ensure all parts are completely dry before storing. Store the appliance with the plates installed or separately in a clean, dry place. The compact design allows for easy storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet malfunction.	Ensure the appliance is securely plugged into a working electrical outlet. Check the circuit breaker.
Food is not cooking evenly.	Insufficient preheating; uneven dough/batter distribution; plates not properly installed.	Allow the unit to fully preheat until the green light illuminates. Ensure dough/batter is evenly spread. Verify plates are securely clicked into place.
Food sticks to the plates.	Plates not properly cleaned; non-stick coating wear; insufficient preheating.	Ensure plates are clean and dry. Lightly grease plates before use if necessary. Allow full preheating.
Smoke or unusual odor during first use.	Protective oils burning off.	This is normal for first use. Ensure good ventilation. If smoke persists, unplug and contact customer service.

SPECIFICATIONS

Brand: CucinaPro
Model: 1552
Color: White
Material: Aluminum
Special Feature: Non Stick Coating, Removable Plates
Product Dimensions: 7"D x 11"W x 12"H
Wattage: 1500 watts
Voltage: 110 Volts
Item Weight: 2.95 pounds (1.34 Kilograms)
Included Components: Dough cutting circle, Empanada Plates, Churro Plates

WARRANTY AND SUPPORT

This CucinaPro appliance comes with a limited warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your product packaging or contact CucinaPro customer support directly.

For technical assistance, replacement parts, or general inquiries, please visit the official CucinaPro website or contact their customer service department.

CucinaPro Official Store: [Visit Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question