

[Manuals.plus](#) /

› [Varta](#) /

› Varta LED Outdoor Sports Flashlight F10 Instruction Manual

Varta F10

Varta LED Outdoor Sports Flashlight F10

Model: F10 (17627101421)

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Varta LED Outdoor Sports Flashlight F10. Please read this manual thoroughly before operating the device and retain it for future reference.

SAFETY INSTRUCTIONS

- Do not look directly into the LED light.
- Keep out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.
- Ensure the battery compartment is sealed correctly to maintain IPX4 water resistance.

PACKAGE CONTENTS

- 1x Varta LED Outdoor Sports Flashlight F10
- 3x Varta High Energy AAA Batteries



Image: The Varta F10 flashlight packaging, showing the flashlight and included AAA batteries.

SETUP

Battery Installation

1. Unscrew the tail cap of the flashlight by turning it counter-clockwise.
2. Insert three (3) AAA batteries into the battery compartment, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Screw the tail cap back on clockwise until it is securely tightened. This ensures proper contact and water resistance.



Image: The Varta F10 LED Outdoor Sports Flashlight, showing its red body, black ends, and attached wrist strap.

OPERATING INSTRUCTIONS

Power On/Off and Mode Selection

- To turn the flashlight **ON**, press the button located on the tail cap.
- The flashlight features two brightness levels: **High** and **Low**.
- To switch between High and Low modes, press the button again while the flashlight is on.
- To turn the flashlight **OFF**, press the button until the light extinguishes.



Hoog

Laag

Image: A visual comparison demonstrating the High and Low brightness settings of the Varta F10 flashlight.

MAINTENANCE

- **Cleaning:** Wipe the flashlight with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace all three AAA batteries simultaneously when the light dims significantly. Always use fresh, high-quality batteries.
- **Storage:** If storing the flashlight for an extended period, remove the batteries to prevent leakage and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Flashlight does not turn on.	Dead or incorrectly inserted batteries.	Check battery polarity; replace batteries.
Light is dim.	Low battery power.	Replace batteries.
Water ingress.	Tail cap not securely tightened.	Ensure tail cap is fully tightened. Avoid submerging the flashlight.

SPECIFICATIONS

- **Model:** F10
- **Light Source:** Cree 5 Watt LED
- **Brightness:** Up to 235 Lumens
- **Beam Distance:** Up to 151 meters
- **Run Time:** Up to 35 hours (depending on mode and battery quality)
- **Battery Type:** 3x AAA Alkaline (included)
- **Water Resistance:** IPX4 (splash-proof)
- **Shock Proof:** Up to 2 meters
- **Material:** Aluminum body, rubberized grip
- **Dimensions:** Approximately 3.9 x 3.9 x 12.2 cm
- **Weight:** Approximately 124 g (with batteries)
- **Special Features:** Photoluminescent "angel eye" ring for glow-in-the-dark visibility, 2 light levels (High/Low), wrist strap.

WARRANTY AND SUPPORT

Varta products are manufactured to high-quality standards. For warranty information or technical support, please refer to the official Varta website or contact your local retailer. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B06X6HSZRD>

More documents and user manuals: <https://manuals.plus/>