

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Braun](#) /
- › [Braun TexStyle 7 Pro Steam Iron Instruction Manual](#)

Braun TexStyle 7 SI7062BL

Braun TexStyle 7 Pro Steam Iron Instruction Manual

Model: TexStyle 7 SI7062BL

INTRODUCTION

Thank you for choosing the Braun TexStyle 7 Pro steam iron. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before first use and keep them for future reference.



Image: The Braun TexStyle 7 Pro steam iron, featuring its blue and white design with a prominent soleplate and water tank.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the iron.
- Do not leave the iron unattended while it is connected to the mains supply or while it is hot.
- Always unplug the iron from the electrical outlet before filling with water, emptying, or cleaning, and when not in use.
- Do not operate the iron with a damaged cord or if the iron has been dropped or damaged.
- Keep the iron and its cord out of reach of children.
- The iron must be used and rested on a stable surface.
- Do not immerse the iron in water or other liquids.
- Use the iron only for its intended household use.

PARTS AND FEATURES

Familiarize yourself with the components of your Braun TexStyle 7 Pro iron:

1. Water filling inlet with cap
2. Spray nozzle
3. Steam shot button
4. Spray button
5. Temperature control dial
6. Steam selector switch (Dry/Steam/Max Steam)
7. Self-clean button
8. Power cord
9. Water tank
10. Pilot light
11. Eloxal 3D Soleplate



Image: Underside view of the Braun TexStyle 7 Pro iron, highlighting the unique Eloxal 3D soleplate design with its curved edges for effortless gliding.

SETUP

Before First Use

- Remove any stickers or protective film from the soleplate.
- It is normal for a slight odor or smoke to occur during the first few minutes of use as manufacturing residues burn off. This will disappear after a short time.

Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.
2. Open the water filling inlet cap.
3. Fill the water tank with tap water up to the 'MAX' mark. Do not overfill.
4. Close the water filling inlet cap securely.

OPERATING THE IRON

Temperature and Steam Settings

- Plug the iron into a suitable power outlet.
- Turn the temperature control dial to the desired setting according to the fabric type. The pilot light will illuminate.
- Wait for the pilot light to turn off, indicating the iron has reached the set temperature.
- For dry ironing, set the steam selector switch to the 'Dry' position.
- For steam ironing, set the steam selector switch to the 'Steam' or 'Max Steam' position, ensuring the temperature setting is within the steam range (usually 2 dots or higher).



Image: A graphic illustrating the Braun TexStyle 7 Pro's capability to produce 60% more steam compared to previous models, enhancing ironing efficiency.

Steam Shot and Spray Function

- **Steam Shot:** Press the steam shot button for an extra burst of steam to remove stubborn creases. Wait a few seconds between shots.
- **Spray Function:** Press the spray button to lightly moisten fabrics, aiding in crease removal.



Image: The Braun TexStyle 7 Pro iron emitting a powerful burst of steam from its soleplate, demonstrating its effective steam output.

Ironing Tips

- Always check the garment's care label for recommended ironing temperature.
- Sort clothes by fabric type and iron from lowest to highest temperature.
- The unique Eloxal 3D soleplate allows for effortless gliding in all directions, including backwards over obstacles like pockets and buttons.



Image: A circular graphic illustrating the ease of ironing backwards over pockets and buttons with the Braun TexStyle 7 Pro's specialized soleplate.

MAINTENANCE

Cleaning the Soleplate

- Allow the iron to cool completely.
- Wipe the soleplate with a damp cloth and a non-abrasive cleaner if necessary.
- Do not use abrasive scouring pads or harsh cleaners as they can damage the soleplate.

Descaling (Anti-Calc System)

The iron features an Anti-Calc system to reduce limescale build-up. For optimal performance, perform the self-clean function regularly, especially in hard water areas.

1. Fill the water tank to the MAX line.

2. Set the temperature to MAX and plug in the iron.
3. Once the pilot light goes out, unplug the iron.
4. Hold the iron horizontally over a sink and press the self-clean button. Steam and boiling water will be expelled, flushing out scale and impurities.
5. Release the button when the water tank is empty.
6. Repeat if necessary.

Storage

- Always unplug the iron and allow it to cool completely before storing.
- Empty any remaining water from the tank.
- Store the iron upright on its heel rest to prevent soleplate damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; temperature dial set to 'Min'.	Check power connection; try another outlet; turn temperature dial to desired setting.
No steam.	Water tank empty; temperature too low for steam; steam selector set to 'Dry'.	Fill water tank; increase temperature setting; set steam selector to 'Steam' or 'Max Steam'.
Water leaks from soleplate.	Temperature too low for steam; overfilled water tank; iron not hot enough for steam shot.	Increase temperature; do not overfill; wait for pilot light to turn off before using steam shot.
White flakes coming from soleplate.	Limescale build-up.	Perform the self-clean function.

SPECIFICATIONS

Feature	Detail
Model Number	TexStyle 7 SI7062BL
Product Dimensions	12.6 x 5.91 x 5.12 inches
Item Weight	3.3 pounds
Base Material	Aluminum (Eloxal 3D Soleplate)
Frequency	50 Hz
Date First Available	November 17, 2017

WARRANTY AND SUPPORT

Braun products are manufactured to the highest standards of quality, safety, and reliability. This product is covered by a limited warranty. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Braun website. For customer support, service, or replacement parts, please contact Braun customer service in

your region.

You can also visit the official Braun store for more information:[Braun Store on Amazon](#)

© 2024 Braun. All rights reserved.