

[Manuals.plus](#) /

› [SYLVANIA](#) /

› Sylvania SP613 Bluetooth Speaker with Disco Ball Top Instruction Manual

SYLVANIA SP613

Sylvania SP613 Bluetooth Speaker with Disco Ball Top Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your Sylvania SP613 Bluetooth Speaker with Disco Ball Top. Please read this manual thoroughly before using the device and retain it for future reference.

The Sylvania SP613 is a portable Bluetooth speaker designed to deliver audio wirelessly from compatible devices, featuring an integrated disco ball that projects multi-colored LED lights to enhance your listening experience.

2. SAFETY INFORMATION

- **General Safety:** Do not expose the device to extreme temperatures, direct sunlight, or high humidity. Avoid dropping or subjecting the speaker to strong impacts.
- **Water Exposure:** This device is not waterproof. Do not immerse it in water or expose it to rain or splashes.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use liquid cleaners or aerosols.
- **Battery Safety:** The speaker contains a built-in rechargeable Lithium-Ion battery. Do not attempt to replace the battery yourself. Do not dispose of the battery in fire or expose it to excessive heat. Recycle batteries according to local regulations.
- **Ventilation:** Ensure proper ventilation around the speaker during use and charging. Do not block any ventilation openings.
- **Volume Levels:** Prolonged listening at high volume levels may cause hearing damage. Adjust the volume to a safe and comfortable level.

3. PACKAGE CONTENTS

- Sylvania SP613 Bluetooth Speaker with Disco Ball Top
- USB Charging Cable (Type A to Micro USB, typically)
- Auxiliary Audio Cable (3.5mm to 3.5mm, typically)
- Instruction Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Sylvania SP613 speaker.



Figure 1: Front view of the Sylvania SP613 Bluetooth Speaker. This image displays the speaker's main body, the disco ball on top, the front speaker grille, and the control panel with various buttons and indicators.

Control Panel and Components:

- **Disco Ball:** Located on the top surface, projects multi-colored LED lights.
- **Speaker Grille:** Front-facing, covers the audio driver.
- **SYLVANIA Logo:** Brand identification.
- **BATTERY Indicator:** LED light indicating battery status (e.g., charging, low battery).
- **LIGHT Button:** Activates or deactivates the disco ball lights.

- **VOL (Volume) Knob:** Rotates to adjust the audio output level from minimum (MIN) to maximum (MAX).
- **BT/AUX Indicator:** LED light indicating the current input mode (Bluetooth or Auxiliary).
- **Bluetooth Button:** Used to switch to Bluetooth mode and initiate pairing.
- **Power Port (Micro USB):** Typically located on the back or side, for charging the internal battery.
- **AUX IN Port (3.5mm):** Typically located on the back or side, for connecting external audio devices via an auxiliary cable.

5. SETUP

5.1 Charging the Speaker

1. Connect the small end of the provided USB charging cable to the Power Port on the speaker.
2. Connect the larger end of the USB charging cable to a USB power adapter (not included) or a powered USB port on a computer.
3. The BATTERY indicator light will illuminate, typically red, to show that the speaker is charging.
4. Once fully charged, the BATTERY indicator light will change color (e.g., turn off or turn blue/green). A full charge typically takes 2-3 hours.

5.2 Powering On/Off

- To power on the speaker, rotate the VOL knob clockwise from the 'OFF' position. You may hear an audible tone.
- To power off the speaker, rotate the VOL knob counter-clockwise until it clicks into the 'OFF' position.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing

1. Ensure the speaker is powered on. The BT/AUX indicator light will flash, indicating it is in Bluetooth pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, laptop), go to the Bluetooth settings menu.
3. Search for available devices. The speaker will appear as "SP613" or "Sylvania SP613".
4. Select "SP613" to connect. Once successfully paired, the BT/AUX indicator light will stop flashing and remain solid blue, and you may hear a confirmation tone.
5. You can now play audio from your device through the speaker.

Note: If pairing fails, turn off the speaker and your device's Bluetooth, then repeat the steps. The speaker will automatically attempt to reconnect to the last paired device when powered on.

6.2 Auxiliary Input (AUX IN)

1. Connect one end of the 3.5mm auxiliary audio cable to the AUX IN port on the speaker.
2. Connect the other end of the auxiliary audio cable to the headphone jack or audio output port of your external audio device.
3. The speaker will automatically switch to AUX mode, and the BT/AUX indicator light may change color or pattern to indicate AUX mode.
4. Play audio from your external device. Adjust volume on both the speaker and your device.

6.3 Disco Light Operation

- Press the **LIGHT** button to turn the disco ball lights on.
- Press the **LIGHT** button again to turn the disco ball lights off.
- The lights will project multi-colored patterns.

6.4 Volume Control

- Rotate the **VOL** knob clockwise to increase the volume.
- Rotate the **VOL** knob counter-clockwise to decrease the volume.

7. MAINTENANCE

- **Cleaning:** Wipe the speaker's exterior with a soft, dry, lint-free cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery before storing and to recharge it every few months to maintain battery health.
- **Battery Care:** Avoid completely draining the battery frequently, as this can reduce its lifespan.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the provided USB cable.
No sound from the speaker.	Volume is too low; Incorrect input mode; Device not connected properly.	Increase speaker volume; Ensure correct mode (Bluetooth/AUX); Re-pair Bluetooth or re-connect AUX cable.
Bluetooth device cannot pair.	Speaker not in pairing mode; Device Bluetooth is off; Speaker too far from device.	Ensure speaker is on and BT/AUX indicator is flashing; Turn on Bluetooth on your device; Move device closer to speaker (within 30 feet).
Disco lights are not working.	Lights are turned off.	Press the LIGHT button to activate the disco lights.

9. SPECIFICATIONS

- **Model:** SP613
- **Brand:** SYLVANIA
- **Dimensions:** 13.97 x 16.51 x 18.54 cm (5.5 x 6.5 x 7.3 inches)
- **Weight:** 657.71 g (1.45 lbs)
- **Material:** Plastic

- **Power Source:** Battery-powered (Internal Lithium Ion)
- **Speaker Output Power:** 1 Watt (Nominal), 3 Watts (Maximum)
- **Connectivity:** Bluetooth, USB (for charging), Auxiliary (3.5mm)
- **Compatible Devices:** Desktop, Laptop, Smartphone, Tablet
- **Special Features:** Multi-room audio (via Bluetooth), Wireless Bluetooth portable, Integrated Disco Ball LED lights

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or visit the official Sylvania website. Keep your proof of purchase for warranty claims.

If you encounter issues not covered in the troubleshooting section, please contact Sylvania customer service for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B06X99WPFH>

More documents and user manuals: <https://manuals.plus/>