

[Manuals.plus](#) /

› [Teamson Home](#) /

› Teamson Home 33.25 in. Cascading Bowls and Stacked Stones LED Outdoor Water Fountain User Manual

Teamson Home 201601PT

Teamson Home 33.25 in. Cascading Bowls and Stacked Stones LED Outdoor Water Fountain User Manual

Brand: Teamson Home | Model: 201601PT

INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your new Teamson Home 33.25 inch Cascading Bowls and Stacked Stones LED Outdoor Water Fountain. Designed to create a tranquil backyard oasis, this fountain features cascading water flow and integrated LED lighting. Please read these instructions carefully before assembly and use to ensure safe and optimal performance.

SETUP

Unpacking

- Carefully remove all components from the packaging.
- Inspect all parts for any damage. If any parts are missing or damaged, do not proceed with assembly. Contact customer support.
- Place the fountain on a flat, level surface in your desired outdoor location. Ensure it is near a suitable power outlet.

Assembly

- Connect the pump to the tubing located inside the fountain structure. Ensure a secure fit.
- Position the pump inside the lowest basin of the fountain.
- Ensure all LED light cables are properly routed and secured to prevent interference with water flow.
- Fill the lowest basin with distilled water until the pump is fully submerged and the water level is adequate for circulation. Do not overflow.
- Plug the power cord into a grounded outdoor electrical outlet.

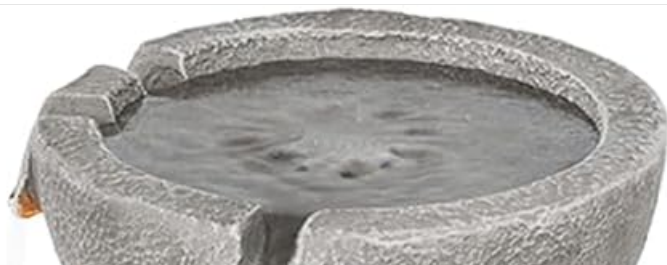






Image: The assembled Teamson Home water fountain, showcasing its cascading bowls and stacked stone design.

OPERATION

- Once plugged in, the pump will begin circulating water, and the LED lights will illuminate.
- Regularly check the water level. Due to evaporation, water levels will decrease over time. Refill as needed to ensure the pump remains fully submerged.
- The fountain is designed for continuous operation. Frequent stopping and starting of the pump can reduce its lifespan.

MAINTENANCE

- **Water Level:** Always ensure the water level is sufficient to cover the pump. Low water levels can cause the pump to overheat and fail.
- **Cleaning:** Clean the fountain and pump regularly (at least once a month) to prevent mineral buildup and algae growth. Disconnect power before cleaning. Use a soft brush and mild soap, then rinse thoroughly.
- **Pump Care:** Periodically remove the pump and clean its impeller to ensure proper water flow. Refer to the pump's specific instructions for detailed cleaning.
- **Winterization:** In freezing temperatures, drain all water from the fountain and store it indoors to prevent damage from ice expansion.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pump not running.	Not plugged in; circuit breaker tripped; low water level; clogged pump.	Ensure power cord is securely plugged in. Check circuit breaker. Add water to cover pump. Clean pump and impeller.
Water flow is weak or inconsistent.	Low water level; clogged pump or tubing; kinked tubing.	Add water. Clean pump and tubing. Straighten any kinks in the tubing.
Excessive splashing.	Water level too high; fountain not level.	Remove some water. Adjust fountain placement to ensure it is level.
LED lights not working.	Loose connection; damaged LED unit.	Check all light connections. If damaged, contact customer support for replacement parts.

SPECIFICATIONS

Brand	Teamson Home
Model Number	201601PT
Color	Stone Gray
Material	Polyresin:90%, Fiberglass:5%, Plastic:4.5%, Metal:
Product Dimensions	15.5"L x 15.25"W x 33.25"H
Item Weight	23.2 pounds

Power Source	Corded Electric
Special Feature	Lighted
Assembly Required	Yes

WARRANTY AND SUPPORT

This product comes with a **30 day warranty** against manufacturer defects.
For further assistance or to download the official user manual, please visit the product's support page or refer to the PDF document:

[Download User Manual \(PDF\)](#)

VISUAL GUIDE



Image: The water fountain integrated into an outdoor patio setting, surrounded by lush green plants, demonstrating its aesthetic appeal.



Cascading Water



Four Tiers



LED Lights

Image: A detailed view highlighting the fountain's key features: cascading water flow, its four-tiered structure, and the warm glow of the integrated LED lights.



Image: A close-up of the top section of the fountain, showing water gracefully flowing from the upper bowl into the lower tiers.



Image: A side profile of the fountain, illustrating its overall dimensions of 15.5 inches L x 15.25 inches W x 33.25 inches H.

Product Videos

No official seller videos are available for this product. The following videos are provided by customers and influencers for illustrative purposes only and may not reflect official product features or usage guidelines.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why isn't the water running in my Teamson Home 33-inch Stone-Texture Polyresin Cascading Waterfall Fountain (Model 201601PT)?

If your Teamson Home 201601PT fountain has stopped running after initially working, please check the following troubleshooting steps based on the manual: Check for Air Lock: Air can sometimes get trapped in the water supply...

[Read full answer](#)