

Ardes AR5S40PBR

ARDES AR5S40PBR Pedestal Fan Instruction Manual

Model: AR5S40PBR

1. INTRODUCTION

Thank you for choosing the ARDES AR5S40PBR Pedestal Fan. This powerful and quiet fan is designed to provide optimal air circulation and cooling for your home or office. Featuring a remote control, timer function, adjustable height, and oscillation, it offers convenience and comfort. Please read this manual carefully before use to ensure safe and efficient operation.





Image 1.1: The ARDES AR5S40PBR Pedestal Fan, showcasing its sleek black design and sturdy base.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the fan.
- Ensure the power supply voltage matches the rating label on the fan.
- Do not operate the fan with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Unplug the fan from the power outlet when not in use, before cleaning, or before moving it.
- Keep fingers, pencils, or any other objects out of the fan grille when it is operating.
- Do not use the fan near water or in damp locations such as bathrooms.
- Place the fan on a stable, level surface to prevent it from tipping over.
- Do not cover the fan or obstruct its airflow.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 1 x ARDES AR5S40PBR Pedestal Fan Unit (including motor housing, fan blades, front and rear grilles)
- 1 x Adjustable Stand Pole
- 1 x Round Base
- 1 x Remote Control
- User Manual (this document)

4. ASSEMBLY INSTRUCTIONS

Assembly of the ARDES AR5S40PBR fan is quick and straightforward. Follow these steps:

1. **Attach the Base:** Secure the stand pole to the round base using the provided screws and washers. Ensure it is firmly tightened for stability.
2. **Mount the Motor Unit:** Place the motor housing onto the top of the stand pole and secure it according to the instructions.
3. **Install Rear Grille:** Attach the rear grille to the motor housing, aligning the notches.
4. **Attach Fan Blades:** Carefully slide the fan blades onto the motor shaft, ensuring they are properly seated. Secure with the retaining cap.
5. **Install Front Grille:** Place the front grille over the fan blades and align it with the rear grille. Secure both grilles together using the clips or screws provided.

5 pale da 40cm
Altezza
regolabile
fino a 125cm



Da 110 a 150 cm

Image 4.1: Illustration showing the fan's adjustable height (up to 125cm) and 40cm blade diameter, crucial for assembly and placement.

Note: The product description mentions "video instructions" for assembly. While no direct video links are available in the provided data, general assembly steps for pedestal fans are typically similar.

5. OPERATING INSTRUCTIONS

The ARDES AR5S40PBR fan can be operated using the control panel on the unit or the included remote control.

5.1. Control Panel and Remote Control Overview



Image 5.1: Close-up of the fan's radial grille, control panel buttons, and the remote control.



Image 5.2: Demonstrates the three speed levels and the convenience of the remote control.

5.2. Basic Operation

- **Power ON/OFF:** Press the "ON/OFF" button on the control panel or remote to turn the fan on or off.
- **Speed Adjustment:** Press the "SPEED" button repeatedly to cycle through the 3 available speed settings (Low, Medium, High).
- **Oscillation:** Press the "SWING" button to activate or deactivate the automatic oscillation function, which distributes air across a wider area.
- **Timer Function:** Press the "TIMER" button to set the fan to automatically turn off after a set period. The timer can be set up to 7.5 hours. Each press typically adds 0.5 hours.
- **Mode Selection:** The "MODE" button allows selection between different airflow modes, such as normal, natural breeze, or sleep mode, if available on your model.



Image 5.3: Visual representation of setting the fan's timer function for automatic shut-off.

5.3. Height and Inclination Adjustment

- **Height Adjustment:** Loosen the height adjustment knob on the stand pole, extend or retract the pole to the desired height (up to 125cm), and then securely tighten the knob.
- **Inclination Adjustment:** Gently tilt the fan head up or down to direct the airflow as needed. The fan head can be adjusted vertically to optimize cooling.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure your fan operates efficiently and extends its lifespan.

- **Always unplug the fan** from the power outlet before cleaning.
- **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Grille and Blade Cleaning:** Periodically remove the front grille (refer to assembly instructions for reverse steps) to access and clean the fan blades. Use a soft cloth or a vacuum cleaner with a brush attachment to

remove dust and debris from the blades and grilles. Ensure all parts are completely dry before reassembling.

- Storage:** When not in use for extended periods, store the fan in its original packaging or a clean, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your ARDES AR5S40PBR fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; fan unplugged; power button not pressed.	Check if the fan is properly plugged into a working outlet. Press the ON/OFF button.
Weak airflow.	Fan blades or grilles are dirty; fan speed is too low.	Clean the fan blades and grilles. Increase the fan speed setting.
Fan is noisy during operation.	Fan not on a stable surface; loose parts; dirt in motor/blades.	Ensure the fan is on a flat, stable surface. Check for any loose components and tighten them. Clean the blades and grilles thoroughly. If the noise persists and is excessive, contact customer support.
Oscillation not working.	Oscillation function not activated; obstruction.	Press the "SWING" button. Check for any objects obstructing the fan's rotation.
Remote control not working.	Dead batteries; remote out of range; obstruction between remote and fan.	Replace the batteries in the remote control. Ensure you are within range and there are no obstructions.

8. SPECIFICATIONS

Feature	Detail
Model Number	AR5S40PBR
Brand	Ardes
Type	Pedestal Fan
Blade Diameter	40 cm
Number of Blades	5
Dimensions (Product)	43 x 43 x 125 cm (adjustable height)
Weight	5.6 kg
Power Supply	230 Volt (AC)
Wattage	55 watts
Speed Settings	3

Feature	Detail
Special Features	Adjustable Height, Integrated Switch, Oscillating, Remote Control, Timer
Components Included	1 x Ventilatore Style 40PBR

9. WARRANTY AND SUPPORT

Ardes products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your purchase or visit the official Ardes website. If you require technical assistance or have questions not covered in this manual, please contact Ardes customer support or your retailer.

You can find more information about Ardes products and their range by visiting the official Ardes store [Ardes Brand Store](#).

© 2025 Ardes. All rights reserved.