

[manuals.plus](#) /› [Morphy Richards](#) /› [Morphy Richards Accents 4-Piece Titanium Kitchen Utensil Set Instruction Manual, Model 975079](#)

Morphy Richards 975079

Morphy Richards Accents 4-Piece Titanium Kitchen Utensil Set Instruction Manual

Model: 975079

INTRODUCTION

Thank you for choosing the Morphy Richards Accents 4-Piece Titanium Kitchen Utensil Set. This set includes essential kitchen tools designed for durability and ease of use. Please read this manual carefully before first use to ensure proper handling and maintenance.

Product Components

- Can Opener
- Cheese Grater
- Pizza Cutter
- Peeler
- Utensil Stand (if included with your specific purchase)



Image: The Morphy Richards Accents 4-Piece Titanium Kitchen Utensil Set displayed on its stand in a kitchen setting.

SETUP AND FIRST USE

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport if necessary.
- 2. Initial Cleaning:** Before first use, wash all utensils thoroughly with warm soapy water. Rinse well and dry completely. This removes any manufacturing residues.
- 3. Assembly (if applicable):** If your set includes a stand, ensure it is stable on a flat surface. Place each utensil securely on the designated hooks of the stand.



Image: A close-up view of the Morphy Richards Accents utensil set on its stand, showing the individual tools.

OPERATING INSTRUCTIONS

Each utensil in this set is designed for specific kitchen tasks. Always use caution when handling sharp edges.

Can Opener

H 4.7cm
W 23cm
D 6cm

Pizza Cutter

H 1.8cm
W 25cm
D 8.5cm

Flat Grater

H 1.8cm
W 26.5cm
D 6cm

Y Peeler

H 1.8cm
W 20.5cm
D 5.5cm



Image: An overview of the individual Morphy Richards Accents kitchen tools, including the can opener, pizza cutter, flat grater, and Y peeler, with their respective dimensions.

1. Can Opener

Position the can opener's cutting wheel onto the rim of the can. Squeeze the handles gently to pierce the lid, then rotate the knob to cut around the can's edge. Release handles to remove.

2. Cheese Grater

Hold the grater firmly by the handle. Place the food item (e.g., cheese) against the grating surface and move it downwards with gentle pressure to grate. Use caution to avoid contact with the sharp grating surface.

3. Pizza Cutter

Place the pizza on a stable, heat-resistant surface. Hold the handle firmly and press the wheel down onto the pizza, rolling it across to cut through the crust and toppings. For best results, use a single, continuous motion.

4. Peeler

Hold the fruit or vegetable securely. Position the peeler blade against the skin and draw it away from your body with a smooth, even stroke to remove the peel. Exercise caution with the sharp blade.



Image: Detailed view of each Morphy Richards Accents kitchen tool, including the grater, can opener, pizza cutter, and peeler, highlighting their design.

Maintenance and Care

Proper care will extend the life and performance of your Morphy Richards Accents utensil set.

- **Cleaning:** All utensils are dishwasher safe. For best results and to maintain the finish, hand washing with warm soapy water is recommended, especially for items with intricate parts like the can opener.
- **Drying:** Always dry the utensils thoroughly immediately after washing to prevent water spots and maintain their luster.
- **Storage:** Store the utensils on the provided stand or in a drawer where they are protected from damage and are easily accessible.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, steel wool, or scouring pads, as these can scratch the titanium finish.

TROUBLESHOOTING

This section addresses common concerns you might encounter with your utensil set.

- **Utensils appear dull or stained:** Ensure thorough drying after each wash. For stubborn water spots, a mild stainless steel cleaner can be used, followed by rinsing and drying.
- **Can opener not cutting effectively:** Check if the cutting wheel is clean and free from food debris. Ensure the can opener is properly aligned with the can's rim before rotating.
- **Pizza cutter not cutting cleanly:** Ensure the wheel is clean. Apply firm, even pressure when cutting.
- **Peeler not peeling efficiently:** The blade may have food residue. Clean the blade carefully. Ensure the fruit or vegetable is held firmly.

SPECIFICATIONS

Brand	Morphy Richards
Model Number	975079
Color	Titanium
Material	Stainless Steel
Handle Material	Stainless Steel
Dimensions (L x W x H)	13 x 13 x 29.5 cm (for the set with stand)
Item Weight	763 g
Dishwasher Safe	Yes
Recommended Use	Kitchen

WARRANTY AND SUPPORT

Morphy Richards products are manufactured to high standards. For information regarding warranty, returns, or customer support, please refer to the warranty card included with your purchase or visit the official Morphy Richards website. Please have your model number (975079) and purchase details ready when contacting support.

Official Website: www.morphyrichards.com

© 2024 Morphy Richards. All rights reserved.