



Manuals.plus /

- › C-Zone /
- › C-Zone 2.4GHz USB Wireless Game Controller Instruction Manual

C-Zone GamePad wireless

C-Zone 2.4GHz USB Wireless Game Controller Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the C-Zone 2.4GHz USB Wireless Game Controller. Please read this manual carefully before use to ensure proper setup and operation. This product is designed to enhance your gaming experience on compatible systems.



Image 1.1: Two C-Zone wireless game controllers and their USB receiver.

Key Features:

- 2.4GHz wireless reception technology with a range of up to 10 meters.
- Dual operation modes: Digital and Analog, switchable with an indicator.
- High-precision dual-simulation joysticks for 360-degree omni-directional control.
- Integrated vibration motors in both handles for enhanced feedback.
- Ergonomic design for comfortable extended use.

2. SETUP

2.1 Battery Installation

Each controller requires two AAA batteries (not included). Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment on the back of the controller.
2. Open the battery cover.
3. Insert two AAA batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.

4. Close the battery cover securely.



Image 2.1: Battery compartment for AAA batteries.

2.2 Connecting the USB Receiver

The wireless controllers connect to your device via a USB receiver.

1. Plug the USB receiver into an available USB port on your computer or TV Box.
2. The system should automatically detect the receiver.

2.3 Pairing the Controllers

Follow these steps to pair your controllers with the USB receiver:

1. Ensure batteries are installed in both controllers.
2. Turn on the power switch on the controller (refer to Image 2.2 for switch location).
3. Press the "MODE" button on the game controller. The controller's LED will begin to flash quickly.
4. Once the first controller is connected, its LED will flash slowly, then become stable.
5. Repeat the process for the second controller. Once its LED becomes stable, both controllers are successfully connected.



Image 2.2: Location of the ON/OFF switch on the controller.

2.4 Compatibility Notes

The C-Zone Wireless Game Controller is compatible with the following operating systems:

- Windows 98 / 2000 / XP / 2003 / Vista / 7 / 8
- Android 2.3 and later

Important Note: This controller is NOT compatible with Windows 10, Windows 11, Mac Apple systems, or PlayStation 3 (PS3).

Compatible systems for Android 2.3 and for Windows 8/7/XP

Not working with for windows 10



Image 2.3: Compatibility overview for the C-Zone controller.

3. OPERATING INSTRUCTIONS

3.1 Basic Controls

The controller features standard gamepad buttons and dual analog sticks.

- **Directional Pad (D-Pad):** For precise directional input.
- **Action Buttons (1, 2, 3, 4):** Typically used for in-game actions.
- **Analog Joysticks:** Provide 360-degree movement and can be pressed down (L3/R3).
- **SELECT Button:** Used for various in-game functions or menu navigation.
- **START Button:** Used to pause games or access menus.
- **MODE Button:** Switches between Digital and Analog modes.
- **Shoulder Buttons (L1, L2, R1, R2):** Located on the top of the controller for additional actions.



Image 3.1: Detailed view of controller buttons and joysticks.

3.2 Digital / Analog Mode

The controller supports two operation modes:

- **Digital Mode:** Utilizes 2 axes and 10 keys.
- **Analog Mode:** Utilizes 4 axes and 12 keys, enabling the use of analog joysticks for finer control.

Press the **MODE** button to switch between these modes. An indicator light will show the current mode.

3.3 Sleep Mode and Reactivation

To conserve battery life, the controller features an automatic sleep mode and manual activation options.

- **Automatic Sleep:** If no input is detected for 5 minutes, the controller will enter sleep mode.
- **Manual Sleep:** Simultaneously press the **SELECT**, **START**, **L3** (left joystick press), and **R3** (right joystick press) buttons to manually activate sleep mode.
- **Reactivation:** Press the **START** button to reactivate the controller from sleep mode. The controller and receiver will automatically re-establish connection, indicated by stable LED illumination.

4. MAINTENANCE

4.1 Battery Replacement

When the controller's performance degrades or it fails to power on, replace the AAA batteries. It is

recommended to replace both batteries simultaneously.

4.2 Cleaning

To clean the controller, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners, as these can damage the controller's surface.

4.3 Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

5.1 Controller Not Connecting

- Ensure the USB receiver is securely plugged into a working USB port.
- Verify that fresh AAA batteries are correctly installed in the controller.
- Make sure the controller's power switch is in the 'ON' position.
- Press the 'MODE' button on the controller to initiate pairing.
- Check for any obstructions between the controller and the receiver that might interfere with the 2.4GHz signal.
- Confirm your operating system is compatible (refer to Section 2.4).

5.2 Buttons or Joysticks Not Responding

- Re-pair the controller following the steps in Section 2.3.
- Ensure the controller is not in sleep mode. Press the START button to reactivate.
- Check the battery level; low batteries can cause erratic behavior.
- If using an emulator (e.g., PCSX2), check the mapping settings and consider disabling 'inversion' if experiencing joystick input issues.
- Test the controller on a different game or application to isolate the issue.

5.3 Lag or Delayed Response

- Ensure the controller is within the 10-meter operating range of the USB receiver.
- Minimize interference from other 2.4GHz wireless devices.
- Replace batteries if they are low.

5.4 Excessive Battery Drain

- Always turn off the controller using the ON/OFF switch when not in use.
- Ensure the controller enters sleep mode after 5 minutes of inactivity.
- Use high-quality AAA batteries.

6. SPECIFICATIONS

Feature	Detail
Product Name	GamePad wireless
Connection Method	2.4GHz USB Wireless
Wireless Range	Up to 10 meters
Power Source	4 x AAA batteries (2 per controller, not included)
Operating Modes	Digital (2 axis, 10 keys) / Analog (4 axis, 12 keys)
Vibration	Dual motor vibration feedback
Dimensions (approx.)	16 cm x 9 cm x 5 cm (6.3 in x 3.5 in x 2.0 in)
Weight (approx.)	14.4 ounces (per set)
Compatible OS	Windows 98/2000/XP/2003/Vista/7/8, Android 2.3+
Non-Compatible OS	Windows 10, Windows 11, Mac Apple systems, PS3



Image 6.1: Controller dimensions.

7. WARRANTY AND SUPPORT

Specific warranty information for the C-Zone 2.4GHz USB Wireless Game Controller is not provided in this manual. Please refer to the product packaging or the retailer's website for any applicable warranty details.

For technical support or further assistance, please contact the vendor or retailer from whom you purchased the product.