

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Panasonic](#) /
- › [Panasonic DMR-BCT760EG Blu-ray Recorder User Manual](#)

Panasonic DMR-BCT760EG

Panasonic DMR-BCT760EG Blu-ray Recorder User Manual

Model: DMR-BCT760EG | Brand: Panasonic

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Panasonic DMR-BCT760EG Blu-ray Recorder. Please read this manual thoroughly before using the product to ensure correct and safe operation. Keep this manual for future reference.



Figure 1: Front view of the Panasonic DMR-BCT760EG Blu-ray Recorder. This image shows the sleek black design of the unit, featuring a disc tray, display panel, and control buttons.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent electric shock, injury, or damage to the unit:

- Do not expose the unit to rain or moisture.
- Do not open the casing. Refer all servicing to qualified personnel.
- Ensure proper ventilation. Do not block ventilation openings.
- Use only the specified power supply.
- Avoid placing the unit on unstable surfaces.
- Keep batteries away from children and dispose of them properly.

3. PACKAGE CONTENTS

Verify that all items are included in the package:

- Panasonic DMR-BCT760EG Blu-ray Recorder unit
- Remote control
- Power cable
- Batteries (2 x AA for remote control)
- Quick Start Guide

4. CONNECTIONS AND SETUP

Follow these steps to connect your Blu-ray Recorder to your television and antenna:

1. **Connect to TV:** Use an HDMI cable (not included) to connect the HDMI OUT port on the recorder to an HDMI IN port on your television. For older TVs, a SCART cable can be used.
2. **Connect Antenna:** Connect your DVB-C or DVB-T antenna cable to the ANT IN port on the recorder. If you have a separate TV tuner, connect the ANT OUT from the recorder to your TV's antenna input.
3. **Power Connection:** Plug the power cable into the AC IN port on the recorder and then into a wall outlet.
4. **Initial Setup:** Turn on your TV and select the correct HDMI input. Power on the recorder. Follow the on-screen instructions for initial setup, including language selection and channel scanning for DVB-C/DVB-T tuners.

Note: For optimal performance, use high-quality HDMI cables.

5. BASIC OPERATION

5.1 Power On/Off

Press the **POWER** button on the front panel or the remote control to turn the unit on or off.

5.2 Disc Playback

1. Press the **OPEN/CLOSE** button to open the disc tray.
2. Place a Blu-ray disc, DVD, or CD onto the tray with the label side facing up.
3. Press **OPEN/CLOSE** again to close the tray. Playback will usually start automatically. If not, select the disc from the main menu.

5.3 Recording Programs

The DMR-BCT760EG features a 500GB hard drive and dual DVB-C/DVB-T tuners, allowing you to record two programs simultaneously while watching a third (if compatible with your tuner setup).

1. **Instant Recording:** While watching a program, press the **REC** button on the remote control. Press it again to adjust the recording duration.
2. **Timer Recording:** Access the EPG (Electronic Program Guide) by pressing the **GUIDE** button. Navigate to the desired program and press **OK** or **REC** to set a timer recording. Confirm the settings.

Recorded content is stored on the internal 500GB hard drive.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Blu-ray Recorder:

- **Cleaning:** Wipe the exterior of the unit with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Ventilation:** Ensure that the ventilation openings are not blocked to prevent overheating.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Solution
No power	Check if the power cable is securely connected to the unit and the wall outlet. Ensure the outlet has power.
No picture/sound	Verify HDMI or SCART cable connections. Ensure your TV is set to the correct input source.
Disc not playing	Check if the disc is inserted correctly and is clean. Ensure the disc format is supported by the player.
Cannot record	Check antenna connection and signal strength. Ensure there is sufficient space on the 500GB hard drive. Verify tuner settings.
Remote control not working	Replace the AA batteries. Ensure there are no obstructions between the remote and the unit's IR sensor.

8. SPECIFICATIONS

Feature	Detail
Model Number	DMR-BCT760EG
Brand	Panasonic
Color	Black
Storage	500 GB Hard Disk Drive (HDD)
Tuners	2 x HD DVB-C, 2 x DVB-T
Media Type	Blu-ray Disc, DVD, CD

Feature	Detail
Connectivity	Ethernet, 2 x USB ports, HDMI Out, SCART
Special Features	Recording capability
Compatible Devices	Television
Resolution (Output)	Up to 3840x2160 (4K Upscaling)
Item Weight	2.2 Kilograms
Audio Output Mode	Stereo
Batteries Required	2 x AA (for remote control)

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Panasonic website. You can also contact Panasonic customer service for assistance with product registration, technical support, and service inquiries.

Online Support: www.panasonic.com