

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rowenta](#) /

› [Rowenta Compact Power RO3927EA Bagged Vacuum Cleaner User Manual](#)

## Rowenta RO3927EA

# Rowenta Compact Power RO3927EA Bagged Vacuum Cleaner User Manual

Model: RO3927EA

[Introduction](#) [Safety](#) [Components](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## 1. INTRODUCTION

---

The Rowenta Compact Power RO3927EA is a high-performance bagged vacuum cleaner designed for efficient cleaning of various surfaces in your home. Featuring a powerful 900W max motor, a 3-liter dust bag capacity, and advanced filtration, this compact appliance ensures thorough dirt collection and cleaner air output. Its ergonomic design and extended operating radius make it convenient for everyday use.



The Rowenta Compact Power RO3927EA in action, efficiently cleaning a carpeted area.

## Key Features:

- **Optimal Cleaning Power:** Equipped with a 900W max low-consumption motor for excellent results on all floor types.
- **High Filtration System:** Features a hygienic filter and 2 filtration stages for effective dust retention.
- **Compact Design:** Lightweight and easy to store, ideal for smaller living spaces.
- **Large Dust Bag Capacity:** A 3-liter dust bag minimizes the frequency of bag changes.
- **Extended Reach:** A 6.2-meter cable provides an 8.8-meter operating radius.

## 2. IMPORTANT SAFETY INSTRUCTIONS

Before using your Rowenta Compact Power vacuum cleaner, please read all instructions carefully and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is intended for domestic use only. Do not use it for commercial or industrial purposes.
- Do not vacuum water, liquids, or damp materials. This vacuum cleaner is designed for dry cleaning only.
- Do not vacuum hot ashes, burning cigarette butts, or sharp objects.

- Always unplug the appliance from the power outlet before performing any maintenance, cleaning, or changing accessories.
- Do not operate the vacuum cleaner with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not allow children to play with the appliance. Close supervision is necessary when the appliance is used by or near children.
- Use only Rowenta recommended attachments and replacement parts.
- Ensure the dust bag and filters are correctly installed before use.

### 3. PRODUCT COMPONENTS

---

Familiarize yourself with the main components of your Rowenta Compact Power vacuum cleaner:



Overview of the Rowenta Compact Power vacuum cleaner and its primary attachments.

1. Main Unit (Motor body with dust bag compartment)
2. Flexible Hose
3. Telescopic Metal Tube
4. Floor Nozzle (for carpets and hard floors)
5. Crevice Tool (usually stored on board or separately)
6. Upholstery Brush (usually stored on board or separately)
7. Power Cord with Plug
8. Dust Bag (inside the main unit)
9. Filters (motor protection filter, exhaust filter)

### 4. SETUP

---

Follow these steps to assemble and prepare your vacuum cleaner for first use:

1. **Attach the Flexible Hose:** Insert the end of the flexible hose into the suction inlet on the main unit until it clicks securely into place. To remove, press the release button and pull.
2. **Assemble the Telescopic Tube:** Connect the handle end of the flexible hose to the telescopic metal tube. Then, attach your desired floor nozzle or accessory to the other end of the telescopic tube. Adjust the length of the telescopic tube by pressing the adjustment button and sliding it to your preferred height.
3. **Check Dust Bag Installation:** Open the dust bag compartment cover. Ensure a dust bag is correctly inserted and sealed. If not, insert a new Rowenta Hygiene+ dust bag, making sure the cardboard collar is properly seated in the holder. Close the compartment cover firmly.
4. **Connect to Power:** Unwind the power cord and plug it into a suitable electrical outlet. The power cord has an automatic rewind function; gently pull the cord to extend it and press the rewind button to retract it after use.

---

## 5. OPERATING INSTRUCTIONS

---

Your Rowenta Compact Power vacuum cleaner is now ready for use.



Vacuuming a hard floor with the Rowenta Compact Power RO3927EA.

- 1. Powering On/Off:** Press the On/Off button located on the main unit to start or stop the vacuum cleaner.
- 2. Adjusting Suction Power:** The suction power can be adjusted using the electronic power variator on the main unit. For delicate surfaces or light cleaning, reduce the power. For heavily soiled areas or carpets, increase the power.
- 3. Managing Suction Effect (Ventosa Effect):** On very smooth surfaces, the floor nozzle might create a strong suction effect, making it difficult to move. To alleviate this, open the air valve located on the handle of the flexible hose. This reduces the suction at the nozzle, allowing for easier movement while maintaining

effective cleaning.

#### 4. Using Attachments:

- **Floor Nozzle:** Use for general cleaning of carpets and hard floors. Some nozzles have a brush selector for different surfaces.
- **Crevice Tool:** Ideal for narrow spaces, corners, and edges.
- **Upholstery Brush:** Suitable for cleaning furniture, curtains, and other fabric surfaces.

5. **Operating Radius:** The 6.2-meter power cord provides an 8.8-meter operating radius, allowing you to clean large areas without frequently changing power outlets.

## 6. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner. Always unplug the appliance before performing any maintenance.

### 6.1. Dust Bag Replacement

The dust bag full indicator on the main unit will illuminate when the dust bag needs to be replaced. The 3-liter capacity ensures fewer changes.

Replacing the dust bag when the indicator signals it is full.

1. Unplug the vacuum cleaner from the power outlet.
2. Open the dust bag compartment cover.
3. Carefully remove the full dust bag by pulling the cardboard collar. The bag's closing system will automatically seal to prevent dust leakage.
4. Dispose of the full dust bag in a waste bin.
5. Insert a new Rowenta Hygiene+ dust bag, ensuring the cardboard collar is fully seated in the bag holder.
6. Close the dust bag compartment cover firmly until it clicks.

### 6.2. Filter Maintenance

Your vacuum cleaner is equipped with a motor protection filter and a high-efficiency exhaust filter (HEPA filter). These filters should be checked and cleaned/replaced regularly.

- **Motor Protection Filter:** This filter is located between the dust bag and the motor. Check it every 3-5 dust bag changes. If it is visibly dirty, tap it gently to remove dust or rinse it under cold water (ensure it is completely dry before reinserting). Replace it if it shows signs of wear.
- **Exhaust Filter (HEPA Filter):** This filter is usually located at the rear of the vacuum cleaner. It should be replaced approximately once a year, or more frequently with heavy use. Refer to your specific model's instructions for exact replacement intervals and filter type. Do not wash HEPA filters unless explicitly stated by the manufacturer.

### 6.3. General Cleaning

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the floor nozzle and other attachments regularly to remove tangled hair, threads, and debris.
- Check the flexible hose for any blockages.

## 7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not start	No power supply; Plug not inserted correctly	Check if the plug is securely in the outlet; Check the power outlet with another appliance.
Reduced suction power	Dust bag full; Filters clogged; Hose/tube/nozzle blocked	Replace the dust bag; Clean or replace filters; Check and clear any blockages in the hose, tube, or nozzle.
Strong suction effect on smooth floors (Ventosa Effect)	High suction power on smooth surfaces	Open the air valve on the handle to reduce suction at the nozzle; Reduce the electronic power setting.
Unusual noise	Blockage in the air path; Motor issue	Check for and remove any blockages. If the noise persists, contact customer support.

If the problem persists after trying these solutions, please contact Rowenta customer support.

## 8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Rowenta
Model Number	RO3927EA
Color	White
Dimensions (L x W x H)	41.4 x 28.1 x 23.3 cm
Weight	3.85 Kilograms
Capacity (Dust Bag)	3 Liters
Power (Max)	900 Watts (as per EU N°666/2013)
Power (Nominal)	750 Watts
Voltage	750 Volts (Operating)
Energy Class	A
Annual Energy Consumption	28 Kilowatt-hours
Noise Level	79 Decibels
Filter Type	HEPA Filter
Surface Recommendation	All surface types
Power Source	Corded Electric
Cord Length	6.2 meters

Feature	Specification
Operating Radius	8.8 meters
Components Included	Vacuum cleaner, Filter, User Manual

## 9. WARRANTY AND SUPPORT

---

Rowenta is committed to providing quality products and support. Your Rowenta Compact Power RO3927EA vacuum cleaner comes with a manufacturer's warranty, details of which can be found in the separate warranty document included with your purchase.

Rowenta commits to making spare parts available for 15 years at a fair price.

**Reparability:** Rowenta is dedicated to ensuring the reparability of its products. Spare parts for the majority of Rowenta products, including this model, are available for 15 years after purchase at a fair price. For technical assistance, spare parts, or warranty claims, please contact Rowenta customer support through their official website or the contact information provided in your product documentation. When contacting support, please have your model number (RO3927EA) and purchase date ready.