

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [D-Link](#) /

› [D-Link DAP-1325 N300 Universal Wireless Repeater User Manual](#)

## D-Link DAP-1325

# D-Link DAP-1325 N300 Universal Wireless Repeater User Manual

Model: DAP-1325

Introduction    Package Contents    Product  
Overview    Setup    Operating    Maintenance    Troubleshooting    Specifications    Warranty & Support

## 1. INTRODUCTION

The D-Link DAP-1325 N300 Wi-Fi Range Extender is designed to expand the coverage of your existing wireless network. This device plugs into a standard wall outlet and extends your Wi-Fi signal to areas with weak or no coverage. It supports wireless speeds up to 300 Mbps and includes a Fast Ethernet port for wired connectivity options.

This manual provides detailed instructions for the installation, configuration, and troubleshooting of your DAP-1325 range extender.

## 2. PACKAGE CONTENTS

Please verify that your package contains the following items:

- D-Link DAP-1325 N300 Wi-Fi Range Extender
- Quick Installation Guide (not included in this digital manual)
- Warranty Card (if applicable)

If any of the above items are missing or damaged, please contact your local D-Link reseller.

## 3. PRODUCT OVERVIEW

The D-Link DAP-1325 features a compact design with external antennas and essential indicators and ports for network extension.

### 3.1 Front View





D-Link



**Figure 3.1:** Front view of the D-Link DAP-1325. This image shows the device from the front, highlighting the D-Link logo and the status indicator lights at the top, which provide information about the device's operational status and signal strength.

- **D-Link Logo:** Indicates the brand.
- **Status LEDs:** Provide visual feedback on power, Wi-Fi signal strength, and connection status.

### 3.2 Side View



**Figure 3.2:** Side view of the D-Link DAP-1325. This image displays the side profile of the device, showing the ventilation grilles for heat dissipation and the integrated power plug designed for direct wall outlet connection.

- **Ventilation Grilles:** Ensure proper airflow to prevent overheating.
- **Power Plug:** Integrated plug for direct connection to an electrical outlet.

### 3.3 Bottom View (Ethernet Port)



**Figure 3.3:** Bottom view of the D-Link DAP-1325. This image focuses on the bottom of the device, clearly showing the 10/100Mbps Fast Ethernet (LAN) port, which can be used for wired connections or to configure the device as an access point.

- **Ethernet (LAN) Port:** A 10/100Mbps port for connecting wired devices or for configuring the extender as an access point.

### 3.4 Back View (WPS Button and Reset)



**Figure 3.4:** Back view of the D-Link DAP-1325. This image shows the rear of the device, featuring the WPS (Wi-Fi Protected Setup) button for quick, secure connections, and a small reset pinhole for restoring factory default settings.

- **WPS Button:** Used for quick and secure setup with a compatible router.
- **Reset Button:** A small pinhole button to restore the device to factory default settings. Use a paperclip to press and hold for 5-10 seconds.

## 4. SETUP

---

The D-Link DAP-1325 can be set up using two primary methods: Wi-Fi Protected Setup (WPS) for quick configuration or a web browser for manual setup.

### 4.1 Placement Recommendations

- Plug the extender into an electrical outlet that is roughly halfway between your router and the area where you need improved Wi-Fi coverage.
- Avoid placing the extender near large metal objects, concrete walls, or devices that emit radio frequency interference (e.g., microwave ovens, cordless phones).
- Ensure the status LED on the extender indicates a good signal strength after setup.

### 4.2 WPS (Wi-Fi Protected Setup) Method

This is the quickest way to set up your range extender if your router supports WPS.

1. Plug the DAP-1325 into a power outlet near your wireless router.
2. Wait for the Power LED on the DAP-1325 to turn solid green.
3. Press the WPS button on your wireless router.
4. Within two minutes, press the WPS button on the DAP-1325 (refer to Figure 3.4).
5. The Wi-Fi Status LED on the DAP-1325 will blink during the connection process and then turn solid green when successfully connected.
6. Unplug the DAP-1325 and move it to a location between your router and the area with poor Wi-Fi coverage. Plug it into a power outlet.
7. Wait for the Wi-Fi Status LED to turn solid green, indicating a good connection to your router. If the LED is

amber or red, move the extender closer to your router.

## 4.3 Web Browser Setup Method

Use this method if your router does not have a WPS button or if you prefer manual configuration.

1. Plug the DAP-1325 into a power outlet.
2. On a computer or mobile device, connect to the DAP-1325's default Wi-Fi network. The network name (SSID) and password can usually be found on a label on the device itself or in the Quick Installation Guide. It will typically be something like "dlink-XXXX".
3. Open a web browser and enter the default IP address or hostname for the DAP-1325 (e.g. <http://dlinkap.local/> or <http://192.168.0.50>).
4. Follow the on-screen instructions of the setup wizard. You will be prompted to select your existing Wi-Fi network and enter its password.
5. Once configured, the DAP-1325 will restart. The Wi-Fi Status LED will indicate a successful connection.
6. Unplug the DAP-1325 and move it to your desired location. Plug it into a power outlet.
7. Verify the Wi-Fi Status LED is solid green.

## 5. OPERATING THE RANGE EXTENDER

---

Once configured, the DAP-1325 operates automatically to extend your wireless network. Devices connected to the extended network will experience improved signal strength and coverage.

### 5.1 Connecting Wireless Devices

Your wireless devices (smartphones, tablets, laptops) will automatically connect to the strongest available Wi-Fi signal, whether it's from your main router or the DAP-1325. The extended network will typically have the same name (SSID) as your main network, with "\_EXT" appended (e.g., "MyHomeNetwork\_EXT"). Use your existing Wi-Fi password to connect.

### 5.2 Using the Ethernet Port

The 10/100Mbps Fast Ethernet port (refer to Figure 3.3) on the DAP-1325 can be used for two main purposes:

- **Wired Device Connection:** Connect a wired device (e.g., smart TV, gaming console, desktop computer) to the extender using an Ethernet cable. This provides network access to devices without Wi-Fi capabilities or for a more stable connection.
- **Access Point Mode:** If you have a wired internet connection available in an area without Wi-Fi, you can connect the DAP-1325 to the wired network via its Ethernet port and configure it to create a new Wi-Fi hotspot. This mode is typically configured through the web browser setup interface.

## 6. MAINTENANCE

---

To ensure optimal performance and longevity of your D-Link DAP-1325, consider the following maintenance tips:

- **Keep Clean:** Periodically wipe the device with a soft, dry cloth. Avoid using liquid cleaners or aerosols.
- **Ventilation:** Ensure the ventilation grilles are not obstructed to prevent overheating.
- **Firmware Updates:** Check the official D-Link support website for firmware updates. Keeping the firmware updated can improve performance, add features, and enhance security.
- **Power Cycle:** If you experience intermittent issues, try unplugging the extender from the power outlet for 10 seconds and then plugging it back in.

## 7. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your D-Link DAP-1325.

### 7.1 No Internet Access After Connecting to Extender

- **Check Router Connection:** Ensure your main router has an active internet connection.
- **Extender Placement:** The extender might be too far from your main router. Relocate it closer and check the Wi-Fi Status LED for a solid green indication.
- **Reconfigure:** Try re-running the setup process (WPS or web browser) to ensure the extender is properly connected to your main Wi-Fi network.

### 7.2 Wi-Fi Status LED is Red or Amber

- **Red LED:** Indicates no connection to the main router or a very poor signal. Move the extender closer to your main router.
- **Amber LED:** Indicates a weak signal from the main router. While functional, performance may be limited. Consider moving the extender closer to your main router for optimal performance.
- **Re-establish Connection:** If the LED remains red, try pressing the WPS button on both the router and extender again, or reconfigure via the web interface.

### 7.3 Cannot Access Web-Based Setup Interface

- **Connect to Extender's Wi-Fi:** Ensure your computer or mobile device is connected to the DAP-1325's default Wi-Fi network (e.g., "dlink-XXXX") or directly via an Ethernet cable.
- **Correct Address:** Verify you are using the correct address (e.g., <http://dlinkap.local/> or <http://192.168.0.50>).
- **Clear Browser Cache:** Sometimes browser cache can interfere. Try clearing your browser's cache or using a different browser.
- **Reset Device:** As a last resort, perform a factory reset by pressing and holding the reset button for 5-10 seconds with a paperclip. This will erase all configurations, and you will need to set up the device again.

## 8. SPECIFICATIONS

---

Feature	Description
<b>Model Number</b>	DAP-1325/E
<b>Wireless Standard</b>	802.11g/n
<b>Data Transfer Rate</b>	Up to 300 Mbps
<b>Frequency Band</b>	Single-band (2.4 GHz)
<b>Ethernet Port</b>	1 x 10/100Mbps Fast Ethernet (RJ45)
<b>Antennas</b>	2 External Antennas
<b>Security</b>	WPA/WPA2, WPS
<b>Dimensions (WxDxH)</b>	6.1 x 7.5 x 3.3 cm (approximate, based on product data)
<b>Color</b>	White
<b>Compatible Devices</b>	Routers, Wireless Access Points

## 9. WARRANTY AND TECHNICAL SUPPORT

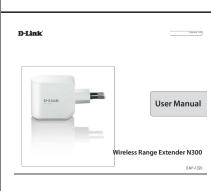
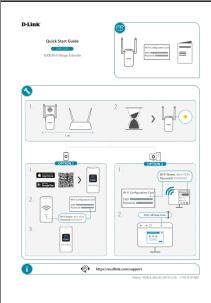
For warranty information, please refer to the warranty card included with your product or visit the official D-Link website for details specific to your region.

For technical support, product documentation, and firmware updates, please visit the D-Link support portal:

- **D-Link Support Website:** <https://www.dlink.com/support>
- **Online Resources:** The website provides FAQs, troubleshooting guides, and contact information for technical assistance.

Please have your product model number (DAP-1325) and serial number ready when contacting support.

### Related Documents - DAP-1325

	<p><a href="#">D-Link DAP-1325 N300 Wi-Fi Range Extender Quick Installation Guide</a></p> <p>A quick installation guide for the D-Link DAP-1325 N300 Wi-Fi Range Extender, detailing setup procedures using WPS, the QRS Mobile App, and web browsers, along with troubleshooting tips and technical support information.</p>
	<p><a href="#">D-Link DAP-1330 N300 Wi-Fi Range Extender: Extend Your Wireless Network</a></p> <p>Learn about the D-Link DAP-1330 N300 Wi-Fi Range Extender, featuring speeds up to 300Mbps, easy setup, and enhanced wireless coverage for your home. Includes technical specifications and features.</p>
	<p><a href="#">D-Link DAP-1320 Wireless Range Extender N300 User Manual</a></p> <p>User manual for the D-Link DAP-1320 Wireless Range Extender N300, detailing setup, configuration, features, and troubleshooting for extending wireless network coverage.</p>
	<p><a href="#">D-Link DAP-1325 N300 Wi-Fi Range Extender Quick Start Guide</a></p> <p>A quick start guide for setting up the D-Link DAP-1325 N300 Wi-Fi Range Extender, including two setup options.</p>

 <p>How to  </p> <p>PDF, 40 pagine (4,1 MB)   <a href="#">Scarica</a></p> <p>D-Link</p>	<p><a href="#">D-Link Range Extender Setup Guide via QRS Mobile</a></p> <p>Step-by-step guide to configure D-Link Range Extenders (DAP-1330, DAP-1620, DAP-1720, DAP-1860, DAP-1325) using the QRS Mobile application. Learn how to connect, set up Wi-Fi, and secure your device.</p>
 <p>D-Link Dual Band Range Extender AC750 Wireless DAP-1520</p>	<p><a href="#">Manuale Utente D-Link DAP-1520 Dual Band Range Extender AC750 Wireless</a></p> <p>Guida utente per il D-Link DAP-1520 Dual Band Range Extender AC750 Wireless, che copre il contenuto della confezione, introduzione, configurazione tramite WPS, app mobile QRS e browser web, e risoluzione dei problemi.</p>