

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY AA59-00508A Replacement Remote Control User Manual for Samsung LCD LED HDTV

ECONTROLLY AA59-00508A

ECONTROLLY AA59-00508A Replacement Remote Control User Manual

This manual provides instructions for the setup, operation, and maintenance of your ECONTROLLY AA59-00508A replacement remote control, compatible with various Samsung LCD LED HDTV models.

1. INTRODUCTION

Thank you for choosing the ECONTROLLY AA59-00508A replacement remote control. This remote is designed to function as a direct replacement for the original Samsung AA59-00508A remote, offering seamless compatibility with a range of Samsung LCD LED HDTV models. No programming is required; simply insert batteries, and the remote is ready for use.

Compatible Samsung TV Models:

- UE32D5520, UE32D5500RW, UE32D5500
- UE37D5520, UE37D5500
- UE40D5520, UE40D5500
- UE46D5500, UE46D5520
- UE55D5520

2. SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA batteries for operation. Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two new AAA batteries, matching the (+) and (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, illustrating the correct placement of AAA batteries.

Once batteries are installed, the remote is ready for immediate use with your compatible Samsung TV. No additional pairing or programming steps are necessary.

3. OPERATING INSTRUCTIONS

Point the remote control directly at the TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.





Image: Front view of the ECONTROLLY AA59-00508A remote control, displaying the layout of all functional buttons.

3.1. Basic Functions

- **POWER (Red Button):** Turns the TV on or off.
- **SOURCE:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **Number Pad (0-9):** Directly selects TV channels or enters numerical values.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes TV channels sequentially.
- **MUTE:** Mutes or unmutes the TV audio.

3.2. Navigation and Menu Functions

- **MENU:** Opens the TV's main menu.
- **HUB / SMART:** Accesses the Smart Hub or Smart TV features.
- **GUIDE:** Displays the electronic program guide (EPG).
- **INFO:** Shows information about the current program or input.
- **TOOLS:** Provides quick access to common TV functions and settings.
- **Directional Pad (Up, Down, Left, Right) & ENTER (Center Button):** Navigates through menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.

3.3. Special Functions

- **TTX/MIX:** Teletext functions.
- **PRE-CH:** Returns to the previously viewed channel.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain TV menus or applications, as indicated on-screen.
- **P.MODE (Picture Mode):** Cycles through picture modes (e.g., Standard, Dynamic, Movie).
- **SRS (Sound Retrieval System):** Activates or deactivates SRS sound enhancement.
- **DUAL-II:** For dual audio or multi-language broadcasts.
- **E-MANUAL:** Accesses the TV's electronic manual.
- **P.SIZE (Picture Size):** Adjusts the aspect ratio or picture size.
- **AD/SUBT. (Audio Description/Subtitles):** Toggles audio description or subtitle options.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record):** Controls media playback on connected devices or TV's media player.

4. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Keep the remote away from direct sunlight, heat sources, and moisture.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	◦ Dead or incorrectly inserted batteries. ◦ Obstruction between remote and TV. ◦ Remote control sensor on TV is blocked. ◦ Remote control is faulty.	◦ Replace batteries with new AAA batteries, ensuring correct polarity. ◦ Remove any objects blocking the line of sight between the remote and the TV. ◦ Ensure the TV's remote sensor is not covered. ◦ If issues persist after trying the above, the remote may be faulty.
Buttons are unresponsive or delayed.	◦ Low battery power. ◦ Infrared signal interference.	◦ Replace batteries. ◦ Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.

6. SPECIFICATIONS

- **Model:** AA59-00508A
- **Brand:** ECONTROLLY
- **Compatible Devices:** Samsung LCD LED HDTVs (Specific models listed in Introduction)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 7 x 2 x 0.65 inches (approximately)
- **Item Weight:** 1 ounce (approximately, without batteries)
- **Special Feature:** Ergonomic design

7. WARRANTY AND SUPPORT

This ECONTROLLY replacement remote control is designed for reliable performance. For any issues or support inquiries, please refer to the seller's return policy or contact the manufacturer directly through their official channels. Please retain your proof of purchase for any warranty claims.

For further assistance, you may visit the ECONTROLLY brand page on Amazon: [ECONTROLLY Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B06XCGRGKG>

More documents and user manuals: **<https://manuals.plus/>**