

RCA RCA Voyager

RCA Voyager Pro 7-inch Tablet with Keyboard Case User Manual

Model: RCA Voyager

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your RCA Voyager Pro 7-inch Tablet with Keyboard Case. Please read this manual thoroughly before operating your device to ensure optimal performance and longevity.

The RCA Voyager Pro is a 7-inch touchscreen tablet featuring a 1.2GHz Quad-Core processor, 1GB RAM, and 16GB of internal storage. It operates on Android 6.0 Marshmallow and includes Wi-Fi and Bluetooth connectivity. The tablet comes with a detachable keyboard case for enhanced productivity.



Figure 1.1: RCA Voyager Pro 7-inch Tablet with Keyboard Case

2. PACKAGE CONTENTS

Verify that all items are present in your product package:

- RCA Voyager Pro 7-inch Tablet
- Detachable Keyboard Case
- Power Adapter
- USB Cable
- Quick Start Guide (if included)

3. PRODUCT OVERVIEW

3.1 Tablet Components

Familiarize yourself with the various ports and buttons on your tablet.



Figure 3.1: RCA Voyager Pro Tablet (Front View)

- **Front Camera:** For video calls and selfies.
- **Power Button:** Press and hold to turn on/off, short press to sleep/wake.
- **Volume Buttons:** Adjust audio volume.
- **Micro USB Port:** For charging and data transfer.
- **Headphone Jack:** For connecting audio devices.
- **MicroSD Card Slot:** For expandable storage.

3.2 Keyboard Case

The included keyboard case provides physical keys for typing and protects your tablet.



Figure 3.2: Detachable Keyboard Case

4. SETUP

4.1 Charging the Tablet

Before first use, fully charge the tablet. Connect the power adapter to the tablet's Micro USB port and plug it into a power outlet. The battery indicator on the screen will show charging status.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the RCA logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select 'Power off'.
- **Sleep/Wake:** Briefly press the Power button to put the tablet to sleep or wake it up.

4.3 Initial Configuration

Upon first power-on, follow the on-screen prompts to set up your tablet:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google Account or create a new one.
4. Review and accept the terms and conditions.

4.4 Attaching the Keyboard Case

To attach the tablet to the keyboard case:



Figure 4.1: Keyboard Case Attachment Steps

1. Open the keyboard case.
2. Align the tablet with the clips in the case.
3. Gently push the tablet into the clips until it is securely seated.
4. Ensure the tablet's charging port aligns with the case's connector for keyboard functionality.

5. OPERATING YOUR TABLET

5.1 Touchscreen Navigation

The tablet's 7-inch touchscreen supports various gestures:

- **Tap:** Select an item or open an application.
- **Touch and Hold:** Access contextual menus or move items.
- **Swipe:** Scroll through lists or switch between screens.
- **Pinch:** Zoom in or out on images and web pages.

5.2 Wi-Fi Connection

To connect to a wireless network:

1. Go to **Settings > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

5.3 Bluetooth Pairing

To pair with a Bluetooth device:

1. Go to **Settings > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the 'Available devices' list and follow any on-screen instructions.

5.4 Using the Keyboard

Once the tablet is securely attached to the keyboard case, the physical keyboard will function automatically for text input. Special function keys may be available for shortcuts (e.g., volume control, screen brightness).

5.5 App Management

Applications can be downloaded from the Google Play Store. To install an app, open the Play Store, search for the app, and tap 'Install'. To uninstall, go to **Settings > Apps**, select the app, and tap 'Uninstall'.

5.6 Storage Management

The tablet has 16GB of internal storage. You can expand storage by inserting a microSD card into the dedicated slot. To manage files, use the pre-installed 'Files' app or download a file manager from the Play Store.

6. MAINTENANCE

6.1 Cleaning

Use a soft, lint-free cloth to clean the screen and tablet body. Do not use liquid cleaners or abrasive materials, as they may damage the device.

6.2 Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Charge the battery regularly; avoid letting it fully discharge frequently.
- Use only the provided power adapter or a compatible charger.

6.3 Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security enhancements. Go to **Settings > About tablet > System updates**.

7. TROUBLESHOOTING

If you encounter issues with your RCA Voyager Pro tablet, refer to the following common solutions:

Problem	Solution
Tablet does not power on	Ensure the tablet is charged. Connect the power adapter and wait a few minutes before attempting to power on again. If unresponsive, press and hold the power button for 10-15 seconds to force a restart.
Wi-Fi connection issues	Check if Wi-Fi is enabled in Settings. Restart your Wi-Fi router. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance	Close unused applications. Clear cache for frequently used apps (Settings > Apps > [App Name] > Storage > Clear cache). Consider uninstalling unnecessary apps or moving media files to a microSD card. Restart the tablet.
Keyboard not responding	Ensure the tablet is correctly seated in the keyboard case and the connection is secure. Restart the tablet.
Apps crashing or freezing	Clear the app's cache and data (Settings > Apps > [App Name] > Storage). Uninstall and reinstall the app. Ensure the tablet's software is up to date.

8. SPECIFICATIONS

Key technical specifications for the RCA Voyager Pro 7-inch Tablet:

Feature	Specification
Model Name	RCA Voyager
Screen Size	7 Inches
Screen Resolution	1024 x 600
Processor	1.2 GHz Quad-Core
RAM	1 GB DDR_SDRAM
Internal Storage	16 GB
Operating System	Android 6 Marshmallow
Wireless Type	802.11ac Wi-Fi, Bluetooth
USB Ports	1 (USB 2.0)
Item Weight	1.1 pounds
Product Dimensions	7.3 x 4.9 x 0.45 inches
Battery	1 Lithium Ion battery (included)

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official RCA support website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question