

## Alemite 3732-RW6

# Alemite Oil Mist Generator Model 3732-RW6 User Manual

Model: 3732-RW6

## 1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of the Alemite Oil Mist Generator Model 3732-RW6. Please read this manual thoroughly before operating the equipment to ensure proper usage and to prevent potential hazards.

The Alemite Oil Mist Generator is designed to deliver a continuous supply of atomized oil particles for lubrication systems, enhancing the lifespan and performance of machinery components.

## 2. SAFETY INFORMATION

**WARNING:** Failure to follow these safety instructions could result in serious injury or equipment damage.

- Always wear appropriate personal protective equipment (PPE) when installing, operating, or maintaining the generator.
- Ensure the unit is properly grounded to prevent electrical shock.
- Do not operate the generator in explosive atmospheres or near flammable materials.
- Disconnect power before performing any maintenance or service.
- Use only lubricants recommended by Alemite for optimal performance and safety.
- Keep children and unauthorized personnel away from the operating equipment.

## 3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking. If any items are missing or damaged, contact your supplier immediately.

- Alemite Oil Mist Generator (Model 3732-RW6)
- User Manual (this document)
- Mounting hardware (if applicable)
- Connection fittings (if applicable)

## 4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and effective operation of the oil mist generator.

#### 4.1 Unpacking

Carefully remove the generator from its packaging. Inspect for any visible damage that may have occurred during transit.

#### 4.2 Mounting

Mount the generator on a stable, level surface capable of supporting its weight. Ensure adequate clearance for ventilation and access to controls and connections.

#### 4.3 Electrical Connection

Connect the generator to a power source according to local electrical codes and the specifications listed on the unit's nameplate. Ensure proper grounding.

#### 4.4 Air and Oil Connections

Connect the compressed air supply to the designated inlet. Connect the oil supply line from the reservoir to the oil inlet. Ensure all connections are secure and leak-free.



**Figure 1:** Front view of the Alemite Oil Mist Generator Model 3732-RW6, showing gauges and connections. This image illustrates the general appearance and layout of the unit, including the main housing and the mist generation component.

## 5. OPERATION

Follow these steps for safe and effective operation of your Alemite Oil Mist Generator.

### 5.1 Pre-Operation Checks

1. Verify oil reservoir is filled to the appropriate level with the recommended lubricant.
2. Ensure all connections (electrical, air, oil) are secure.
3. Check that all safety guards and covers are in place.

### 5.2 Starting the Generator

1. Turn on the main power switch.
2. Open the compressed air supply valve to the generator.
3. Adjust the air pressure regulator to the desired operating pressure as indicated by the pressure gauge.
4. Monitor the oil flow and mist output to ensure proper function.

### 5.3 Shutting Down

1. Close the compressed air supply valve.
2. Turn off the main power switch.
3. Allow the system to depressurize completely before any further interaction.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and reliable performance of your Alemite Oil Mist Generator.

### 6.1 Daily Checks

- Check oil level and refill as necessary.
- Inspect for any visible leaks in air or oil lines.
- Verify proper mist output.

### 6.2 Weekly/Monthly Checks

- Clean exterior surfaces of the generator.
- Inspect air filters and replace if clogged or damaged.
- Check electrical connections for tightness.

### 6.3 Annual Maintenance

- Perform a thorough inspection of all internal components.
- Replace worn seals or gaskets.
- Calibrate gauges if necessary.

## 7. TROUBLESHOOTING

This section provides solutions to common issues encountered during the operation of the Alemite Oil Mist Generator.

Problem	Possible Cause	Solution
No mist output	Low oil level, no air supply, clogged nozzle	Refill oil, check air compressor, clean/replace nozzle
Low mist output	Low air pressure, incorrect oil viscosity	Adjust air pressure, use recommended oil
Oil leakage	Loose connections, damaged seals	Tighten fittings, replace seals
Generator not powering on	No electrical supply, faulty power switch	Check power source, contact service for switch replacement

## 8. SPECIFICATIONS

- **Model:** 3732-RW6
- **Brand:** Alemite
- **ASIN:** B06XCT29BZ
- **Measurement System:** Inch
- **Item Package Quantity:** 1
- **Date First Available:** July 29, 2024
- *Note: Additional specifications may be found on the product label or by contacting Alemite directly.*

## 9. WARRANTY AND SUPPORT

---

Alemite products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your product or visit the official Alemite website. You may also contact your authorized Alemite distributor.

**Alemite Official Website:** [www.alemite.com](http://www.alemite.com)

---

© 2024 Alemite. All rights reserved.  
This manual is subject to change without notice.