

[manuals.plus](#) /› [Amazon](#) /› [Amazon Kindle Oasis E-reader \(9th Generation\) User Manual](#)

## Amazon Kindle Oasis E-reader (9th Generation) B06XCWLL12

# Amazon Kindle Oasis E-reader (9th Generation) User Manual

Model: B06XCWLL12

[Introduction](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## 1. INTRODUCTION

This manual provides instructions for the Amazon Kindle Oasis E-reader (9th Generation). The Kindle Oasis is designed for an optimal reading experience, featuring a 7-inch high-resolution display, waterproof design, and integrated Audible support.

# kindle oasis

Wherever your story takes you



Image 1.1: The Kindle Oasis E-reader, designed for reading anywhere your story takes you.

Key features of your Kindle Oasis include:

- **7-inch High-Resolution Display:** A 300 ppi glare-free screen that reads like real paper, even in bright sunlight.
- **Waterproof (IPX8):** Allows reading in various environments, including baths or pools.
- **Built-in Audible:** Listen to audiobooks by pairing with Bluetooth headphones or speakers.
- **Ergonomic Design:** Thin and light with dedicated page turn buttons and an adaptive front light for comfortable reading.
- **Long Battery Life:** A single charge can last for weeks.
- **Storage:** Available with 32 GB for extensive libraries of books and audiobooks.

# Our first waterproof Kindle

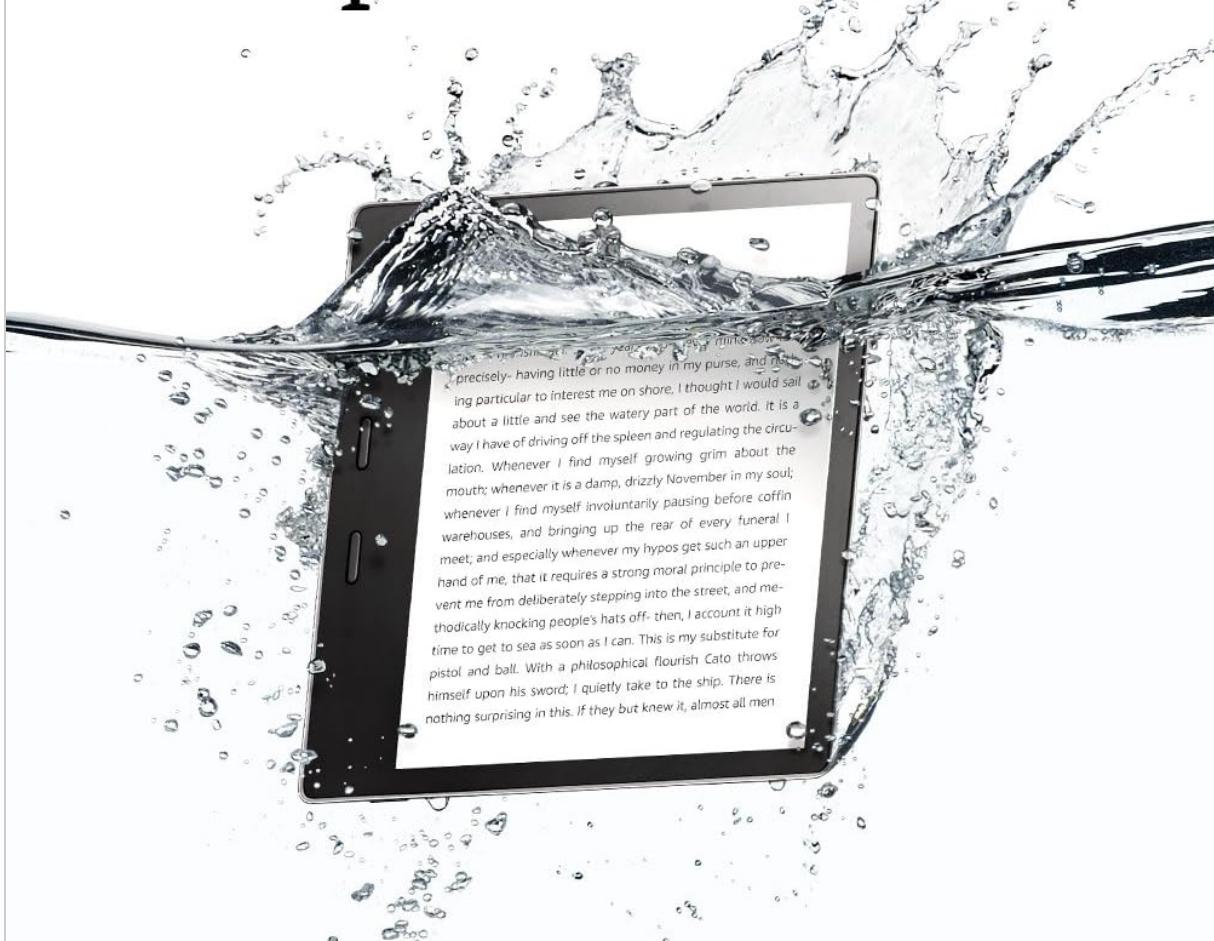


Image 1.2: Enjoying the Kindle Oasis E-reader in a relaxed setting, showcasing its portability.

## 2. SETUP

### 2.1 Unboxing Your Kindle Oasis

Upon opening the package, ensure you have the Kindle Oasis device and a USB charging cable. Inspect the device for any physical damage.

### 2.2 Charging the Device

Before first use, fully charge your Kindle Oasis. Connect the small end of the USB cable to the charging port on your Kindle and the larger end to a USB wall adapter (not included) or a computer's USB port.

- The charging indicator light will illuminate when charging.
- A full charge typically takes a few hours.

### 2.3 Powering On/Off

- **To Power On:** Press and hold the power button (located on the top edge) for a few seconds until the screen activates.
- **To Power Off:** Press and hold the power button until a power dialog appears, then select 'Power Off'. Alternatively, a short press will put the device to sleep.

## 2.4 Initial Setup

When you power on your Kindle Oasis for the first time, you will be guided through a setup process:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password. A stable internet connection is required for registration and content downloads.
3. **Registration:** Register your Kindle to your Amazon account. You can use an existing account or create a new one. This links your device to your content library.
4. **Tutorial:** Follow the on-screen tutorial to familiarize yourself with basic navigation and features.

## 3. OPERATING YOUR KINDLE OASIS

---

### 3.1 Navigation

- **Touchscreen:** Tap to open books, navigate menus, and interact with on-screen elements.
- **Page Turn Buttons:** Use the physical buttons on the side to turn pages forward or backward. The orientation of these buttons can be customized in settings.
- **Home Screen:** Access your library, recommended reads, and settings from the home screen.

### 3.2 Reading Books

1. From the Home screen, tap on a book cover to open it.
2. Tap the right side of the screen or press the forward page button to turn to the next page.
3. Tap the left side of the screen or press the backward page button to turn to the previous page.
4. Tap the top of the screen to access reading options, including font size, line spacing, and dictionary.

### 3.3 Audible Integration

Your Kindle Oasis supports Audible audiobooks. To listen:

1. Ensure your Kindle is connected to Wi-Fi.
2. Go to the Audible section of your library.
3. Pair a Bluetooth audio device (headphones or speaker) with your Kindle via the settings menu.
4. Select an audiobook to download and play.

# Unlike tablets, Kindle is glare-free

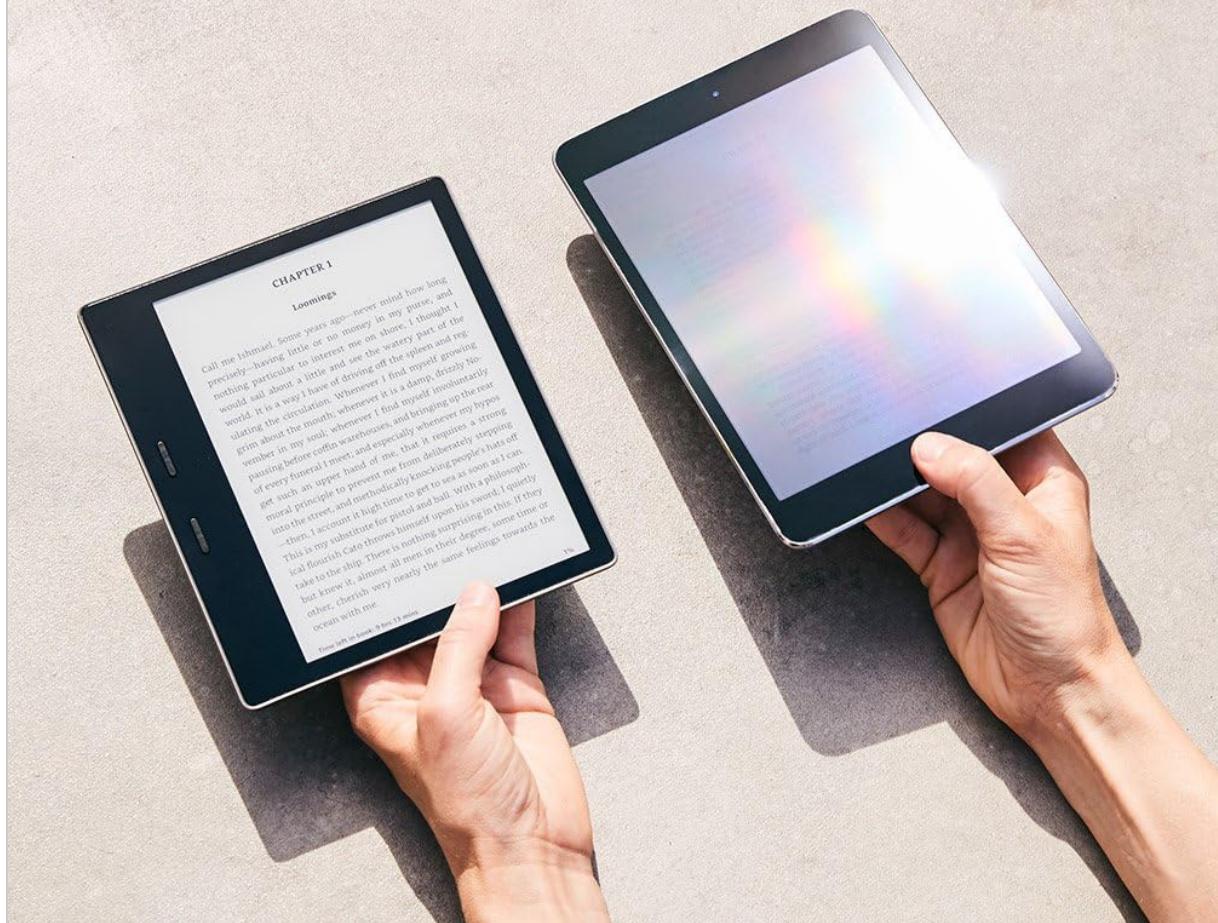


Image 3.1: The Kindle Oasis supports Audible, allowing users to listen to audiobooks via Bluetooth.

## 3.4 Waterproofing (IPX8)

The Kindle Oasis is rated IPX8, meaning it is protected against immersion in up to two meters of fresh water for up to 60 minutes. This allows for reading in various wet environments.



Image 3.2: The Kindle Oasis is waterproof, making it suitable for reading near water.

### 3.5 Adaptive Front Light

The adaptive front light automatically adjusts the screen brightness based on your environment, providing optimal illumination for reading in various lighting conditions. This feature can be manually adjusted or turned off in the settings.

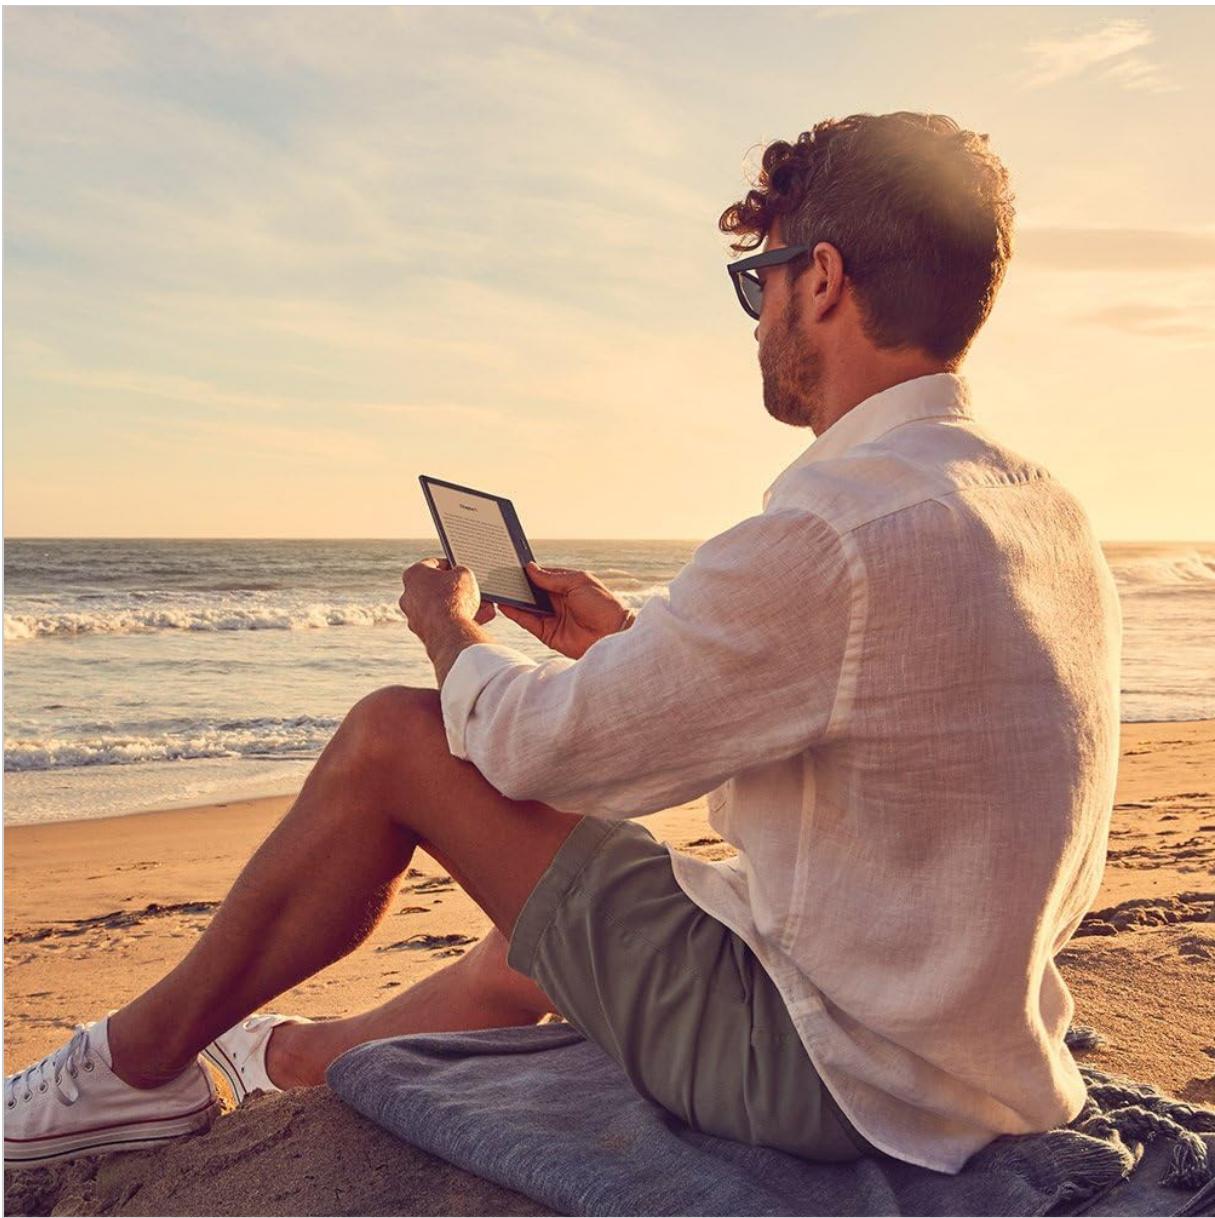


Image 3.3: The Kindle Oasis features a glare-free display, unlike typical tablets, for comfortable reading in bright light.

## 4. MAINTENANCE

---

### 4.1 Cleaning Your Kindle Oasis

To clean your device, use a soft, lint-free cloth. If necessary, slightly dampen the cloth with water. Avoid using abrasive cleaners, solvents, or aerosol sprays.

### 4.2 After Water Exposure

If your Kindle Oasis has been exposed to water, gently wipe it dry with a soft cloth. Do not attempt to charge the device if the charging port is wet. Allow it to air dry completely before charging or connecting any accessories.

### 4.3 Battery Care

- For optimal battery life, avoid exposing your Kindle to extreme temperatures.
- Charge the device regularly, but it is not necessary to fully discharge it before recharging.
- If storing the device for an extended period, ensure it has at least a 50% charge.

## 5. TROUBLESHOOTING

---

### 5.1 Device Not Responding

If your Kindle Oasis becomes unresponsive, try a forced restart:

- Press and hold the power button for 40 seconds.
- Release the button. The device should restart automatically.

### 5.2 Wi-Fi Connection Issues

- Ensure your Wi-Fi router is on and working correctly.
- Check that you have entered the correct Wi-Fi password.
- Try restarting your Kindle Oasis and your Wi-Fi router.
- If the issue persists, try connecting to a different Wi-Fi network to rule out network-specific problems.

### 5.3 Charging Problems

- Verify that the USB cable is securely connected to both the Kindle and the power source.
- Try using a different USB cable or power adapter.
- Ensure the charging port is clean and free of debris.

### 5.4 Screen Issues

If the screen appears frozen or displays unusual patterns, perform a forced restart as described in section 5.1. If the problem continues, contact Amazon Customer Service.

## 6. SPECIFICATIONS

---

<b>Model Name</b>	Kindle Oasis E-reader (9th Generation)
<b>Model Number</b>	B06XCWLL12
<b>Display</b>	7-inch E-ink, 300 ppi, glare-free
<b>Storage</b>	32 GB
<b>Connectivity</b>	Wi-Fi, Bluetooth
<b>Waterproofing</b>	IPX8 (up to 2 meters in fresh water for 60 minutes)
<b>Battery Life</b>	Weeks on a single charge (varies with usage)
<b>Audio Support</b>	Audible via Bluetooth
<b>Available Colors</b>	Graphite, Champagne Gold

# Now available in Graphite or Champagne Gold



Image 6.1: The Kindle Oasis E-reader is available in Graphite and Champagne Gold finishes.

## 7. WARRANTY & SUPPORT

### 7.1 Product Warranty

Your Kindle Oasis E-reader is covered by a limited warranty provided by Amazon. Details of the warranty, including its duration and terms, are typically available on the Amazon website or included with your purchase documentation. Please refer to these resources for specific warranty information.

### 7.2 Customer Support

For technical assistance, warranty claims, or any other inquiries regarding your Kindle Oasis, please contact Amazon Customer Service. Support options typically include:

- **Online Help:** Visit the official Amazon Support website [amazon.com/devicesupport](https://amazon.com/devicesupport).

- **Phone Support:** Contact numbers are available on the Amazon Support website.
- **Chat Support:** Live chat options may be available through the Amazon Support portal.

When contacting support, have your device's serial number (found in Settings > Device Options > Device Info) and proof of purchase readily available.