

[Manuals.plus](#) /

› [Swiss Peak](#) /

› Swiss Peak P330.201 Sport Camera User Manual

Swiss Peak P330.201

Swiss Peak P330.201 Sport Camera

USER MANUAL

1. Introduction

Thank you for choosing the Swiss Peak P330.201 HD Sport Camera. This high-quality action camera is designed for capturing your adventures in 1280 x 720p resolution with a wide 120-degree angle. It is perfect for outdoor filming and photography. This manual provides essential information on setting up, operating, and maintaining your camera to ensure optimal performance.

2. Package Contents

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- Swiss Peak P330.201 HD Sport Camera (with waterproof case)
- Foldable ABS Selfie Stick
- USB Charging Cable
- Various Mounts and Adapters (11 accessories in total)
- Carrying Case



Image: All included accessories for the Swiss Peak P330.201 Sport Camera, including the camera in its waterproof housing, selfie stick, various mounts, and charging cable.



Image: The Swiss Peak P330.201 Sport Camera and some of its accessories neatly organized within the open carrying case.

3. Product Overview

Familiarize yourself with the main components of your Swiss Peak P330.201 Sport Camera.





Image: Front view of the Swiss Peak P330.201 Sport Camera, enclosed in its transparent waterproof housing, showing the lens and mounting bracket.



Image: Rear view of the Swiss Peak P330.201 Sport Camera, showing the display screen visible through the back of the waterproof case.



Image: Side view of the Swiss Peak P330.201 Sport Camera in its waterproof case, highlighting the control buttons on the top and side.

4. Setup

4.1 Charging the Battery

The camera is equipped with a 650mAh Lithium-polymer battery. Before first use, fully charge the camera. A full charge provides approximately 60 minutes of usage.

1. Connect the supplied USB charging cable to the camera's charging port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. It will turn off or change color once charging is complete.



Image: The Swiss Peak P330.201 Sport Camera connected via USB cable to a laptop, illustrating the charging process.

4.2 Inserting a Micro SD Card

A Micro SD card (not included) is required to store photos and videos. The camera supports memory expansion up to 32GB.

1. Open the Micro SD card slot cover on the camera.
2. Insert the Micro SD card with the gold contacts facing down until it clicks into place.
3. To remove, gently push the card in until it springs out.

4.3 Attaching the Selfie Stick

The included foldable selfie stick allows for versatile filming and photography angles.

1. Attach the camera's waterproof case to the mounting screw on the selfie stick.
2. Securely tighten the screw to prevent movement.

3. Extend the selfie stick to your desired length.





Image: The Swiss Peak P330.201 Sport Camera securely mounted on the foldable selfie stick, ready for use.

5. Operating Instructions

5.1 Power On/Off

- To power on: Press and hold the Power button (usually located on the front or top) for a few seconds until the screen illuminates.
- To power off: Press and hold the Power button again until the screen turns off.

5.2 Recording Video

The camera records video at 1280 x 720p resolution with a 120-degree wide angle.

1. Ensure the camera is in video recording mode (check the icon on the screen). If not, press the Mode button to switch.
2. Press the OK/Record button to start recording. A red indicator light or on-screen icon will flash.
3. Press the OK/Record button again to stop recording. The indicator will stop flashing.

5.3 Taking Photos

The camera captures still images at an effective fixed resolution of 12 Megapixels.

1. Ensure the camera is in photo mode (check the icon on the screen). If not, press the Mode button to switch.
2. Press the OK/Shutter button to take a photo. The screen may briefly flash.

5.4 Playback

To review your recorded videos and photos:

1. Switch the camera to playback mode using the Mode button.
2. Use the navigation buttons (Up/Down) to browse through your files.
3. Press the OK button to play a video or view a photo in full screen.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Do not use harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. When storing for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.
- **Waterproof Case:** Regularly inspect the waterproof case for any cracks or damage to the seals before use in water. Clean the seals and ensure no debris is present.

7. Troubleshooting

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted.	Charge the battery fully.
Cannot record video/take photos.	No Micro SD card inserted or card is full/corrupted.	Insert a Micro SD card. Delete old files or format the card (backup important data first). Try a different card.
Video quality is poor.	Lens is dirty. Insufficient lighting.	Clean the lens. Ensure adequate lighting conditions.
Camera freezes or becomes unresponsive.	Software glitch.	Press and hold the Power button for 10 seconds to force a shutdown. Restart the camera.

8. Specifications

Feature	Detail
Brand	Swiss Peak
Model Number	P330.201
Color	Black
Video Resolution	1280 x 720p
Viewing Angle	120 degrees
Effective Fixed Resolution	12 Megapixels
Screen Size	1 inch
Battery Type	Lithium-polymer
Battery Capacity	650mAh
Approx. Usage Time	60 minutes (on a single charge)
Compatible Devices	Micro SD (up to 32GB)
Material	ABS
Weight	415 Grams

9. Warranty and Support

For warranty information or technical support, please refer to the contact details provided at the point of purchase or visit the official Swiss Peak website. Keep your proof of purchase for any warranty claims.