

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Dell](#) /

> [Dell Inspiron 15 5000 Series \(5577\) Gaming Laptop User Manual](#)

Dell i5577-7342BLK-PUS

Dell Inspiron 15 5000 Series (5577) Gaming Laptop User Manual

Model: i5577-7342BLK-PUS

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Dell Inspiron 15 5000 Series (5577) Gaming Laptop. Please read this guide thoroughly to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

Verify that all items are present in the packaging:

- Dell Inspiron 15 5000 Series (5577) Gaming Laptop
- Power Adapter
- Quick Start Guide
- Warranty, Safety, and Regulatory Information

SETUP

Initial Power-On

1. **Connect the Power Adapter:** Plug the power adapter into the power connector on the laptop and then into a wall outlet.
2. **Open the Laptop:** Carefully lift the display lid.
3. **Power On:** Press the power button located on the keyboard deck. The laptop will begin the initial boot process.
4. **Complete Windows Setup:** Follow the on-screen instructions to complete the Windows 10 Home setup, including language selection, network connection, and user account creation.

Connecting Peripherals

Your laptop features various ports for connecting external devices.

- **USB 3.0 Ports:** Connect USB devices such as external hard drives, mice, or keyboards. There are three USB 3.0

ports available.

- **HDMI Port:** Connect an external display or TV using an HDMI cable.
- **Ethernet Port:** Connect to a wired network using an Ethernet cable.
- **SD Card Reader:** Insert an SD card to transfer photos or other files.

OPERATING INSTRUCTIONS

Power Management

- **Turning On:** Press the power button.
- **Shutting Down:** Click the Start button, then Power, and select "Shut down."
- **Sleep Mode:** Close the lid or click the Start button, then Power, and select "Sleep."
- **Restarting:** Click the Start button, then Power, and select "Restart."

Keyboard and Touchpad

- **Backlit Keyboard:** The keyboard features red backlighting. Use the function keys (Fn + F10, for example, depending on model) to adjust brightness or toggle it on/off.
- **Touchpad Gestures:** The touchpad supports multi-touch gestures for scrolling, zooming, and other functions. Refer to Windows settings for customization.

Display Settings

The 15.6-inch Full HD (1920 x 1080) Anti-Glare LED-Backlit Display provides clear visuals. You can adjust brightness and resolution through Windows Display Settings.

Audio

Adjust volume using the dedicated function keys or the volume control in the Windows taskbar. Connect headphones or external speakers to the audio jack.

Network Connectivity

- **Wi-Fi:** Connect to wireless networks using the built-in 802.11ac Wi-Fi. Access Wi-Fi settings via the network icon in the taskbar.
- **Ethernet:** For a stable wired connection, plug an Ethernet cable into the Ethernet port.

MAINTENANCE

Cleaning the Laptop

- **Screen:** Use a soft, lint-free cloth lightly dampened with water or a screen cleaner. Do not spray liquid directly onto the screen.
- **Keyboard and Chassis:** Use a soft, dry cloth. For stubborn dirt, a slightly damp cloth with mild soap solution can be used, ensuring no liquid enters openings.
- **Ventilation:** Periodically clean the ventilation grilles with compressed air to prevent dust buildup, which can affect cooling performance.

Battery Care

- Avoid extreme temperatures.
- Do not fully discharge the battery frequently.

- If storing the laptop for an extended period, ensure the battery is charged to approximately 50%.

Software Updates

Regularly update your Windows operating system, drivers, and Dell software to ensure optimal performance, security, and compatibility. Check for updates via Windows Update and Dell SupportAssist.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Possible Solution
Laptop does not power on.	Ensure the power adapter is securely connected to both the laptop and a working power outlet. Check the power button for damage.
Screen is blank or black.	Press the power button to wake the laptop. Check display cable if an external monitor is connected. Try adjusting screen brightness.
Wi-Fi connection issues.	Ensure Wi-Fi is enabled. Restart your router and modem. Update wireless drivers.
Slow performance.	Close unnecessary applications. Check for background processes. Ensure sufficient free space on the SSD. Run a virus scan.
Keyboard or touchpad unresponsive.	Restart the laptop. Check for driver updates. Ensure touchpad is not disabled via function key.

For more detailed troubleshooting, refer to the Dell support website or contact Dell technical support.

SPECIFICATIONS

Feature	Detail
Model Name	i5577-7342BLK-PUS
Processor	7th Generation Intel Core i7-7700HQ Quad Core (2.8 GHz base, up to 3.8 GHz Turbo)
RAM	16GB DDR4 2400MHz (expandable up to 32GB)
Storage	512GB SSD (Solid State Drive)
Display	15.6-inch FHD (1920 x 1080) Anti-Glare LED-Backlit Display
Graphics	NVIDIA GeForce GTX 1050 with 4GB GDDR5 Dedicated Memory
Operating System	Windows 10 Home 64-bit English
Wireless Connectivity	802.11ac Wi-Fi
Ports	3x USB 3.0, HDMI, Ethernet, SD Card Reader, Audio Jack
Dimensions (LxWxH)	10.43 x 15.7 x 0.99 inches (26.49 x 39.88 x 2.51 cm)
Weight	5.66 pounds (2.57 kg)

Feature	Detail
Battery	1 Lithium Ion battery (included)

WARRANTY AND SUPPORT

Warranty Information

Your Dell Inspiron laptop comes with a standard limited hardware warranty. The specific terms and duration of your warranty may vary based on your region and purchase date. Please refer to the "Warranty, Safety, and Regulatory Information" document included in your product packaging for complete details.

Additional protection plans may have been purchased separately. Check your purchase documentation for details on any extended warranties or service contracts.

Technical Support

For technical assistance, driver downloads, or further troubleshooting, visit the official Dell Support website. You will need your laptop's Service Tag, which can typically be found on a sticker on the bottom of the laptop or accessed through the BIOS.

Dell Support Website: www.dell.com/support

When contacting support, have your Service Tag and proof of purchase readily available.

PRODUCT VIEWS



Figure 1: Front view of the Dell Inspiron 15 5000 Series Gaming Laptop, showcasing the display and keyboard.



Figure 2: Left side view of the laptop, showing various ports and ventilation.



Figure 3: Right side view of the laptop, highlighting additional ports and the SD card slot.



Figure 4: Top-down view of the open laptop, showing the full keyboard with numeric keypad and touchpad.



Figure 5: Rear view of the closed laptop, displaying the Dell logo and rear ventilation grilles.



Figure 6: Side profile view of the laptop, illustrating its thickness and design.

