

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Kikkerland](#) /

› Kikkerland AC14-RD Small Retro Analog Alarm Clock Instruction Manual

Kikkerland AC14-RD

Kikkerland AC14-RD Small Retro Analog Alarm Clock Instruction Manual

Model: AC14-RD

PRODUCT OVERVIEW

The Kikkerland AC14-RD is a compact, retro-style analog alarm clock designed for reliable timekeeping and a classic aesthetic. It features a quartz movement for accuracy, glow-in-the-dark hands for visibility in low light, and a simple alarm function. This clock operates on a single AA battery, offering portability and ease of placement without requiring a power outlet.



Image: Front view of the Kikkerland AC14-RD Small Retro Analog Alarm Clock in red.

PRODUCT FEATURES

- **Compact Design:** Measures approximately 3.5" x 3" x 1.75" (7.5 cm W x 8.5 cm H).
- **Durable Material:** Constructed from ABS plastic.
- **Accurate Timekeeping:** Features a reliable quartz movement.
- **Analog Display:** Clear and easy-to-read analog time display.
- **Alarm Function:** Includes an alarm for waking or reminders.
- **Glow-in-the-Dark Hands:** Enhances visibility in low-light conditions.
- **Battery Operated:** Requires one AA battery (not included) for power.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the clock.
2. Carefully remove the cover.
3. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover securely.

Note: The AA battery is not included with the product.

2. Setting the Time

1. Turn the **TIME SET** knob, typically located on the back of the clock, in either direction until the clock hands display the correct current time.

3. Setting the Alarm

1. Turn the **ALARM SET** knob, also on the back, to set the desired alarm time.
2. Ensure the alarm ON/OFF switch (usually a small switch or button on the back or side) is in the **ON** position for the alarm to activate.



Image: Rear view of the alarm clock, highlighting the time and alarm setting knobs and the alarm switch.

OPERATING INSTRUCTIONS

Using the Alarm

When the alarm is set and the alarm switch is in the ON position, the clock will sound at the designated time. The alarm sound is designed to be effective for waking.

Snooze Function

To temporarily silence the alarm and activate the snooze function, press the large button located on the top of the clock. The alarm will sound again after a short interval (typically 5-9 minutes, depending on the model). To turn off the alarm completely, move the alarm ON/OFF switch to the OFF position.

Glow-in-the-Dark Hands

The clock features hands that glow in the dark. This allows for easy time reading in low-light conditions without needing an external light source. The glow effect is charged by exposure to light.

MAINTENANCE

Battery Replacement

When the clock's timekeeping becomes inaccurate or the alarm weakens, it is an indication that the battery needs to be replaced. Follow the steps for battery installation outlined in the "Setup" section to replace the AA battery.

Cleaning

To clean the clock, gently wipe its surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the clock's finish or internal components.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Clock is not keeping accurate time or stops.	<ul style="list-style-type: none">◦ Low Battery: Replace the AA battery with a fresh one.◦ Incorrect Setting: Ensure the time is set correctly using the TIME SET knob.
Alarm does not sound.	<ul style="list-style-type: none">◦ Alarm Switch Off: Verify the alarm ON/OFF switch is in the ON position.◦ Incorrect Alarm Time: Re-check the alarm setting using the ALARM SET knob.◦ Low Battery: Replace the AA battery.
Glow-in-the-dark hands are dim.	<ul style="list-style-type: none">◦ Insufficient Light Exposure: Expose the clock face to bright light for a period to recharge the luminous material.

SPECIFICATIONS

Feature	Detail
Brand	Kikkerland
Model Number	AC14-RD
Color	Red
Display Type	Analog
Movement Type	Quartz
Power Source	1 x AA Battery (not included)
Material	ABS Plastic
Product Dimensions	Approx. 2.95"W x 3.35"H (7.5 cm W x 8.5 cm H)
Special Features	Alarm, Glow-in-the-Dark Hands
Mounting Type	Tabletop

WARRANTY AND SUPPORT

This Kikkerland AC14-RD alarm clock comes with a **Limited Warranty**. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty information provided with your purchase or contact Kikkerland customer support directly.

For further assistance, technical support, or inquiries, please visit the official Kikkerland website or contact their customer service department.