



Manuals.plus /

› BEYBLADE /

› Takaratomy Beyblade Burst B-74 Starter Kreis Satan.2G.Lp User Manual

BEYBLADE B-74

Takaratomy Beyblade Burst B-74 Starter Kreis Satan.2G.Lp

OFFICIAL INSTRUCTION MANUAL

1. Product Overview

The Takaratomy Beyblade Burst B-74 Starter Kreis Satan.2G.Lp is a defense-type Beyblade designed for competitive play. This starter set includes one complete Beyblade and a grip launcher, allowing for immediate play. It is part of the Beyblade Burst series and is compatible only with other Beyblade Burst products.

What's in the Box:

- 1 x Kreis Satan Layer
- 1 x 2G Disc
- 1 x Lp Driver
- 1 x Grip Launcher



Image: The complete Beyblade Burst B-74 Kreis Satan.2G.Lp and its included grip launcher.

2. Setup and Assembly

Before playing, assemble your Beyblade and prepare the launcher.

2.1 Beyblade Assembly

1. **Attach the Disc to the Layer:** Align the three tabs on the 2G Disc with the corresponding slots on the Kreis Satan Layer. Press firmly until you hear a click, ensuring it is securely attached.
2. **Attach the Driver:** Align the Lp Driver with the center hole of the assembled Layer and Disc. Twist the Driver clockwise until it locks into place. The Beyblade is correctly assembled when all three parts are firmly connected and do not easily separate.



B-74 スターター

クライスサタン .2G.Lp



KREIS SATAN.2G.Lp

KREIS SATAN

クライスサタン

レイヤー



KS

悪魔王、サタンモチーフ。
3つのローラーで相手の攻撃を受け流しつつ、悪魔の翼でカウンターを与えるゴッドレイヤー。

ディスク
(コアディスク)



2

フレームパーツの取り付け可能なコアディスクで、内重心の2枚刃によりプレを抑えるディフェンス系ディスク。



フレーム



G

コアディスクに取り付け可能な攻撃力強化パーツ。大きな槍状の2枚刃がバースト力をアップ!

ドライバー



Lp

相手に弾かれた際に、2つのローラーがスタジアムに触れることでオーバーフィニッシュを防ぐディフェンス系ドライバー。

パーツを組み替えて
改造ができる!!

オススメ改造例



クライスサタン.4V.FI

クライスサタンレイヤーをVフレームの打撃力で守りながら、4ディスクとフリーゲルドドライバーでスピニッシュを狙うスタミナ系改造だ!



あいて
相手を破壊せよ!!

5つの
ローラーで **超防御!!**

クライスサタンレイヤーと
ループドライバーの特徴



レイヤーの3つのローラーは相手の攻撃によるバーストを防ぎ、ドライバーの2つのローラーはスタジアムからのオーバーを防ぐ!!

BEYBLADE SPEC



ローラーディフェンスで防御し
カウンターを狙え!

オーバータイムで勝て!



ベイロガー(別売)動作確認済みスマートフォンはコチラ!!
ベイロガー(別売)をご利用の際は、事前に動作確認済み機種をご確認ください。動作確認済み機種は公式ホームページをご覧ください。

ベイブレードバースト公式ホームページ

beyblade.takaratomy.co.jp



警告 (けいこく)

●小部品がありま
えないでください。

●ご使用前に、正し
●ベイブレードは高
くください。思わぬケ
いようにしてくださ
いと確認してくださ
は必ず足もと(床・地
危険です。●レイヤ
ル時やベイロガー(別
スト同士で遊んでください。違うシリーズ
(メタルファイトシリーズ等)のベイブレード
と遊ぶことはおやめください。

警告
WARNING

- 警告: 産品(玩具或兒童用品)内凡有小零件/小球體、為免兒童吞下導致窒息危險。請勿讓36個月以下兒童玩耍。
- 産品交兒童前、請先拆除或丟棄所有包裝、尤其膠袋、以免造成危險。
- 産品凡有繩線、車輪或旋轉部份、小心纏結兒童頸部、毛髮或手指、以免造成纏結危險。
- 警告: 産品凡有發射功能、請勿把産品向著眼部及面部、及對人體發射。
- 請留意産品的尖角及邊位、以免損傷。
- 請勿對産品及所包含之所有配件作任何改裝。請勿將産品給予非對象年齡之兒童玩耍及成年人需在旁監督下使用。
- 請保留以上資料作日後參考。
- Warning: The product (toys or children's product) may contain small parts/small balls. Choking hazard. Not suitable for children under 36 months.
- Remove or dispose of all packaging (including polybags) safely before giving to children.
- Be careful of the potential entanglement hazard with neck, hairs, or fingers if there are strings, wires, wheels or rolling parts in the product.
- Warning: Do not aim at eyes or face and do not shoot towards human body if the product consists of shooting function.
- Pay attention to the hazard of the edges and points.
- Do not modify this product or any of the included components. Do not give the product to children under target age. Let children play under parental supervision.
- Please retain the above information for future reference.



くちにいれない まきつけない

保管しておいてください。
けたり、手で触れたりしないで
やウィンドーが人に当たらない
家電製品、ガラス等がないこ
いでください。また、遊ぶ際
にください。血が通わなくなり
す。これらの情報はベイブ
レードバーストのホームページ
をご覧ください。

MANI 萬信有限公司 香港荃灣沙咀道30號益工業大廈A座15樓
TOMY ASIA LIMITED 香港荃灣沙咀道30號益工業大廈A座15樓
TOMY ASIA LIMITED 香港荃灣沙咀道30號益工業大廈A座15樓

玩具安全基準合格
4904810 87482 9

ST 17

(一社)日本玩具協会
東京都墨田区東駒形 4-22-4

205020



4 904810 874829



ベイの最新情報は
コロコロで読めるぞ!

●たのしいカワトミーの情報はインターネットで <http://www.takaratomy.co.jp>

Image: Detailed assembly instructions for the Beyblade components as shown on the product packaging. This diagram illustrates how the Layer, Disc, and Driver fit together.

2.2 Launcher Preparation

Insert the ripcord into the grip launcher. Ensure the ripcord is fully inserted and the teeth of the launcher engage with the Beyblade's gear.



Image: The grip launcher included with the Beyblade Burst B-74 Starter set. The ripcord is inserted into the launcher for use.

3. Operating Instructions

Follow these steps to launch your Beyblade and engage in battles.

1. **Attach Beyblade to Launcher:** Hold the launcher firmly. Align the Beyblade with the launcher's teeth and twist it onto the launcher until it clicks into place.
2. **Prepare to Launch:** Hold the launcher at arm's length over a Beyblade Burst Beystadium (sold separately). Ensure there are no obstacles in the launch path.
3. **Launch:** Pull the ripcord swiftly and firmly. The Beyblade will detach from the launcher and spin into the stadium.

3.1 Battle Mechanics

Beyblade Burst battles are won by achieving one of the following:

- **Burst Finish:** When an opponent's Beyblade bursts into multiple pieces during battle.
- **Spin Finish:** When an opponent's Beyblade stops spinning before yours.
- **Ring Out Finish:** When an opponent's Beyblade is knocked out of the Beystadium.

Kreis Satan.2G.Lp is a Defense type Beyblade. Its design, including the "Roller Defense" feature on the Layer, is optimized to deflect attacks and minimize stamina loss, making it resilient in battle.





Image: Close-up view highlighting the "Roller Defense" feature of the Kreis Satan Layer, which helps deflect opposing Beyblades during battle.

4. Maintenance

Proper maintenance ensures the longevity and performance of your Beyblade.

- **Cleaning:** After use, wipe down the Beyblade and launcher with a dry, soft cloth to remove dust and debris. Do not use water or cleaning solutions, as this can damage the components.
- **Storage:** Store your Beyblade and launcher in a cool, dry place away from direct sunlight and extreme temperatures. Disassemble the Beyblade into its Layer, Disc, and Driver for storage to prevent stress on the locking mechanisms.
- **Inspection:** Regularly inspect all parts for signs of wear, cracks, or damage. Pay close attention to the teeth on the Layer and launcher, and the tip of the Driver. Replace damaged parts if necessary (replacement parts sold separately).

5. Troubleshooting

Problem	Possible Cause	Solution
Beyblade does not attach to launcher.	Incorrect alignment; worn launcher teeth; Beyblade not fully assembled.	Ensure Beyblade is fully assembled. Align the Beyblade's gear with the launcher's teeth correctly. If teeth are worn, replace the launcher.
Beyblade does not spin or spins weakly.	Ripcord not pulled firmly; worn ripcord or launcher; damaged Driver tip.	Pull the ripcord with more force and speed. Inspect ripcord and launcher for wear. Check the Driver tip for damage and replace if necessary.
Beyblade bursts too easily.	Loose assembly; worn locking mechanism.	Ensure Layer, Disc, and Driver are securely locked together. If the locking mechanism is worn, the Beyblade may need replacement.

6. Specifications

Product Dimensions: 2 x 1 x 2 inches

Item Weight: 3.87 ounces

Model Number: B-74

Manufacturer: Takaratomy

Recommended Age: 13 - 15 years

UPC: 4904810874829 / 4904810966289

Release Date: July 26, 2018

7. Safety Information

Warning: This product contains small parts and may pose a choking hazard for children under 3 years of age. Adult supervision is recommended during play. Do not aim Beyblades at people or animals. Use only in a Beyblade Burst Beystadium.

Note: The product information states "No Warning" for Proposition 65, but general toy safety warnings are always applicable. The packaging image also shows warnings in Japanese and English.

8. Warranty and Support

Specific warranty information for this product is not provided in the available data. For any product-related inquiries or support, please refer to the official Takaratomy website or contact their customer service.

Official Takaratomy YouTube Channel: youtube.com/user/takaratomychannel

Official Beyblade Website (Japanese): beyblade.takaratomy.co.jp

Note: No official product videos from a "Seller" creator type were found in the provided data to embed.

