

PwrON 1701-0307033

PwrON AC to DC Adapter Instruction Manual

For GOODMAN'S Type 27C, GCE50009DVD, GCE5000DVD, GCE5006DVD, GCE5007DVD, GDVD100W3 Portable DVD Players

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your PwrON AC to DC Adapter. This adapter is specifically designed to provide power to compatible GOODMAN'S Portable DVD Players, including models Type 27C, GCE50009DVD, GCE5000DVD, GCE5006DVD, GCE5007DVD, and GDVD100W3.

Please read these instructions carefully before using the product and retain them for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following safety guidelines:

- **Indoor Use Only:** This adapter is designed for indoor use. Do not expose it to rain, moisture, or extreme temperatures.
- **Proper Ventilation:** Ensure the adapter has adequate ventilation. Do not cover it or operate it in confined spaces.
- **Avoid Water:** Do not immerse the adapter in water or other liquids. Do not operate with wet hands.
- **Inspect Before Use:** Before each use, inspect the adapter and its cable for any signs of damage. Do not use if damaged.
- **Correct Voltage:** The adapter is designed for worldwide input voltage (100-240VAC, 50/60Hz). Ensure your power outlet matches these specifications.
- **Protection Features:** This PwrON adapter includes built-in safety features such as Over Current Protection, Over Voltage Protection, Over Temperature Protection, and Short Circuit Protection.
- **Certifications:** The product is certified with CE and FCC standards, indicating compliance with health, safety, and environmental protection standards.

3. SETUP

Follow these steps to connect your PwrON AC to DC Adapter:

1. **Verify Compatibility:** Ensure your portable DVD player is one of the compatible GOODMAN'S

models (Type 27C, GCE50009DVD, GCE5000DVD, GCE5006DVD, GCE5007DVD, GDVD100W3).

2. **Connect to Device:** Insert the barrel connector end of the adapter cable firmly into the DC input port of your portable DVD player.
3. **Connect to Power Outlet:** Plug the AC plug of the adapter into a standard wall power outlet.



Image: The PwrON AC to DC Adapter, showing the main unit with the US-style power plug and the attached cable leading to the barrel connector.



Image: The PwrON AC to DC Adapter, highlighting its 6.6-foot extra-long cord for extended reach.

4. OPERATING INSTRUCTIONS

Once the adapter is properly connected to both the portable DVD player and a power outlet, your device

should receive power. The operation of the adapter is automatic; it will supply the necessary power to your device.

- Ensure all connections are secure before powering on your portable DVD player.
- Refer to your portable DVD player's manual for specific power-on procedures.

5. MAINTENANCE

Proper maintenance helps prolong the life of your adapter:

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Use a dry, soft cloth to wipe the surface. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures when not in use. Avoid tightly winding the cable.
- **Cable Inspection:** Regularly check the power cable for any cuts, fraying, or bends, especially near the connectors. Replace the adapter if any damage is found.

6. TROUBLESHOOTING

If you encounter issues with your PwrON AC to DC Adapter, consider the following:

- **Device Not Powering On:**
 - Ensure the adapter's barrel connector is fully inserted into the DVD player's DC input.
 - Verify the AC plug is securely seated in a functional wall outlet. Test the outlet with another device.
 - Check the adapter cable for any visible damage. If damaged, discontinue use.
- **Adapter Feels Warm:** It is normal for power adapters to become warm during operation. However, if the adapter becomes excessively hot to the touch or emits a burning smell, immediately disconnect it from the power source and the device, and contact support.

7. SPECIFICATIONS

Model Number	1701-0307033
Input Voltage	100-240VAC, 50/60Hz
Output	Designed for compatible GOODMANS Portable DVD Players
Connector Type	Barrel Connector
Compatible Devices	GOODMANS Type 27C, GCE50009DVD, GCE5000DVD, GCE5006DVD, GCE5007DVD, GDVD100W3 Portable DVD Players
Special Features	Over Current Protection, Over Voltage Protection, Over Temperature Protection, Short Circuit Protection
Certifications	CE, FCC
Cord Length	Approximately 6.6 feet (2 meters)



Image: The PwrON AC to DC Adapter with approximate dimensions (6.7cm length, 3.8cm width, 2.5cm height for the main body).

8. WARRANTY AND SUPPORT

PwrON stands by the quality of its products. Your AC to DC Adapter comes with the following:

- **30 Days Money Back Guarantee:** If you are not satisfied, you may return the product within 30 days for a full refund.
- **60 Days Free Exchange:** Enjoy a free exchange within 60 days with a paid return label provided.
- **360 Days Worry-Free Warranty:** A comprehensive warranty covering defects and malfunctions for 360 days from the date of purchase.

For any questions, concerns, or warranty claims, please contact PwrON customer support. We are here to help.