

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Prixton](#) /

› [Prixton DV360 Waterproof Action Camera 8 MP \(HDMI, CMOS, FHD 1080p\) Blue Color User Manual](#)

Prixton 360

Prixton DV360 Action Camera User Manual

Model: 360

PRIXTON

INTRODUCTION

This user manual provides detailed instructions for the operation, maintenance, and troubleshooting of your Prixton DV360 Action Camera. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

The Prixton DV360 is a versatile action camera designed for capturing high-quality photos and videos in various environments, including underwater. It features 360-degree recording capabilities, Wi-Fi connectivity, and a robust waterproof design.

PRODUCT OVERVIEW



Figure 1: Pixon DV360 Action Camera enclosed in its waterproof housing, showcasing the front lens and mounting bracket.



Figure 2: Rear view of the Plixon DV360 Action Camera, highlighting the 0.9-inch TFT display and control buttons for navigation and settings.



Figure 3: Front view of the Prixtion DV360 Action Camera, focusing on the wide-angle lens designed for 360-degree capture.

Key Features:

- 0.9-inch TFT Display (360° horizontal, 220° vertical)
- 8.0 Megapixel CMOS Sensor (2592 x 1944 photo resolution)
- Video Recording: MP4 2.7K at 30fps, 1080p at 60fps
- Integrated Microphone for Audio Recording
- Supports Micro SD Cards up to 32GB
- Connectivity: USB, HDMI, Wi-Fi
- Power Source: 1000mAh 3.7V Lithium-ion Battery
- Waterproof up to 10 meters
- Electronic Image Stabilization
- Digital Zoom

- Auto and Fixed Focus

SETUP

1. Charging the Battery

Before first use, fully charge the camera's lithium-ion battery. Connect the camera to a USB power source using the provided USB cable. The charging indicator light will typically turn off or change color once charging is complete.

2. Inserting a Micro SD Card

1. Ensure the camera is powered off.
2. Locate the Micro SD card slot, usually found on the side or bottom of the camera.
3. Insert a compatible Micro SD card (up to 32GB, Class 10 or higher recommended) into the slot with the gold contacts facing the correct direction as indicated by a diagram near the slot.
4. Gently push until it clicks into place. To remove, push again to release.

3. Attaching the Waterproof Case

The camera is designed to be waterproof up to 10 meters when enclosed in its dedicated waterproof case. Ensure the camera is properly seated within the case and all latches are securely fastened before submerging it in water. Check the rubber seal for any debris or damage before each use to maintain waterproofing.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press and hold the Power button (usually located on the front or top) for a few seconds to turn the camera on or off.

2. Mode Selection

Use the Mode button to cycle through different modes: Video Recording, Photo Capture, Playback, and Settings. The current mode will be displayed on the 0.9-inch TFT screen.

3. Video Recording

1. Select Video Recording mode.
2. Press the Shutter/OK button to start recording. A red indicator light or on-screen icon will typically flash to indicate recording is in progress.
3. Press the Shutter/OK button again to stop recording.

4. Photo Capture

1. Select Photo Capture mode.
2. Frame your shot using the display.

3. Press the Shutter/OK button to take a photo.

5. Wi-Fi Connectivity

To connect your camera to a smartphone or tablet via Wi-Fi:

1. Enable Wi-Fi on the camera through the Settings menu.
2. On your smartphone/tablet, search for available Wi-Fi networks and connect to the network named "Prixton DV360" (or similar, check camera display for exact name).
3. Download and install the official Prixton action camera app (if available, check product packaging or manufacturer website for app details).
4. Open the app to control the camera remotely, view live footage, and transfer files.

6. Playback

In Playback mode, use the Up/Down navigation buttons to browse through your recorded videos and photos.

Press the Shutter/OK button to play a video or view a photo in full screen.

7. System Settings

Access the Settings menu to adjust various camera parameters, including:

- Video Resolution (e.g., 2.7K, 1080p)
- Photo Resolution (e.g., 8MP)
- Loop Recording
- Time-Lapse
- Date/Time Stamp
- Language
- Formatting SD Card
- Factory Reset

MAINTENANCE

1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body and lens.
- For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- Ensure the lens is free of smudges for clear image quality.

2. Waterproof Case Care

- After each use in water, rinse the waterproof case with fresh water to remove salt, sand, or chlorine.
- Allow the case to air dry completely before storing.
- Regularly inspect the rubber seal (O-ring) for cracks, tears, or debris. A damaged seal can compromise waterproofing.

3. Battery Care

- Store the camera with a partially charged battery (around 50%) if not used for extended periods.
- Avoid exposing the battery to extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or not inserted correctly.	Charge the battery fully. Ensure the battery is correctly inserted.
Cannot record video/take photos.	Micro SD card is full, corrupted, or not inserted.	Insert a Micro SD card. Format the card (this will erase all data). Use a new card if corrupted.
Poor image/video quality.	Lens is dirty or scratched. Insufficient lighting.	Clean the lens. Ensure adequate lighting for your recording environment.
Wi-Fi connection issues.	Wi-Fi not enabled on camera. Incorrect network selected. App issues.	Ensure Wi-Fi is enabled on the camera. Reconnect to the correct Wi-Fi network. Restart the camera and the app.
Camera freezes or becomes unresponsive.	Software glitch or full memory card.	Remove the battery and reinsert it to perform a hard reset. Ensure sufficient space on the Micro SD card.

SPECIFICATIONS

Brand	Prixton
Model	360
Color	Blue
Optical Sensor Resolution	8 Megapixels (Effective Still Resolution)
Video Resolution	1080p (also supports 2.7K/30fps)
Video Capture Format	MP4
Audio Format Supported	MP3
Display	0.9-inch TFT (360° horizontal, 220° vertical)
Memory Type	Micro SD (up to 32GB)
Connectivity	HDMI, USB, Wi-Fi
Battery	1000mAh 3.7V Lithium-ion (included)
Waterproof Level	Up to 10 meters (with waterproof case)
Image Stabilization	Electronic

Special Feature	360-degree Capture
Dimensions (L x W x H)	7 x 7 x 5 cm
Weight	100 Grams

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Plixton website or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: Plixton

Country of Origin: China

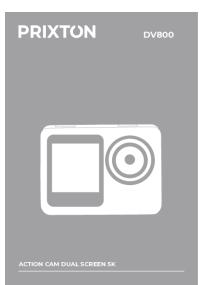
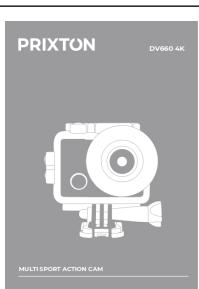
For further assistance, visit the [Plixton Brand Store](#).

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found for this model.

© 2024 Plixton. All rights reserved.

Related Documents - 360

	<p>Plixton DV800 Action Cam Dual Screen 5K User Manual</p> <p>Comprehensive user manual for the Plixton DV800 Action Cam Dual Screen 5K, covering setup, features, modes, system configuration, and connectivity.</p>
	<p>Plixton DV660 4K: Manual de Usuario y Guía de Inicio Rápido</p> <p>Descubra las funciones, especificaciones y cómo usar su cámara de acción Plixton DV660 4K con este manual completo. Incluye instrucciones de configuración, uso de la tarjeta de memoria, conexión y más.</p>
	<p>360 Robot Vacuum Cleaner S10 User Manual</p> <p>Comprehensive user manual for the 360 Robot Vacuum Cleaner, model S10. Provides safety instructions, product overview, detailed installation steps, operational guidance, and after-sales service information.</p>

	<p>360° Panoramic Camera System for Android Car Radios</p> <p>Enhance your driving safety with an AHD1080P HD 360° panoramic camera system for Android car radios. Requires a 12-pin socket and 360 panorama channel on your Android system. Includes front, rear, left, and right view cameras.</p>
	<p>360 S8 Series Robot Vacuum Cleaner User Manual</p> <p>User manual for the 360 S8 Series Robot Vacuum Cleaner, covering safety information, product overview, installation instructions, and after-sales service.</p>
	<p>360° Four-Record Driving Recorder User Manual</p> <p>Comprehensive user manual for the 360° Four-Record Driving Recorder, detailing product structure, key functions, operating instructions, and technical specifications. Learn how to use your dash cam for video recording, photography, and as a PC camera.</p>