

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KODAK](#) /

› [Kodak 32HDX900S 32-inch HD Ready LED TV User Manual](#)

## KODAK 32HDX900S

# Kodak 32HDX900S 32-inch HD Ready LED TV User Manual

Model: 32HDX900S

## 1. INTRODUCTION

---

Thank you for choosing the Kodak 32HDX900S 32-inch HD Ready LED TV. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new television. Please read this manual thoroughly before using the product to ensure safe and optimal performance.

## 2. WHAT'S IN THE BOX

---

Carefully unpack the box and ensure all items listed below are present and in good condition. If any items are missing or damaged, please contact customer support.

- 1 x Kodak 32HDX900S TV Unit
- 1 x Remote Controller
- 2 x AAA Batteries (for Remote Controller)
- 1 x User Manual (this document)
- TV Stands (for tabletop placement)
- Wall Mount Accessories (screws, brackets for wall mounting)



Image: Front view of the Kodak 32HDX900S TV with its included stands.

### 3. SETUP

#### 3.1 Attaching the TV Stands

1. Place the TV screen-down on a soft, flat surface to prevent scratches.
2. Align each stand with the corresponding screw holes on the bottom of the TV.
3. Secure the stands using the provided screws. Do not overtighten.

#### 3.2 Wall Mounting (Optional)

If you choose to wall mount your TV, ensure you use a compatible VESA wall mount kit (not always included) and follow the instructions provided with the wall mount. The TV's back panel has standard mounting points.



Image: Rear view of the TV, illustrating the wall mount screw holes and various input/output ports.

### 3.3 Initial Power-On

1. Connect the power cord to the TV and then to a power outlet.
2. Insert the AAA batteries into the remote controller, observing polarity.
3. Press the Power button on the remote or the TV to turn it on.
4. Follow the on-screen instructions for initial setup, including language selection and channel scanning.

## 4. OPERATING INSTRUCTIONS

### 4.1 Remote Control Functions

The remote control allows you to access all TV functions. Familiarize yourself with the buttons for power, volume, channel, input source, menu, and navigation.

### 4.2 Basic TV Operations

- **Power On/Off:** Press the **POWER** button.
- **Volume Control:** Use the **VOL +/-** buttons.
- **Channel Selection:** Use the **CH +/-** buttons or number pad.
- **Input Source:** Press the **INPUT** or **SOURCE** button to select between HDMI, USB, AV, etc.
- **Menu Navigation:** Use the **MENU** button and arrow keys to navigate settings.

## 5. CONNECTIVITY

Your Kodak 32HDX900S TV offers various connectivity options for external devices.

- **HDMI Ports:** Two HDMI ports are available for connecting set-top boxes, Blu-ray players, gaming consoles, and other HDMI-enabled devices.
- **USB Ports:** Two USB ports allow you to connect hard drives, USB flash drives, and other USB devices for

media playback.

- **Audio Input:** An auxiliary audio input is available for connecting audio sources.
- **Earphone Output:** A dedicated earphone jack is provided for private listening.





Image: Side view of the TV, illustrating the location of HDMI and USB ports for easy access.

## 6. DISPLAY FEATURES

Experience clear and vibrant visuals with the following display technologies:

- **HD Ready Resolution:** The TV features an HD Ready display with a resolution of 1366x768 pixels, providing clear and detailed images.
- **Dynamic Contrast Enhancer:** This technology automatically adjusts the contrast levels to deliver deeper blacks and brighter whites, enhancing picture depth.
- **Wide Viewing Angle:** With a 178-degree viewing angle, the picture quality remains consistent and vibrant from various positions in the room.
- **60 Hz Refresh Rate:** Ensures smooth motion for all content, reducing blur in fast-moving scenes.
- **Perfect Panel:** Designed for optimal visual clarity and color reproduction.

## 7. AUDIO FEATURES

Enjoy immersive sound with your television:

- **20 Watts Output:** The integrated speakers deliver a total audio output of 20 watts for clear and powerful sound.
- **Audio Boost Mode:** Enhances audio levels and clarity, making dialogues and sound effects more pronounced.

## 8. SPECIFICATIONS

<b>Brand</b>	KODAK
<b>Model</b>	32HDX900S
<b>Screen Size</b>	32 Inches (80 cm)
<b>Display Technology</b>	LED
<b>Resolution</b>	HD Ready (1366 x 768 Pixels)
<b>Refresh Rate</b>	60 Hertz
<b>Response Time</b>	6 Milliseconds

Viewing Angle	178 Degrees
Image Aspect Ratio	16:9
Image Contrast Ratio	5000:1
Audio Output	20 Watts
Hardware Interface	2 x HDMI, 2 x USB
Operating System	Android
Product Dimensions (LxWxH)	8 x 79.5 x 42 cm
Item Weight	1.04 kg

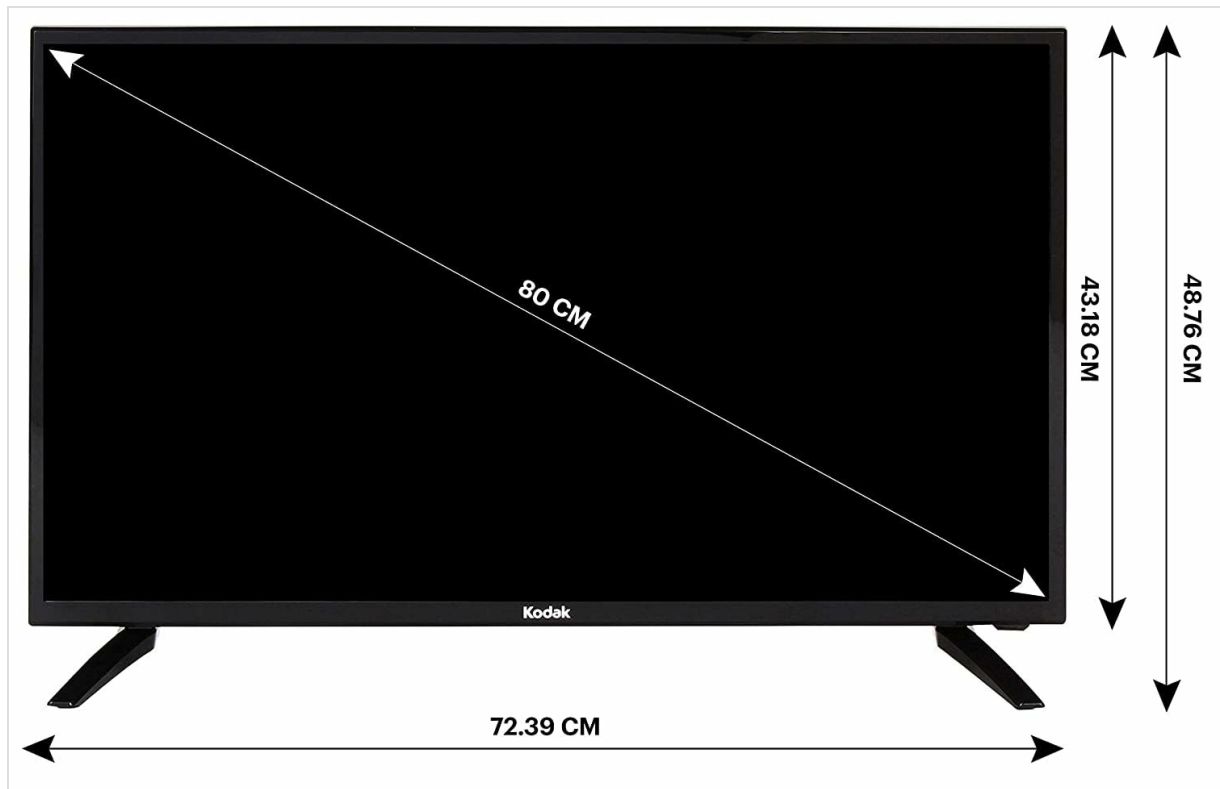


Image: Diagram illustrating the physical dimensions of the Kodak 32HDX900S TV.

## 9. MAINTENANCE

Proper maintenance ensures the longevity and performance of your TV.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Avoid harsh chemicals.
- **Cleaning the Cabinet:** Use a soft, dry cloth to clean the TV cabinet.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.
- **Power Cord:** Regularly check the power cord for any damage.

## 10. TROUBLESHOOTING

Refer to this section for solutions to common issues you might encounter.

Problem	Possible Solution
No power	Check if the power cord is securely plugged into both the TV and the power outlet. Ensure the power outlet is functional.
No picture, but sound is present	Verify the correct input source is selected. Check cable connections (HDMI, AV) to external devices.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio cable connections.
Remote control not working	Replace the AAA batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Poor picture quality	Adjust picture settings (brightness, contrast, sharpness). Check the signal strength if using an antenna. Ensure the source device is outputting a high-quality signal.

## 11. WARRANTY AND SUPPORT

Your Kodak 32HDX900S TV comes with a **1-year standard warranty** from the date of purchase, provided by the brand.

For warranty claims, technical support, or any product-related inquiries, please contact:

**Manufacturer:** Super Plastronics Pvt Ltd

**Customer Care Number:** 1800-103-3036

**Email:** [consumercare@kodaktv.in](mailto:consumercare@kodaktv.in)

**Address:** SPPL, B-30 & 31, Phase -2, Sector 81, Noida, Uttar Pradesh 201305

Please retain your purchase receipt as proof of purchase for warranty services.