

## ENEGON EN-LP-E8

# ENEGON LP-E8 Battery and Dual Charger User Manual

Model: EN-LP-E8

## INTRODUCTION

This manual provides instructions for the safe and efficient use of your ENEGON LP-E8 Battery and Dual Charger. This product is designed to provide reliable power for compatible Canon digital cameras.

### Package Contents:

- 2 x ENEGON LP-E8 Batteries (1800mAh)
- 1 x ENEGON Dual LP-E8 Charger
- 1 x Micro-USB Cable

## COMPATIBILITY

The ENEGON LP-E8 batteries and dual charger are fully compatible with the following Canon camera models:

- Canon EOS Rebel T2i
- Canon EOS Rebel T3i
- Canon EOS Rebel T4i
- Canon EOS Rebel T5i
- Canon EOS 550D
- Canon EOS 600D
- Canon EOS 650D
- Canon EOS 700D
- Canon Kiss X4
- Canon Kiss X5
- Canon Kiss X6
- Canon Kiss X6i
- Canon Kiss X7i
- Canon LC-E8E Digital Camera

# Compatible Models

EOS Rebel T2i, T3i, T4i, T5i, EOS 550D, 600D, 650D, 700D, Kiss X4, X5, X6, LC-E8E Digital Camera and more



Rebel T2i



Rebel T3i



Rebel T4i



Rebel T5i



Figure 1: Compatible Canon Camera Models.

## SETUP AND CHARGING INSTRUCTIONS

1. **Connect the Charger:** Connect the provided Micro-USB cable to the ENEGON Dual LP-E8 Charger.
2. **Power Source:** Connect the other end of the Micro-USB cable to a compatible USB power source (e.g., wall charger, car charger, power bank, or laptop USB port). A wall charger is not included.
3. **Insert Batteries:** Insert one or two ENEGON LP-E8 batteries into the charging slots of the dual charger. Ensure the battery contacts align correctly with the charger pins.
4. **Monitor Charging Status:**
  - When the charger is powered on and no batteries are inserted, the LED lights will flash red and green alternately.
  - When batteries are charging, the corresponding LED lights will turn RED.
  - When charging is complete, the corresponding LED lights will turn GREEN.
5. **Remove Batteries:** Once fully charged, remove the batteries from the charger.

## STEP 1



## STEP 2



## STEP 3



## STEP 4



Figure 2: Step-by-step battery charging process.

1. When Charger is powered on, LED lights flash red and green alternately (without batteries)
2. LED lights turn to RED when charging and GREEN when complete



Figure 3: LED indicator status for charging.

# Multiple Charging Options

Charging your batteries on the go, with ENEGON kit, you can charge the batteries with wall charger, car charger and portable power bank



Figure 4: Multiple charging options for convenience.

## OPERATING INSTRUCTIONS

To use the ENEGON LP-E8 battery with your compatible Canon camera:

1. Ensure the battery is fully charged (green LED on the charger).
2. Open the battery compartment of your Canon camera.
3. Insert the ENEGON LP-E8 battery into the compartment, ensuring correct orientation and a secure fit.
4. Close the battery compartment door.
5. Turn on your camera. The camera should recognize the battery and display its charge level.



# Extra Power to Catch the unexpected moment on the go



Figure 5: ENEGON battery ready for camera use.

## MAINTENANCE AND SAFETY

Proper maintenance ensures the longevity and safe operation of your ENEGON batteries and charger.

### Battery Care:

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not connect batteries improperly.
- Do not dispose of batteries in fire or expose to excess heat.
- Do not crush, puncture, incinerate, or short-circuit external contacts.
- If a battery shows signs of damage, swelling, or leakage, discontinue use immediately and dispose of it properly.

### Charger Care:

- Keep the charger clean and free from dust and debris.
- Avoid dropping the charger or subjecting it to strong impacts.
- Do not attempt to disassemble or modify the charger.
- Use only the provided Micro-USB cable or a compatible replacement.

**WARNING: Built-in multiple circuit protection (over-charging, short-circuit, high-temperature, and surge protection) and fire-resistant construction are integrated for safety. However, always follow these guidelines to prevent potential hazards.**

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Batteries not charging (LEDs not red)	<ul style="list-style-type: none"><li>◦ Charger not connected to power.</li><li>◦ Batteries not inserted correctly.</li><li>◦ Faulty USB cable or power source.</li></ul>	<ul style="list-style-type: none"><li>◦ Ensure USB cable is securely connected to both charger and power source.</li><li>◦ Re-insert batteries, ensuring proper alignment.</li><li>◦ Try a different USB cable or power source.</li></ul>
Camera does not power on with ENEGON battery.	<ul style="list-style-type: none"><li>◦ Battery not fully charged.</li><li>◦ Battery not inserted correctly.</li><li>◦ Battery contacts are dirty.</li></ul>	<ul style="list-style-type: none"><li>◦ Charge the battery until the LED turns green.</li><li>◦ Remove and re-insert the battery, ensuring a secure fit.</li><li>◦ Clean battery contacts on both the battery and camera with a dry cloth.</li></ul>
Short battery life.	<ul style="list-style-type: none"><li>◦ Battery not fully charged.</li><li>◦ High power consumption settings on camera.</li><li>◦ Battery degradation over time.</li></ul>	<ul style="list-style-type: none"><li>◦ Ensure batteries are fully charged before use.</li><li>◦ Adjust camera settings (e.g., screen brightness, continuous shooting) to conserve power.</li><li>◦ Consider replacing old batteries if performance significantly degrades.</li></ul>

SPECIFICATIONS

Feature	Detail
Model Number	EN-LP-E8
Battery Type	Lithium Ion
Battery Capacity	1800mAh (7.4V, 13.3Wh)
Charger Input	5V/2A (Micro-USB)
Charger Output	8.4V/0.8A * 2
Product Dimensions	2.76 x 1.97 x 1.18 inches (Charger)
Weight	0.35 ounces (approx. per battery)

WARRANTY AND SUPPORT

ENEGON provides an 18-month manufacturer warranty for this product. For customer service and support, please contact ENEGON directly. Contact information can typically be found on the product packaging or the official ENEGON website.

*Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This disclaimer is provided as per product information and may not directly apply to this electronic accessory.*

