

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Hama](#) /

> Hama TV Wall Mount Instruction Manual - Model 4330181491 for 32-42 inch Screens

Hama 4330181491

Hama TV Wall Mount Instruction Manual - Model 4330181491

For Flat Screens 32" to 42" (81-107 cm)

1. INTRODUCTION

This instruction manual provides detailed guidance for the safe and correct installation, operation, and maintenance of your Hama TV Wall Mount, Model 4330181491. This mount is designed for flat screens with a diagonal size ranging from 81 to 107 cm (32 to 42 inches). Please read this manual thoroughly before beginning installation and retain it for future reference.

The Hama TV Wall Mount offers an extremely flat profile for a modern, space-saving interior design and supports all VESA standards up to 400 x 400. It also features a tilt function of up to 20 degrees for optimal viewing angles.



Image 1: Hama TV Wall Mount Model 4330181491. This image displays the black metal wall mount with its two vertical arms and horizontal support bar, designed to securely hold a flat-screen television.

2. SAFETY INFORMATION

- Ensure the wall structure can safely support the weight of the TV mount and the television. Consult a structural engineer if unsure.

- Do not exceed the maximum load capacity specified for this mount.
- Always use appropriate tools and wear safety gear during installation.
- Verify that all screws and fasteners are securely tightened before mounting the television.
- Keep children and pets away from the installation area.
- Avoid installing the mount near heat sources, direct sunlight, or in areas with high humidity.
- If you encounter any difficulties or are unsure about any step, seek professional assistance.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged before installation. The package typically includes:

- Wall plate
- TV mounting brackets (2 pieces)
- Mounting hardware kit (screws, anchors, washers for various TV models and wall types)
- Integrated spirit level
- Instruction manual

4. FEATURES

- Designed for flat screens with a screen size from 81 to 107 cm (32" to 42").
- Extremely flat profile for a modern and space-saving installation.
- Integrated spirit level for easy and precise installation.
- Supports all VESA standards up to 400 x 400.
- Adjustable tilt up to 20 degrees for optimal viewing.
- Suitable for ultra-flat televisions, allowing flexible positioning.

5. SETUP AND INSTALLATION

Before starting, ensure you have the necessary tools (e.g., drill, screwdriver, measuring tape, pencil) and that your wall can support the weight.

1. **Determine Mounting Location:** Choose a suitable location on the wall, considering viewing height, power outlets, and stud locations if mounting into wood studs.
2. **Mark Drill Holes:** Hold the wall plate against the wall at the desired height. Use the integrated spirit level to ensure it is perfectly horizontal. Mark the drill holes with a pencil.
3. **Drill Holes:** Drill holes at the marked locations using an appropriate drill bit for your wall type (e.g., wood, concrete, brick). Insert wall anchors if required.
4. **Attach Wall Plate:** Secure the wall plate to the wall using the provided screws. Ensure it is firmly attached and level.
5. **Attach TV Brackets to TV:** Carefully place your TV face down on a soft, clean surface. Attach the two TV mounting brackets to the back of your television using the appropriate VESA screws and washers from the hardware kit. Ensure the brackets are centered and securely fastened.
6. **Mount TV to Wall Plate:** With assistance, carefully lift the television and hook the TV mounting brackets

onto the wall plate. Ensure the TV is securely seated on the wall plate.

7. **Secure TV:** Use the safety screws or locking mechanisms (if provided) to secure the TV brackets to the wall plate, preventing accidental dislodgement.

For detailed visual instructions, refer to the diagrams included in the physical manual or consult the manufacturer's website.

6. OPERATING INSTRUCTIONS

This Hama TV Wall Mount allows for tilt adjustment to achieve the optimal viewing angle.

1. **Adjusting Tilt:** Loosen the tilt adjustment knobs or bolts located on the side of the TV mounting brackets.
2. **Set Angle:** Carefully tilt the television to the desired upward or downward angle (up to 20 degrees).
3. **Secure Tilt:** Once the desired angle is achieved, firmly tighten the tilt adjustment knobs or bolts to secure the television in position.

Always ensure the TV is securely fastened after any adjustments to prevent accidental movement.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mount. Avoid abrasive cleaners or solvents.
- **Periodic Inspection:** Regularly check all screws and connections to ensure they remain tight and secure. Over time, vibrations or minor shifts can cause fasteners to loosen.
- **Damage Check:** Inspect the mount for any signs of damage, corrosion, or wear. If any damage is found, do not use the mount and contact customer support.

8. TROUBLESHOOTING

- **Mount is not level:** Ensure the wall plate was installed using the integrated spirit level. If not, carefully remove and re-install, ensuring it is perfectly level before re-attaching the TV.
- **TV feels unstable:** Double-check that all screws securing the TV brackets to the TV and the TV to the wall plate are fully tightened. Verify that the wall anchors (if used) are appropriate for your wall type and securely installed.
- **Difficulty tilting:** Ensure the tilt adjustment knobs or bolts are sufficiently loosened before attempting to adjust the angle. Do not force the mechanism.

If problems persist, refer to the manufacturer's support resources or contact a qualified technician.

9. SPECIFICATIONS

Feature	Detail
Brand	Hama
Model Number	4330181491

Compatible Screen Sizes	81 to 107 cm (32" to 42")
VESA Compatibility	Up to 400 x 400 mm
Movement Type	Tilt
Maximum Tilt Angle	20 Degrees
Mounting Type	Wall Mount
Item Weight	453.59 g

10. WARRANTY AND SUPPORT

Hama products are manufactured with high-quality materials and undergo strict quality control. In the unlikely event of a defect, please contact your retailer or the Hama customer support team directly. Please retain your proof of purchase for warranty claims.

For further assistance, product registration, or to view additional support resources, please visit the official Hama website or contact their customer service department.

Note: Specific warranty terms and conditions may vary by region. Refer to the warranty card included with your product or the manufacturer's website for detailed information.