

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UpBright 18V AC/DC Adapter Instruction Manual for Singing Machine Karaoke Systems (Models SDL9035, SDL9037, SDL9039, SDL9040)

UPBRIGHT SDL9035, SDL9037, SDL9039, SDL9040

UpBright 18V AC/DC Adapter Instruction Manual

For Singing Machine Karaoke Systems (Models SDL9035, SDL9037, SDL9039, SDL9040)

INTRODUCTION

This manual provides essential information for the safe and effective use of your UpBright 18V AC/DC Adapter. This adapter is designed to provide reliable power to compatible Singing Machine Karaoke Systems, including models SDL9035, SDL9037, SDL9039, and SDL9040. Please read these instructions carefully before use to ensure optimal performance and longevity of your product.



Image: The UpBright 18V AC/DC Adapter shown with its detachable power cord.

SETUP INSTRUCTIONS

Follow these steps to correctly set up your UpBright 18V AC/DC Adapter:

1. **Unpack Components:** Carefully remove the AC/DC adapter and the detachable AC power cord from the packaging.
2. **Connect Power Cord:** Insert the detachable AC power cord into the adapter's input port. Ensure a firm connection.
3. **Verify Compatibility:** Before connecting to your device, confirm that your Singing Machine Karaoke System requires an 18V DC input and has a compatible 5.5 x 2.1mm charging port. This adapter is specifically designed for models SDL9035, SDL9037, SDL9039, and SDL9040.



Image: A close-up view of the adapter's DC barrel connector, illustrating its size for compatibility verification.

4. **Connect to Device:** Insert the DC output connector of the adapter into the corresponding power input port on your Singing Machine Karaoke System.
5. **Connect to Power Outlet:** Plug the AC power cord into a standard 100-240VAC, 50/60Hz electrical wall outlet.
6. **Power On:** Once connected, your device should receive power. Refer to your Singing Machine's manual for specific power-on procedures.

For a visual guide on connecting a similar 18V DC adapter, please refer to the video below:

Video: Demonstration of connecting an 18V DC adapter to a compatible device, highlighting the charging port and power-on sequence.

OPERATING INSTRUCTIONS

The UpBright 18V AC/DC Adapter is designed for straightforward operation. Once properly connected to a power source and your compatible Singing Machine Karaoke System, it will automatically supply the necessary power.

- **Automatic Power Delivery:** The adapter provides continuous 18V DC power to your device when plugged into an active electrical outlet.
- **Safety Features:** This adapter incorporates Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP) to safeguard both the adapter and your connected device from electrical damage.

Security Protection

Multiple professional protection, so that fast
Charge more safe



- | | | |
|--|---|--|
|  Good heat Resistance |  VO-Grade Fire-Retardant |  Overcharge Protection |
|  Overvoltage Protection |  Overheat Protection |  Overcurrent Protection |

Image: An illustration detailing the various security protection mechanisms integrated into the adapter for safe operation.

CARE AND MAINTENANCE

To ensure the longevity and proper functioning of your UpBright AC/DC Adapter, observe the following maintenance guidelines:

- **Keep Dry:** Avoid exposing the adapter to moisture, water, or high humidity.
- **Temperature Control:** Do not operate the adapter in extremely hot or cold environments. Store it in a moderate temperature range.
- **Handle with Care:** Avoid dropping or subjecting the adapter to strong impacts. Do not pull on the cord to disconnect it from the outlet or device.
- **Clean Gently:** Use a soft, dry cloth to clean the adapter. Do not use liquid cleaners or aerosols.
- **Cable Management:** Ensure the power cord is not kinked, twisted, or placed under heavy objects, which can damage the internal wiring. The adapter features a flexible and durable wire designed for resilience.

Flexible Wire More Durable

Selected high-quality environmentally friendly TPE material, toughness, anti-aging, not easy to break

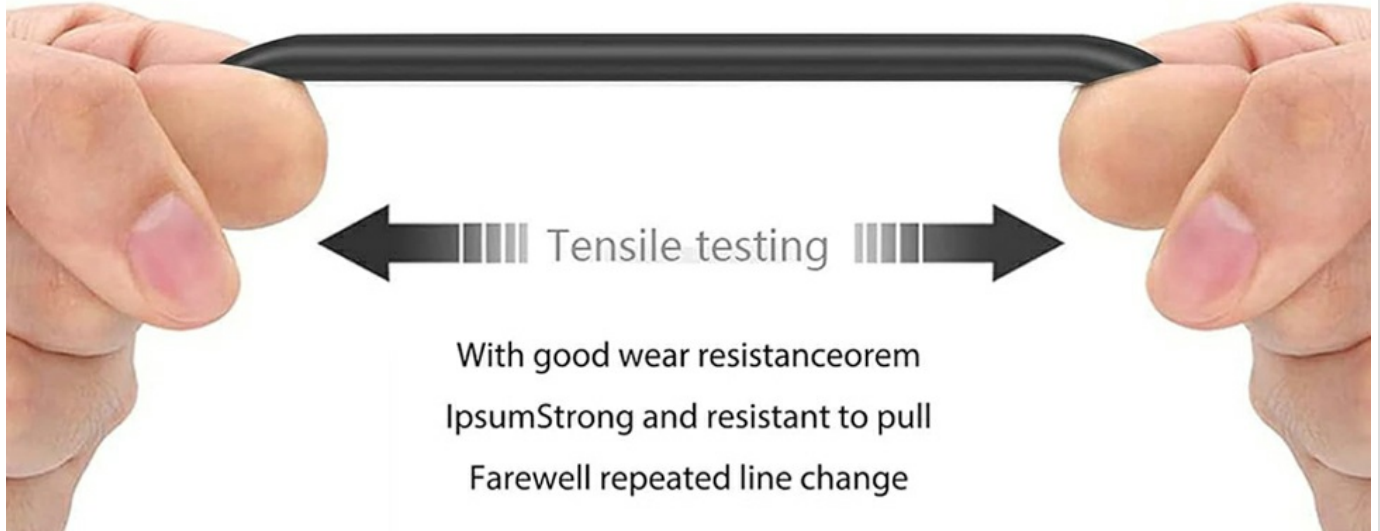


Image: An illustration showcasing the flexible and durable construction of the adapter's power cable, designed for enhanced longevity.

TROUBLESHOOTING

If you encounter issues with your UpBright 18V AC/DC Adapter, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Device not powering on	Loose connection, incompatible device, faulty outlet, damaged adapter/cable.	Ensure all connections are secure. Verify device voltage and connector size. Test the outlet with another device. Inspect adapter and cable for visible damage.
Adapter feels hot during use	Normal operation, excessive load, poor ventilation.	A slight warmth is normal. Ensure the adapter is not covered and has adequate ventilation. If excessively hot, disconnect immediately and contact support.
Intermittent power supply	Loose connection, damaged cable, unstable power source.	Check all connections. Inspect the cable for damage. Try a different power outlet.

SPECIFICATIONS

Key technical specifications for the UpBright 18V AC/DC Adapter:

Feature	Detail
Brand	UPBRIGHT
Input Voltage	100-240VAC, 50/60Hz

Feature	Detail
Output Current	3.5 Amps
Output Voltage	18V DC
Connector Type	Barrel Round Connector (5.5 x 2.1mm)
Compatible Devices	Singing Machine Karaoke Systems (SDL9035, SDL9037, SDL9039, SDL9040)
Special Features	OVP, OCP, SCP Protection
Product Dimensions	6 x 3 x 2 inches
Item Weight	9.9 ounces

WARRANTY INFORMATION

Your UpBright 18V AC/DC Adapter comes with the following warranty and return policy:

- **30-Day Refund:** UpBright offers a 30-day refund policy from the date of purchase.
- **24-Month Exchange:** The product is eligible for a 24-month exchange for any manufacturing defects or malfunctions.

Please retain your proof of purchase for warranty claims.



Image: An example of an UpBright Limited Warranty Certificate.

SUPPORT

For further assistance, technical support, or warranty claims, please contact UpBright customer service through the retailer where the product was purchased or visit the official UpBright website for contact information. When contacting support, please have your product model number and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B06XJ1YBXY>

More documents and user manuals: <https://manuals.plus/>