Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Ingenuity /
- > Ingenuity Bella Teddy Portable Baby Swing Instruction Manual

Ingenuity 11023

Ingenuity Bella Teddy Portable Baby Swing Instruction Manual

Model: 11023 | Brand: Ingenuity

1. Introduction

The Ingenuity Bella Teddy Portable Baby Swing is designed to provide comfort and entertainment for your infant. Featuring luxurious plush fabrics, a removable headrest, and a 5-point safety harness, this swing offers a secure and soothing environment. It includes 5 swing speeds, 8 melodies, and 3 nature sounds to calm your child. Advanced technologies like Hybridrive™ extend battery life, TrueSpeed™ maintains consistent swing speed, and WhisperQuiet™ ensures silent operation. The SlimFold™ design allows for easy storage and transport. This manual provides essential information for safe assembly, operation, and maintenance of your swing.



Image: The Ingenuity Bella Teddy Portable Baby Swing in its assembled state, showcasing its grey and white plush seat, sturdy frame, and overhead toy bar.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- NEVER leave child unattended.
- NEVER use this product as a sleeping device. This product is not intended for prolonged sleep.
- ALWAYS use the restraint system. Ensure the 5-point harness is securely fastened and properly adjusted to fit your child.
- DO NOT use this product once your child can sit up unaided or weighs more than 20 lbs (9 kg).
- DO NOT move or lift the product with the child inside.

- Ensure the product is placed on a flat, level surface.
- Keep away from open flames and other sources of strong heat.
- Regularly inspect the product for loose fasteners, damaged joints, or broken parts. Discontinue use if any damage is found.

3. PACKAGE CONTENTS

Before assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, do not use the product and contact customer service.

- · Portable Baby Swing Frame
- Plush Seat Pad with 5-point Harness
- Removable Headrest
- · Overhead Toy Bar
- 2 Plush Toys (hanging from toy bar)

4. SETUP

4.1 Assembly

Follow the detailed instructions provided in the separate assembly guide for proper setup of the swing frame and attachment of the seat pad and toy bar. Ensure all connections click into place securely.

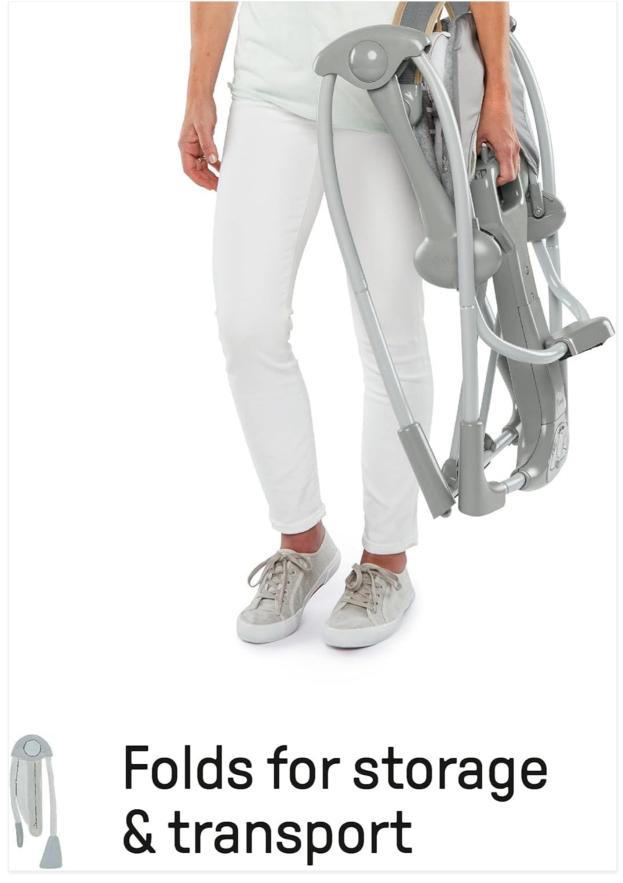


Image: A person holding the Ingenuity Bella Teddy swing in its folded position, demonstrating its compact design for storage and transport.

4.2 Battery Installation

The swing requires 4 D batteries (not included) for operation. Locate the battery compartment on the base of the swing. Use a Phillips head screwdriver to open the battery cover. Insert the batteries, ensuring correct polarity (+/-). Replace the cover and secure with the screw.



Image: A close-up view of the swing's control panel and the open battery compartment, showing the placement of D batteries and a screwdriver.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel located on the base of the swing.



Image: The Ingenuity Bella Teddy swing with visual callouts highlighting features such as the shoulder strap cushion, premium fabrics, quiet motor with timer, and the use of 4 D batteries.

5.1 Powering On/Off

Press the power button on the control panel to turn the swing on or off.

5.2 Adjusting Swing Speed

The swing offers 5 different speeds. Use the speed adjustment buttons on the control panel to increase or decrease the swing motion. The TrueSpeed™ technology ensures the selected speed remains consistent as your child grows.

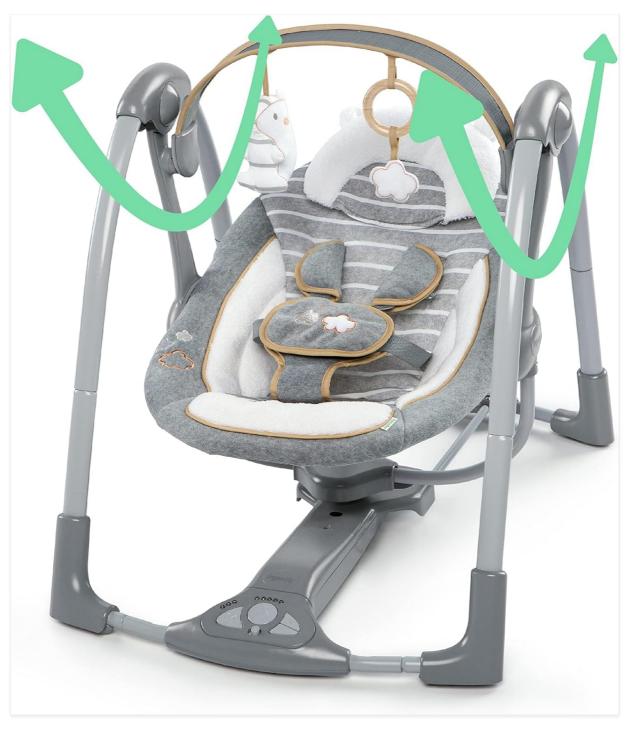


Image: The Ingenuity Bella Teddy swing with green arrows illustrating the gentle back-and-forth swinging motion.

5.3 Music and Sounds

Select from 8 melodies and 3 nature sounds using the dedicated buttons on the control panel. Adjust the volume to a comfortable level for your child. The WhisperQuiet™ technology ensures a peaceful environment.

5.4 Timer Function

Set the swing timer for 30, 45, or 60 minutes using the timer button. This feature allows the swing to operate for a set duration before automatically turning off.

5.5 Toy Bar

The overhead toy bar includes two plush toys designed to engage and entertain your child. The toy bar can be rotated for easy access to your child.



Image: A close-up of a happy baby sitting comfortably in the Ingenuity Bella Teddy swing, looking towards the camera with a smile, with the toy bar visible above.

6. MAINTENANCE AND CARE

6.1 Cleaning Instructions

To keep your Ingenuity Bella Teddy swing clean and hygienic:

- Seat Pad and Headrest: The plush seat pad and removable headrest are machine washable. Wash in cold water on a delicate cycle. Do not bleach. Tumble dry on low heat.
- Frame: Wipe the swing frame with a soft, damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- Toys: Surface wash the plush toys with a damp cloth and mild soap. Air dry.



Image: A laundry basket filled with clothes resting on top of a white washing machine, illustrating the ease of cleaning the fabric components.

7. TROUBLESHOOTING

If you encounter issues with your Ingenuity Bella Teddy swing, refer to the following common solutions:

Problem	Possible Cause	Solution
Swing does not turn on.	Batteries are dead or incorrectly installed.	Replace batteries with new D batteries, ensuring correct polarity.
Swing motion is weak or inconsistent.	Low battery power; child's weight exceeds limit.	Replace batteries. Ensure child's weight is within the 20 lbs (9 kg) limit.
Music/sounds are not playing.	Volume is too low; batteries are low.	Increase volume. Replace batteries if necessary.
Swing makes unusual noises.	Loose parts; obstruction.	Check all connections for secure fit. Ensure no objects are interfering with the swing mechanism.

8. Specifications

Detailed technical specifications for the Ingenuity Bella Teddy Portable Baby Swing:

Feature	Detail
Model Number	11023
Product Dimensions (L x W x H)	77.47 x 53.34 x 60.96 cm (30.5 x 21 x 24 inches)
Product Weight	5.04 kg (11.11 lbs)
Minimum Recommended Weight	6 lbs
Maximum Suggested Weight	20 lbs (9 kg)
Maximum Age	Approximately 9 months (or until child can sit up unaided)
Power Source	Battery Powered
Batteries Required	4 D batteries (not included)
Battery Life (Approx.)	12 Hours (with Hybridrive™ technology)
Fabric Type	60% Metal, 32% Plastic, 8% Polyester
Material Composition	Polyester (Plush fabrics)
Care Instructions	Seat pad & headrest: Machine wash cold, delicate cycle.
Swing Speeds	5
Melodies	8
Nature Sounds	3
Timer Settings	30, 45, 60 minutes
Safety Harness	5-point
Portability	Foldable (SlimFold™ design)
UPC	074451110236



Image: The Ingenuity Bella Teddy swing with overlaid text indicating its dimensions (24 inches / 60.96 cm height, 30.5 inches / 77.47 cm length, 21 inches / 53.34 cm width) and maximum weight/age limits (Max Weight: 20 lb / 9 kg, Max Age: 9 mos.).

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product packaging or visit the official Ingenuity website. For customer support, product registration, or to purchase replacement parts, please contact Ingenuity customer service through their official channels. Keep your purchase receipt for warranty claims.

Online Support: Visit the official Ingenuity website for FAQs and support resources. www.kids2.com/ingenuity

Related Documents - 11023



Ingenuity Collection Swing 'n Go Portable Swing - Bella Teddy User Manual

User manual and safety instructions for the Ingenuity Collection Swing 'n Go Portable Swing, Bella Teddy model. Includes assembly, care, battery information, and operating instructions.

Ingenuity InLighten Soothing Swing - Van Elephant User Manual

User manual for the Ingenuity InLighten Soothing Swing in the Van Elephant design. Provides instructions on assembly, use, safety warnings, and care.



Ingenuity InLighten Soothing Swing - Kitt™ User Manual and Safety Guide

This comprehensive user manual provides detailed instructions for assembling, using, and caring for the Ingenuity InLighten Soothing Swing - Kitt™. It includes essential safety warnings, operational guidance for the control module, and maintenance tips, presented in English, Spanish, and French.



Ingenuity Boutique Collection Rocking Seat - Bella Teddy User Manual

Comprehensive user manual for the Ingenuity Boutique Collection Rocking Seat in Bella Teddy design, covering assembly, care, safety, and battery information.



Ingenuity SimpleComfort Compact Soothing Swing - Everston User Manual

User manual and instructions for the Ingenuity SimpleComfort Compact Soothing Swing - Everston model (11149-MEES). Includes safety warnings, assembly, battery information, care, and usage details for this baby swing by Ingenuity (Kids2).



Ingenuity ConvertMe Swing-2-Seat 60100 User Manual

Comprehensive user manual for the Ingenuity ConvertMe Swing-2-Seat (Model 60100), including safety warnings, assembly instructions, parts list, battery information, care guidelines, and regulatory compliance.