

## Konstsmide 2864-000

# Konstsmide Dickensian Carol Singers Water-Filled LED Lantern

Model: 2864-000

## INTRODUCTION

Thank you for choosing the Konstsmide Dickensian Carol Singers Water-Filled LED Lantern. This battery-operated decorative lantern features a warm white LED light, a water spinner that creates a glitter snow effect, and a timer function. Designed for indoor use, this product brings a festive ambiance to any setting.

Please read this instruction manual carefully before setup and operation to ensure safe and correct use of your lantern. Keep this manual for future reference.

## SAFETY INFORMATION

- This product is designed for **indoor use only** (IP20 rated). Do not expose to water or moisture.
- Use only the specified battery type and voltage (3 x C 1.5V batteries).
- Ensure batteries are inserted with correct polarity (+/-). Incorrect insertion can cause damage.
- Do not mix old and new batteries, or different types of batteries.
- Remove exhausted batteries promptly to prevent leakage and damage.
- If the product is not used for an extended period, remove the batteries.
- Keep batteries out of reach of children.
- Do not attempt to open or modify the lantern. There are no user-serviceable parts inside.

## SETUP

### 1. Unpacking

Carefully remove the lantern from its packaging. Inspect the product for any signs of damage. If any damage is found, do not use the product and contact your retailer.

### 2. Battery Installation

The lantern requires 3 x C 1.5V batteries (not included).

1. Locate the battery compartment on the underside of the lantern's base.
2. Open the battery compartment cover by releasing the clip closure. No tools are required.
3. Insert 3 C 1.5V batteries, ensuring that the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Securely close the battery compartment cover until the clip engages.



Rear view of the lantern, highlighting the battery compartment located at the base. This is where 3 C batteries are inserted.

## OPERATING INSTRUCTIONS

### Powering On and Timer Function

The lantern is equipped with a power switch, typically located on the base, which offers multiple settings:

- **OFF:** Turns the lantern completely off.
- **ON:** Activates the lantern for continuous illumination and glitter swirling.
- **TIMER:** Engages the built-in 5-hour timer function. When set to 'TIMER', the lantern will illuminate for 5 hours, then automatically turn off for 19 hours. This cycle will repeat daily from the time you first activate

the timer.

Once powered on (either 'ON' or 'TIMER' mode), the warm white LEDs will light up the Dickensian carol singers scene, and the internal motor will begin to swirl the glitter within the water, creating a dynamic snow shower effect.





The Konstsmide 2864-000 lantern, showcasing the Dickensian carol singers scene illuminated by warm white LEDs, with glitter swirling.



The Konstsmide lantern displayed in a typical indoor setting, demonstrating its size and appearance when placed on furniture.

## Cleaning

To clean the lantern, gently wipe the exterior surfaces with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as this may damage the finish or internal components. Ensure the lantern is switched off and batteries are removed before cleaning.

## Battery Replacement

The batteries provide approximately 80 hours of use. Replace the batteries when the LED light dims significantly or the glitter swirling mechanism weakens. Follow the battery installation steps outlined in the 'Setup' section to replace the 3 x C 1.5V batteries.

## Storage

When storing the lantern for an extended period, ensure the batteries are removed to prevent potential leakage and damage. Store the lantern in a cool, dry place, away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

- **Lantern does not light up or glitter does not swirl:**
  - Check if the power switch is set to 'ON' or 'TIMER'.
  - Verify that the batteries are inserted correctly with the correct polarity.
  - Replace old or depleted batteries with new ones.
- **Light is dim or glitter swirling is weak:**
  - This indicates low battery power. Replace all 3 C batteries.

## SPECIFICATIONS

<b>Brand</b>	Konstsmide
<b>Model Number</b>	2864-000
<b>Product Dimensions</b>	10.83" L x 4.13" W x 10.83" H (approx. 27cm H x 10cm W)
<b>Item Weight</b>	1.66 kg (3.65 lbs)
<b>Material</b>	Plastic (with Dickensian Scene figures)
<b>Light Source</b>	Warm White LEDs
<b>Power Source</b>	3 x C 1.5V Batteries (not included)
<b>Timer Function</b>	5 hours ON / 19 hours OFF (daily cycle)
<b>Protection Class</b>	IP20 (Indoor Use Only)

## WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. Konstsmide products are manufactured to high-quality standards.

If you encounter any issues or require further assistance, please contact the retailer from whom you purchased the product or visit the official Konstsmide website for support information.

