

[Manuals.plus](#) /

› [Mainstays](#) /

› Mainstays 6-Inch Desk/Clip Electric Fan User Manual

Mainstays 6-Inch Desk/Clip Electric Fan

Mainstays 6-Inch Desk/Clip Electric Fan User Manual

Model: 6-Inch Desk/Clip Electric Fan (ASIN: B06XJG4PHZ)

Brand: Mainstays

1. INTRODUCTION

Thank you for purchasing the Mainstays 6-Inch Desk/Clip Electric Fan. This manual provides important information regarding the safe operation, setup, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the fan from the power outlet before cleaning or performing any maintenance.
- Do not immerse the fan, plug, or cord in water or other liquids.
- Do not operate any fan with a damaged cord or plug, or after the fan malfunctions or has been dropped or damaged in any manner.
- Keep the fan out of reach of children and pets.
- Ensure the fan is placed on a stable, flat surface when used as a desk fan, or securely clipped when used as a clip fan.
- Do not insert fingers or any objects through the grille when the fan is operating.
- Do not use outdoors or in wet locations.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Mainstays 6-Inch Fan Unit (with attached power cord)
- Detachable Desk Stand
- Detachable Clip Attachment



Image: All components of the Mainstays 6-Inch Desk/Clip Electric Fan, including the fan unit, the separate desk stand, and the clip attachment.

4. SETUP

4.1. Desk Fan Setup

1. Align the fan unit with the opening on the desk stand.
2. Gently push the fan unit into the desk stand until it clicks securely into place. No tools are required for assembly.
3. Place the assembled fan on a stable, flat surface.

4.2. Clip Fan Setup

1. If the fan is currently attached to the desk stand, gently pull the fan unit out of the desk stand.
2. Align the fan unit with the opening on the clip attachment.
3. Gently push the fan unit into the clip attachment until it clicks securely into place.
4. Securely clip the fan to a sturdy surface, ensuring it is stable and will not fall.



Image: The Mainstays 6-Inch Desk/Clip Electric Fan set up in desk mode, demonstrating its compact size and silver finish on a typical desk environment.

5. OPERATION

1. Plug the fan's power cord into a standard electrical outlet.
2. Locate the speed control switch, typically on the back or base of the fan.
3. Turn the switch to the desired speed setting. This fan features **2 speeds** for varying airflow needs.
4. To adjust the airflow direction, gently tilt the fan head up or down. The fan features a **pivoting head** for optimal air circulation.
5. To turn off the fan, set the speed control switch to the 'OFF' position and unplug from the outlet when not in use for extended periods.

6. MAINTENANCE

6.1. Cleaning

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan.
- Do not use abrasive cleaners or harsh chemicals, as they may damage the fan's finish.
- For dust accumulation on the blades or inside the grille, use a vacuum cleaner with a brush attachment or compressed air to gently remove dust. Do not attempt to disassemble the fan for cleaning.
- Ensure the fan is completely dry before plugging it back in.

6.2. Storage

When not in use, store the fan in a cool, dry place, preferably in its original packaging to protect it from dust and damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; Power outlet not working; Fan switch is off.	Ensure the fan is securely plugged into a working outlet; Check the circuit breaker; Turn the fan switch to 'ON' or a speed setting.

Problem	Possible Cause	Solution
Weak airflow.	Fan blades are dirty; Fan is on low speed setting.	Clean the fan blades and grille (refer to Maintenance section); Increase the fan speed setting.
Unusual noise.	Fan not on a stable surface; Obstruction in fan blades.	Ensure the fan is on a stable, flat surface or securely clipped; Unplug the fan and check for any obstructions around the blades.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	7.28 x 6.81 x 6.69 inches (Package)
Item Weight	1.85 pounds
Power Source	Corded Electric
Number of Speeds	2
Blade Diameter	6-Inch (15.2 cm)
Blade Material	Plastic
Fan Head Adjustment	Pivoting/Tilt Adjustable
Mounting Type	Desk Stand or Clip
Recommended Uses	Air Circulation (Home Office, Bedroom, Dorm Rooms)

9. WARRANTY & SUPPORT

This Mainstays 6-Inch Desk/Clip Electric Fan comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal use. It does not cover damage resulting from accident, misuse, abuse, or unauthorized modification.

For warranty claims or technical support, please contact the retailer where the product was purchased or refer to the contact information provided on the product packaging.



Image: Product packaging highlighting key features such as 6-inch blade diameter, 2 speeds, pivoting head, and 1-year limited warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B06XJG4PHZ>

More documents and user manuals: <https://manuals.plus/>