

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT Replacement Remote Control User Manual for Roku Player LT HD XD XS 1 2 3 4

USARMT 4330255061

USARMT Replacement Remote Control User Manual

Model: 4330255061

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your new USARMT replacement remote control for Roku media players. Please read this guide thoroughly to ensure proper use and to maximize the lifespan of your device.

COMPATIBILITY

This remote control is designed as a direct replacement and is compatible with the following Roku media player models:

- Roku Player LT
- Roku Player HD
- Roku Player XD
- Roku Player XS
- Roku Player 1
- Roku Player 2
- Roku Player 3
- Roku Player 4

Important Compatibility Notes:

- This remote does **NOT** support Roku Streaming Stick players.
- This remote does **NOT** support HDMI sticks.
- This remote does **NOT** support any TCL Roku TV models.
- This remote does **NOT** have a pairing button.
- This remote does **NOT** have volume control buttons.
- This remote does **NOT** have a power button for the TV or Roku device.

SETUP

Setting up your USARMT replacement remote is straightforward and requires no programming.

1. **Install Batteries:** Open the battery compartment cover on the back of the remote. Insert two new AAA batteries (not included), ensuring the correct polarity (+/-) as indicated inside the compartment.

2. **Close Compartment:** Securely close the battery compartment cover.
3. **Ready to Use:** The remote is now ready for immediate use with your compatible Roku media player. No additional pairing or programming is required.





Figure 1: Front view of the USARMT replacement Roku remote control, showing the directional pad, playback controls, and dedicated streaming service buttons.

OPERATING INSTRUCTIONS

This remote operates using Infrared (IR) technology. For optimal performance, ensure a clear line of sight between the remote and your Roku media player.

- **Point and Use:** Point the remote directly towards your Roku media player when pressing buttons.
- **Navigation:** Use the directional pad (up, down, left, right) and the 'OK' button in the center to navigate menus and select options on your Roku device.
- **Playback Controls:** Utilize the dedicated playback buttons (Rewind, Play/Pause, Fast Forward) for media control.
- **Shortcut Buttons:** The remote features six dedicated shortcut buttons for popular streaming services. Pressing these buttons will directly launch the corresponding application on your Roku player.





Figure 2: Angled view of the USARMT replacement Roku remote control, highlighting its ergonomic design and button layout.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases. Always use new, high-quality AAA batteries.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote, please refer to the following common solutions:

- **Remote Not Responding:**

- Ensure new batteries are correctly installed.
- Check for a clear line of sight between the remote and the Roku player. Obstructions can block the IR signal.
- Verify that your Roku player is powered on.

• **Buttons Seem Unresponsive or Double-Press:**

- This can sometimes occur with IR remotes. Try pressing buttons firmly and deliberately.
- Ensure batteries are not low, as weak power can affect signal consistency.

• **Remote Does Not Control TV Volume/Power:**

- As stated in the compatibility section, this remote does not have volume or power control functions for your TV or Roku device. These functions must be managed by your TV's original remote or through the Roku interface if supported by your specific Roku model.

• **Remote Does Not Work with Roku Stick/TCL Roku TV:**

- This remote is specifically designed for Roku media player boxes (LT, HD, XD, XS, 1, 2, 3, 4) and is not compatible with Roku Streaming Sticks or integrated Roku TVs (e.g., TCL Roku TVs). Please confirm your Roku device model.

SPECIFICATIONS

Brand	USARMT
Model Number	4330255061
Compatible Devices	Roku Media Player (LT, HD, XD, XS, 1, 2, 3, 4)
Max Number of Supported Devices	1
Color	Black, Blue
Special Feature	Ergonomic
Item Weight	1.58 ounces
Package Dimensions	5.5 x 1.7 x 0.3 inches
Date First Available	March 12, 2017

WARRANTY AND SUPPORT

Your USARMT replacement remote control comes with a **1-month worry-free return warranty** from the date of purchase. If you experience any issues or have questions not covered in this manual, please contact your retailer or the USARMT customer support for assistance.

© 2024 USARMT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B06XJH4Q2K>

More documents and user manuals: **<https://manuals.plus/>**