

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Qilive](#) /

› [Qilive Q.1743 Universal Remote Control User Manual](#)

## Qilive Q.1743

# Qilive Q.1743 Universal Remote Control User Manual

Model: Q.1743

## INTRODUCTION

Thank you for choosing the Qilive Q.1743 Universal Remote Control. This remote is designed to simplify your home entertainment experience by consolidating control of up to eight different infrared-controlled devices into a single, easy-to-use unit. Please read this manual carefully to ensure proper setup and operation of your new remote control.

## PRODUCT OVERVIEW

The Qilive Q.1743 features a comprehensive layout of buttons for intuitive control. Below is an image of the remote control, highlighting its design and key button areas.



*Image: The Qilive Q.1743 Universal Remote Control, shown in its clear plastic packaging. The remote is silver-gray with dark gray buttons, including a red power button, device selection buttons (TV1, TV2, SAT, DVD, HD, CD, AUX, DVB), number pad, navigation cluster with an 'OK' button, and various function buttons like Mute, Info, Vol, Ch, and AV. The packaging also displays the 'Qilive Universal Remote Control Q.1743' branding.*

## Key Button Areas:

- **Power Button:** Located at the top left, typically red, for turning devices on/off.
- **Device Selection Buttons:** Buttons like TV1, TV2, SAT, DVD, HD, CD, AUX, DVB to select the device you wish to control.
- **Number Pad:** For direct channel entry and other numerical inputs.
- **Navigation Cluster:** Includes directional arrows and an 'OK' button for menu navigation.
- **Volume and Channel Control:** Dedicated buttons for adjusting volume and changing channels.
- **Function Buttons:** Such as Mute, Info, AV (input selection), and playback controls.

## SETUP

---

### 1. Battery Installation

The Qilive Q.1743 remote control requires AA batteries for operation. Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or lift the cover to open the compartment.
3. Insert the required AA batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover securely.

### 2. Programming the Remote Control

The Q.1743 is a universal remote and needs to be programmed to control your specific devices. There are typically two main methods for programming:

#### Method A: Direct Code Entry

This method requires a specific code for your device's brand. Refer to the code list provided with your remote (if applicable) or search online for universal remote codes for your device brand.

1. Turn on the device you wish to control (e.g., TV, DVD player).
2. Press and hold the **SET** button on the remote until the indicator light illuminates.
3. Press the device button you want to program (e.g., **TV1** for your television). The indicator light may blink.
4. Enter the 3 or 4-digit code for your device's brand using the number pad.
5. If the code is correct, the indicator light should turn off. Test the remote by pressing the **Power** button. If the device turns off, the programming was successful.
6. If the device does not respond, try the next code listed for your brand.

#### Method B: Auto Code Search

If you cannot find a code or prefer not to use direct entry, the remote can search for the correct code automatically.

1. Turn on the device you wish to control.
2. Press and hold the **SET** button until the indicator light illuminates.
3. Press the device button you want to program (e.g., **DVD** for your DVD player).

4. Point the remote at the device and repeatedly press the **Power** button (or **CH+** for channel search) slowly, waiting for the device to respond (turn off or change channel).
5. Once the device responds, immediately press the **SET** button to save the code. The indicator light should turn off.
6. Test the remote's functions. If some functions do not work, you may need to repeat the auto-search process to find a more compatible code.

## OPERATING INSTRUCTIONS

Once programmed, operating the Qilive Q.1743 is straightforward.

1. **Select Device:** Press the corresponding device button (e.g., **TV1**, **SAT**, **DVD**) for the device you wish to control. The remote will now send commands for that specific device.
2. **Power On/Off:** Press the **Power** button to turn the selected device on or off.
3. **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the volume.
4. **Channel Control:** Use the **CH+** and **CH-** buttons to change channels.
5. **Number Pad:** Use the number buttons (0-9) for direct channel entry or other numerical inputs.
6. **Mute:** Press the **MUTE** button to silence the audio.
7. **Input/Source:** Use the **AV** button to cycle through input sources on your TV or receiver.
8. **Navigation:** Use the directional arrows (up, down, left, right) and the **OK** button to navigate menus and confirm selections.
9. **Info:** Press the **INFO** button to display program information (if supported by the device).
10. **Playback Controls:** Use buttons like Play, Pause, Stop, Fast Forward, Rewind, Skip for media playback (typically for DVD/Blu-ray players, VCRs, etc.).

## MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or the indicator light does not illuminate. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not work.	Batteries are dead or inserted incorrectly.	Check battery polarity or replace batteries.
Remote does not control device.	Remote is not programmed correctly for the device.	Reprogram the remote using direct code entry or auto code search. Ensure the correct device button is selected.
Only some functions work.	The programmed code is partially compatible.	Try another code for your device brand, or perform auto code search again.
Indicator light does not illuminate.	Batteries are low or dead.	Replace batteries.

Problem	Possible Cause	Solution
Remote range is poor.	Low batteries or obstruction.	Replace batteries. Ensure no objects are blocking the line of sight between the remote and the device's IR sensor.

## SPECIFICATIONS

- Model:** Q.1743
- Connectivity Technology:** Infrared Wireless
- Number of Supported Devices:** Up to 8
- Input Type:** Push Buttons
- Maximum Range:** Approximately 10 meters (33 feet)
- Power Source:** AA Batteries (Battery description: AA)
- Item Weight:** Approximately 116 grams (0.25 lbs)
- Color:** Gray
- Manufacturer:** Qilive

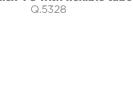
## WARRANTY AND SUPPORT

For warranty information or technical support regarding your Qilive Q.1743 Universal Remote Control, please refer to the warranty card included with your purchase or contact Qilive customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.

Keep your purchase receipt as proof of purchase for warranty claims.

## Related Documents - Q.1743

  Télécommande universelle 2-en-1 Q.1540 <small>  Universal remote control 2 in 1   Mando a distancia universal 2 en 1   Comando remoto Universal 2 en 1   Pilot universel 2 en 1   Universális távirányító 2 az 1-ben   Telecomandă universală 2 în 1         </small>	<p><a href="#">Télécommande Universelle Qilive 2-en-1 Q.1540 : Guide d'Utilisation</a></p> <p>Manuel complet pour la télécommande universelle Qilive 2-en-1 (modèle Q.1540). Apprenez à configurer, utiliser la fonction d'apprentissage et comprendre les garanties Qilive.</p>
  Air fryer Q.5248 <small>  Air fryer   Friteuse à air   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira de ar   Fritadeira</small>	

 <p><b>Qilive</b> Air fryer Q.5582</p> <ul style="list-style-type: none"> <li>• Fritadeira sem óleo</li> <li>• Fritadeira de Fritar</li> <li>• Fritadeira portátil</li> <li>• Fritadeira elétrica</li> <li>• Fritadeira de ar</li> <li>• Fritadeira de óleo</li> <li>• Fritadeira de óleo</li> </ul>	<p><a href="#"><u>Qilive Air Fryer Q.5582 User Manual</u></a></p> <p>Comprehensive user manual for the Qilive Air Fryer Q.5582, covering safety instructions, technical specifications, product description, operation, cleaning, care, and guarantees. Learn how to use and maintain your Qilive air fryer for optimal results.</p>
 <p><b>Qilive</b> Handstick VC with flexible tube Q.5328</p>	<p><a href="#"><u>Qilive Handstick VC with Flexible Tube Q.5328 User Manual   Instructions &amp; Guide</u></a></p> <p>Download the Qilive Handstick VC (Q.5328) user manual. Find comprehensive instructions on setup, operation, maintenance, safety guidelines, and technical specifications for your Qilive vacuum cleaner.</p>
 <p><b>Qilive</b> Portable radio Q.1766</p> <ul style="list-style-type: none"> <li>• Fazenda sem fio</li> <li>• Fazenda portátil</li> <li>• Fazenda de rádio</li> </ul>	<p><a href="#"><u>Qilive Q.1766 Portable Radio User Manual and Guide</u></a></p> <p>Explore the features and usage of the Qilive Q.1766 portable radio. This comprehensive guide covers setup, operation, safety, and maintenance for your Qilive portable radio.</p>
 <p><b>Qilive</b></p>	<p><a href="#"><u>Qilive Nose Trimmer User Manual and Safety Instructions</u></a></p> <p>Comprehensive user manual for the Qilive Nose Trimmer, covering safety instructions, product overview, battery installation, usage, cleaning, and disposal information.</p>