

Manuals.plus /
› Jocca /
› Jocca Electric Italian Coffee Maker User Manual

Jocca 5449R

Jocca Electric Italian Coffee Maker User Manual

Model: 5449R | Brand: Jocca

1. INTRODUCTION

Thank you for choosing the Jocca Electric Italian Coffee Maker. This appliance is designed to brew delicious Italian-style coffee with convenience and ease. Featuring a 6-cup capacity, a 360° rotating base, and a keep-warm function, it is a practical addition to any kitchen. Please read this manual carefully before first use to ensure safe operation and optimal performance.



Image 1.1: The Jocca Electric Italian Coffee Maker, showcasing its red base and transparent upper carafe.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against electrical hazards, do not immerse the cord, plugs, or the appliance base in water or other liquids. The upper carafe and filter components can be washed.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- Ensure the water level does not exceed the safety valve in the lower chamber.
- The appliance features overheat protection. If the unit overheats, it will automatically shut off.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Jocca Electric Italian Coffee Maker:

1. **Upper Carafe:** Transparent container for collecting brewed coffee, with an insulated handle.
2. **Filter Funnel:** Holds the ground coffee.
3. **Gasket and Filter Plate:** Ensures a sealed brewing chamber.
4. **Lower Water Reservoir:** Holds the water for brewing. Features a safety valve.
5. **Heating Base:** The electric base with a 360° rotating design.
6. **ON/OFF Button:** Located on the heating base, with an indicator light.
7. **Power Cord:** Connects the heating base to the electrical outlet.



Image 3.1: Detail of the appliance's base, highlighting the Jocca logo and the ON/OFF button.

4. SETUP

Before using your coffee maker for the first time:

1. **Unpack:** Carefully remove all packaging materials and inspect the appliance for any damage.
2. **Initial Cleaning:** Wash the upper carafe, filter funnel, gasket, and lower water reservoir with warm soapy water. Rinse thoroughly and dry completely. Do not immerse the heating base in water.
3. **First Brew (Cleaning Cycle):** To remove any manufacturing residues, perform a brewing cycle using only water. Fill the lower reservoir with water up to the safety valve, assemble the unit without coffee, and run a full cycle. Discard this water. Repeat this process 2-3 times.

4. **Placement:** Place the heating base on a stable, flat, heat-resistant surface, away from water sources.
5. **Power Connection:** Ensure the voltage of your electrical outlet matches the appliance's specifications (240V). Plug the power cord into a grounded outlet.

5. OPERATING INSTRUCTIONS

Follow these steps to brew your coffee:

1. **Fill Water Reservoir:** Unscrew the upper carafe from the lower water reservoir. Fill the lower reservoir with cold water up to the level of the safety valve. Do not overfill.
2. **Add Coffee Grounds:** Insert the filter funnel into the lower water reservoir. Fill the filter funnel with medium-fine ground coffee. Do not tamp the coffee. Level the surface gently.
3. **Assemble:** Place the gasket and filter plate on top of the lower reservoir. Carefully screw the upper carafe onto the lower reservoir, ensuring it is tightly sealed to prevent leaks.
4. **Place on Base:** Place the assembled coffee maker onto the 360° rotating heating base.
5. **Start Brewing:** Press the ON/OFF button. The indicator light will illuminate, signifying that the brewing process has started.
6. **Brewing Process:** Water will heat up and be forced through the coffee grounds into the upper carafe. Once the upper carafe is full and the gurgling sound stops, the coffee is ready.
7. **Keep Warm Function:** The appliance will automatically keep the coffee warm after brewing.
8. **Serve:** Carefully remove the coffee maker from the heating base using the insulated handle. Pour and serve your freshly brewed coffee.
9. **Turn Off:** Press the ON/OFF button again to turn off the appliance. The indicator light will turn off.



Image 5.1: The coffee maker in operation, with coffee visible in the upper carafe.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your coffee maker.

- **Daily Cleaning:** After each use, allow the appliance to cool completely. Disassemble the upper carafe, filter funnel, and lower water reservoir. Discard used coffee grounds. Wash these parts with warm soapy water, rinse thoroughly, and dry completely. The detachable carafe design simplifies this process.
- **Heating Base:** Wipe the heating base with a damp cloth. Do not immerse the heating base in water or any other liquid.
- **Gasket:** Periodically check the rubber gasket for wear and tear. Replace if it appears cracked or damaged to ensure a proper seal.
- **Descaling:** Over time, mineral deposits from water can build up. To descale, fill the lower reservoir with a solution of water and white vinegar (1:1 ratio) or a commercial descaling agent. Run a brewing cycle without coffee. Discard

the solution. Repeat with plain water 2-3 times to rinse thoroughly. Descale every 1-3 months depending on water hardness.

- **Storage:** Ensure all parts are clean and dry before storing. Store the coffee maker in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following table:

Problem	Possible Cause	Solution
Coffee does not brew or brews slowly.	Not enough water; coffee grounds too fine or tamped too hard; clogged filter; appliance not plugged in or turned on.	Check water level; use medium-fine grounds and do not tamp; clean filter; ensure power is connected and ON/OFF button is pressed.
Coffee is weak or watery.	Not enough coffee grounds; coffee grounds too coarse; water level too high.	Add more coffee grounds; use finer grounds; ensure water is filled only up to the safety valve.
Leaking during brewing.	Upper carafe not screwed on tightly; gasket is worn or improperly placed.	Ensure the upper carafe is screwed on firmly; check the gasket for proper placement and condition, replace if necessary.
Appliance does not turn on.	No power; faulty ON/OFF button.	Check power outlet and cord connection; press ON/OFF button firmly. If issue persists, contact support.

8. SPECIFICATIONS

Technical details for the Jocca Electric Italian Coffee Maker, Model 5449R:

- **Model Number:** 5449R
- **Brand:** Jocca
- **Color:** Red
- **Capacity:** 320 Milliliters (approx. 6 espresso cups)
- **Power:** 480 Watts
- **Voltage:** 240V
- **Material:** Main body: Durable plastic; Internal components and accents: Stainless steel
- **Dimensions (L x W x H):** 20 x 13 x 25 cm
- **Item Weight:** 1.28 Kilograms
- **Automatic Shut-off:** Yes
- **Special Feature:** Keep Warm Function, 360° Rotating Base, Detachable Carafe
- **Country of Origin:** China
- **Recommended Uses:** Travel (Note: Ensure appropriate voltage converter if used in regions with different voltage standards.)



Image 8.1: Dimensions of the Jocca Electric Italian Coffee Maker.

9. WARRANTY AND SUPPORT

Your Jocca Electric Italian Coffee Maker comes with a **3-year warranty** from the date of purchase, covering manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

For technical support, spare parts inquiries, or warranty claims, please visit the official Jocca website or contact your retailer.

- **Official Website:** www.jocca.es
- **Spare Parts Availability:** Information regarding spare parts availability is currently unavailable.



Image 9.1: The product packaging, which includes warranty information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B06XKHRQQT>

More documents and user manuals: <https://manuals.plus/>