

Sinbo SS-4044

Sinbo SS-4044 Rechargeable Shaver User Manual

Model: SS-4044

1. INTRODUCTION

Thank you for choosing the Sinbo SS-4044 Rechargeable Shaver. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your device. Please read these instructions carefully before using the shaver and retain them for future reference.

2. PRODUCT OVERVIEW

The Sinbo SS-4044 is a rechargeable electric shaver designed for daily use, featuring three rotary shaving heads for a smooth and comfortable shave.





Image 1: Front view of the Sinbo SS-4044 Rechargeable Shaver. The image shows the shaver's ergonomic black and silver body, three circular shaving heads at the top, a power switch below the brand logo, and an orange indicator light at the bottom of the control panel.

Components:

- **Rotary Shaving Heads:** Three independent floating heads for close contact with facial contours.
- **Power Button:** To turn the shaver on and off.
- **Charging Indicator Light:** Illuminates during charging.
- **Power Cord Socket:** For connecting the charging cable.

3. SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please observe the following safety precautions:

- Do not immerse the shaver in water or use it in the shower/bath unless explicitly stated as waterproof (this model is not specified as waterproof).
- Keep the appliance away from children.
- Do not use the shaver if the shaving heads are damaged or broken, as this may cause skin irritation or injury.
- Only use the original charging adapter provided with the shaver.
- Unplug the shaver from the power outlet before cleaning.
- Do not attempt to repair the shaver yourself. Contact authorized service personnel for repairs.

4. CHARGING THE SHAVER

The Sinbo SS-4044 is a rechargeable device. Ensure the shaver is fully charged before its first use to optimize battery life.

1. Ensure the shaver is turned off.
2. Insert the charging cable into the power cord socket on the shaver.
3. Plug the adapter into a suitable electrical outlet.
4. The charging indicator light will illuminate, indicating that the shaver is charging.
5. A full charge typically takes approximately 8 hours. Do not overcharge the device.
6. Once fully charged, unplug the adapter from the wall outlet and then from the shaver.

Note: The shaver cannot be operated while charging.

5. SETUP

Before first use, ensure the shaver is fully charged as described in Section 4. No assembly is required for the main unit.

- Remove all packaging materials.
- Inspect the shaver for any visible damage. If damaged, do not use and contact customer support.
- Ensure the shaving heads are clean and free of debris.

6. OPERATING INSTRUCTIONS

For a Dry Shave:

1. Ensure your face is clean and dry.
2. Press the power button to turn on the shaver.
3. Hold the shaver at a right angle to your skin.
4. Move the shaver in small, circular motions against the direction of hair growth.
5. Stretch your skin with your free hand to make the hairs stand upright for a closer shave.
6. After shaving, press the power button to turn off the shaver.

Tips for Best Results:

- Allow a few weeks for your skin to adapt to a new shaving system.
- For optimal performance, clean the shaving heads after each use.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your shaver.

Daily Cleaning:

1. Turn off the shaver and unplug it from any power source.
2. Gently twist or press the release button (if present) to open the shaving head assembly.
3. Tap out any accumulated hair clippings.
4. Use the provided cleaning brush to remove fine hair particles from the shaving heads and the hair chamber.
5. Close the shaving head assembly securely.

Deep Cleaning (Monthly or as needed):

For a more thorough cleaning, you may carefully rinse the shaving heads under running water if the shaver is designed for wet cleaning. *(Note: The product description does not explicitly state waterproof capabilities. If unsure, only use a dry brush for cleaning.)*

- After rinsing, allow the shaving heads to air dry completely before reassembling or storing the shaver.
- Do not use abrasive cleaning agents or solvents.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for at least 8 hours.
Shaver does not turn on while plugged in.	Safety feature prevents operation during charging.	Unplug the shaver from the power source before attempting to use it.
Poor shaving performance.	Shaving heads are dirty or worn.	Clean the shaving heads thoroughly. Consider replacing shaving heads if they are old or dull.
Shaver makes unusual noise.	Hair clippings or debris caught in the mechanism.	Clean the shaving heads and internal chamber. If the noise persists, contact customer support.

9. SPECIFICATIONS

- **Model:** Sinbo SS-4044
- **Power Source:** Rechargeable Battery
- **Shaving System:** 3 Rotary Heads
- **Charging Time:** Approximately 8 hours (typical)
- **Manufacturer:** Deima (as per product data)

10. DISPOSAL

This product contains a rechargeable battery and electronic components. Do not dispose of the product with general household waste at the end of its service life. Please take it to an official collection point for recycling electrical and electronic equipment. This helps protect the environment and human health.

11. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Sinbo website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question