

Wildgame Innovations VU60

Wildgame Innovations Trail Pad Swipe VU60 SD Card Viewer
INSTRUCTION MANUAL

Model: VU60 | Brand: Wildgame Innovations

Introduction	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty & Support
Safety Information						

1. INTRODUCTION

The Wildgame Innovations Trail Pad Swipe VU60 is a handheld SD card viewer designed for quick and easy review of images and videos captured by your hunting and trail cameras directly in the field. Its compact, water-resistant design and intuitive touch screen interface make it an essential tool for wildlife observation and game tracking.

Key features include:

- **Simple Navigation:** Review images and videos with a swipe of a finger.
- **Compact Design:** Lightweight and ideal for in-field use.
- **Durable Construction:** Heavy-duty, water-resistant housing for outdoor conditions.
- **Intuitive Display:** 4.3-inch touch screen with zoom functionality.
- **File Management:** Easily organize, delete, and format SD card content.
- **Connectivity:** Auxiliary and USB ports for computer or TV viewing (cords not included).



Figure 1: Front of the Wildgame Innovations Trail Pad Swipe VU60 packaging, displaying the device and highlighting its 4.3-inch screen and 1080p video support.



Figure 2: Back of the packaging for the Trail Pad Swipe VU60, providing a summary of features, listing items not included (SD card, batteries, cords), and mentioning the 1-year limited warranty.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the Trail Pad Swipe VU60.
2. Carefully slide open the battery compartment cover.
3. Insert four (4) AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover.

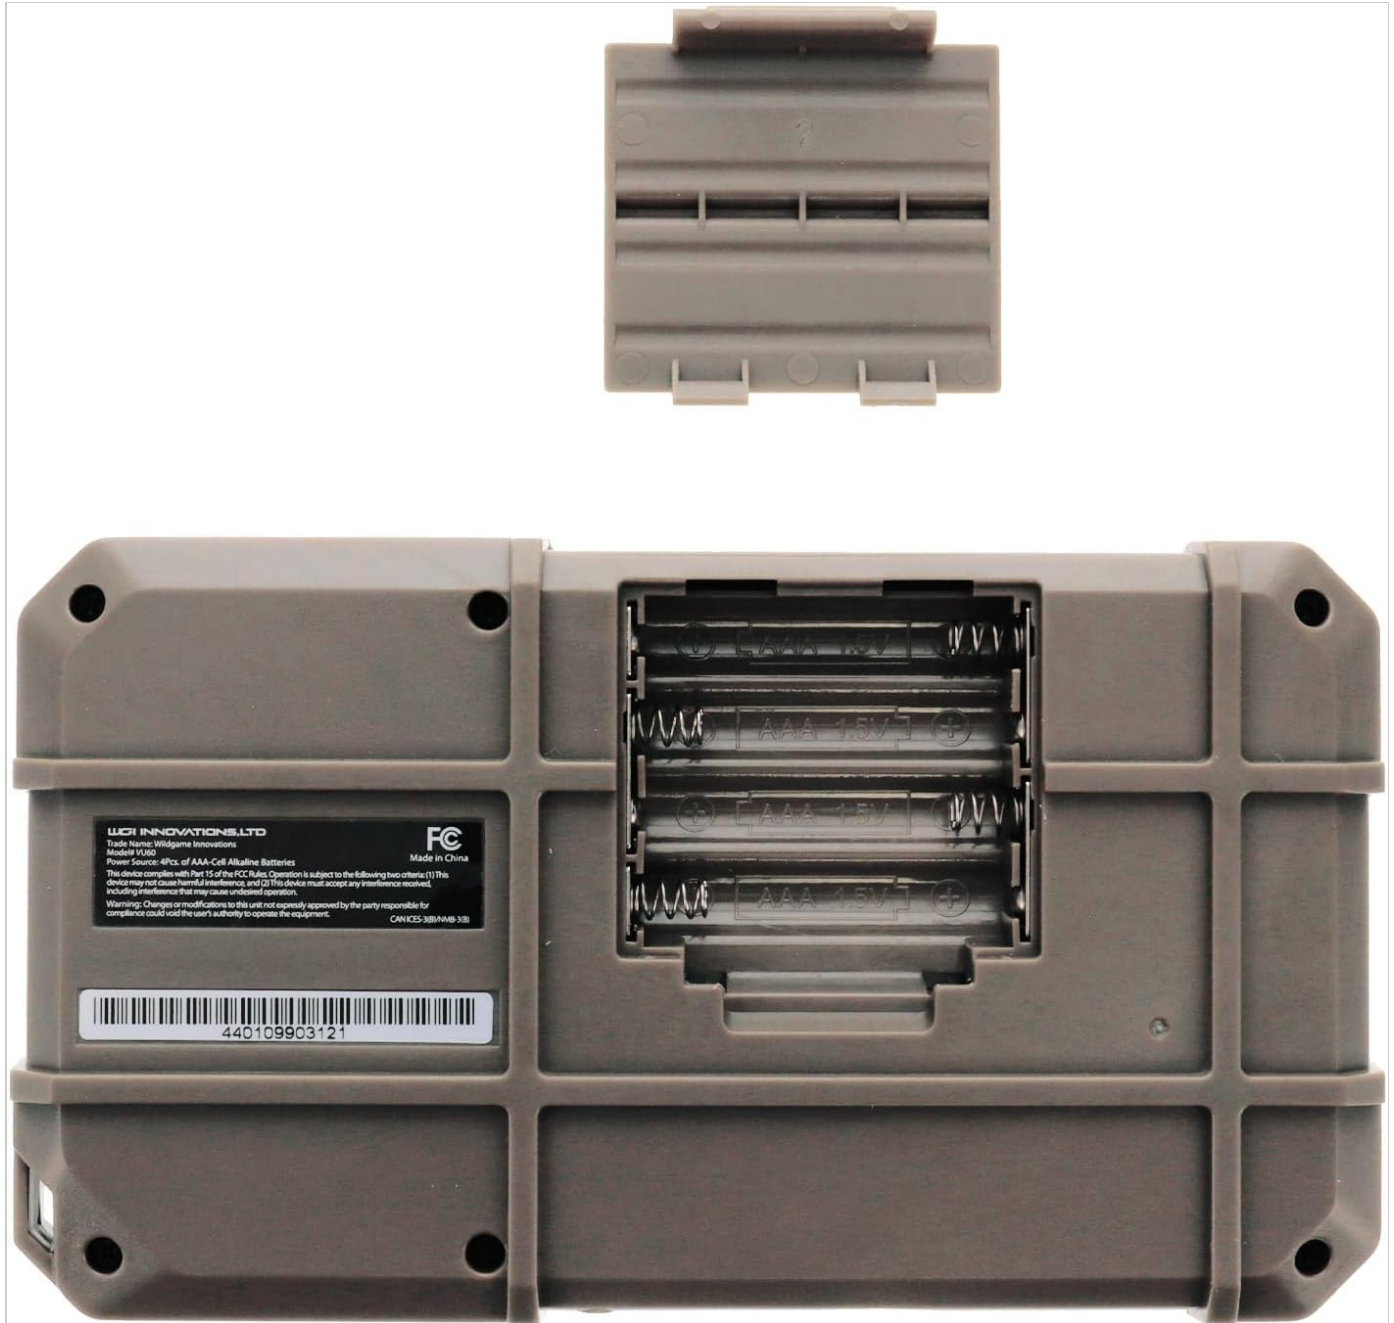


Figure 3: The back of the Trail Pad Swipe VU60, showing the open battery compartment ready for four AAA batteries.

2.2 SD Card Insertion

1. Locate the SD card slot on the side of the device.
2. Insert your SD memory card (up to 32 GB, not included) into the slot until it clicks into place. Ensure the card is oriented correctly.



Figure 4: The side profile of the device, clearly showing the SD card slot, USB port, and headphone jack.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

- To power on the device, press and hold the power button (usually located on the front or side) until the screen illuminates.
- To power off, press and hold the power button again until the screen shuts down.

3.2 Navigation and Media Viewing

- The device features a 4.3-inch color touch screen for intuitive navigation. You can also use the physical push-buttons (OK, Menu, Delete, directional arrows) for control.
- From the main menu, select 'Video' or 'Photo' to browse your media files.
- Swipe left or right on the touch screen to navigate through images and videos.
- Tap on an image or video to view it in full screen.
- Use the zoom in/out functionality on the touch screen to inspect details in photos.



Figure 5: The front of the Wildgame Innovations Trail Pad Swipe VU60, displaying a deer image on its 4.3-inch touch screen, ready for user interaction.

3.3 File Management

- **Deleting Files:** While viewing a photo or video, press the 'Delete' button (trash can icon) to remove the current file. Confirm your selection if prompted.
- **Formatting SD Card:** To delete all photos and videos at once and prepare the SD card for new recordings, navigate to 'Settings', then 'Advanced', and select 'Format SD Card'. This action is irreversible.

3.4 External Connectivity

- **USB Port:** Connect the device to a computer using a compatible USB cable (not included) to transfer files.
- **Auxiliary Port:** Use an auxiliary cable (not included) to connect the device to a TV for larger screen viewing.
- **Headphone Jack:** Plug in headphones to listen to audio from video clips privately.

4. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth. Avoid abrasive cleaners.
- Ensure the water-resistant housing is properly sealed when in use outdoors to prevent moisture damage.
- Store the device in a cool, dry place when not in use. Remove batteries if storing for extended periods.
- Handle the touch screen with care to prevent scratches or cracks. Consider using a screen protector.

5. TROUBLESHOOTING

Issue	Possible Cause	Solution
Device is slow or clunky.	Large number of files on SD card, low battery.	Format the SD card regularly (after backing up important files). Ensure fresh batteries are used.
Cannot delete multiple photos at once.	Default deletion method is single file.	To delete all photos, go to 'Settings' > 'Advanced' > 'Format SD Card'. This will erase all content.
Poor battery life.	Old or low-quality batteries, extended use.	Use fresh, high-quality AAA batteries. Carry spare batteries for prolonged field use.
Touch screen is unresponsive or cracked.	Physical damage.	Handle the device with care. A screen protector can help prevent damage. If cracked, contact customer support for repair options.
SD card not recognized.	Improper insertion, incompatible card, corrupted card.	Ensure the SD card is fully and correctly inserted. Try a different compatible SD card (up to 32GB). If the card is corrupted, try formatting it (data will be lost).

6. SPECIFICATIONS

- **Standing Screen Display Size:** 4.3 Inches
- **Brand:** Wildgame Innovations
- **Series:** SWIPE
- **Item Model Number:** VU60
- **Item Weight:** 11.2 ounces
- **Product Dimensions:** 10 x 6 x 3 inches
- **Color:** TRAIL PAD SWIPE (Dark Green)
- **Power Source:** Hand-powered (4 AAA batteries, not included)
- **Manufacturer:** GSM LLC
- **Media Type:** SD Card (up to 32 GB)
- **Connectivity Technology:** Auxiliary and USB ports
- **Special Feature:** Portable

6.1 What's in the Box

- SD Card Reader (Wildgame Innovations Trail Pad Swipe VU60)

7. WARRANTY & SUPPORT

The Wildgame Innovations Trail Pad Swipe VU60 comes with a**1-Year Limited Warranty**. For warranty claims, technical support, or product inquiries, please contact Wildgame Innovations customer service.

You can find more information and support on the official Wildgame Innovations store page:[Wildgame Innovations Store](#)

Manufacturer: GSM LLC

8. IMPORTANT SAFETY INFORMATION

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Always handle electronic devices with care. Avoid exposing the device to extreme temperatures, direct sunlight for prolonged periods, or harsh chemicals. Keep out of reach of children.

9. PRODUCT VIDEOS

Wildgame Handheld Card Viewer Overview

Your browser does not support the video tag.

This video demonstrates the basic functionality of the Wildgame Innovations Trail Pad Swipe, showcasing its use as a handheld viewer for trail camera footage.

Wildgame Innovations Trail Pad VU60 Features

Your browser does not support the video tag.

An overview video highlighting the features and benefits of the Wildgame Innovations Trail Pad VU60, including its display and ease of use for reviewing game camera images and videos.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B06XKRJLSH>

More documents and user manuals: <https://manuals.plus/>