

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [UNOLD](#) /

› [UNOLD 38610 Mini Egg Cooker Instruction Manual](#)

## UNOLD 38610

# UNOLD 38610 Mini Egg Cooker

Instruction Manual

Model: 38610 | Brand: UNOLD

## INTRODUCTION

Thank you for choosing the UNOLD 38610 Mini Egg Cooker. This appliance is designed for convenient and efficient preparation of 1 to 3 eggs, allowing you to achieve your desired egg consistency from soft to hard-boiled. Please read this instruction manual carefully before first use to ensure safe and optimal operation of your appliance. Keep this manual for future reference.



Image: The UNOLD 38610 Mini Egg Cooker, showcasing its compact stainless steel base and transparent lid with two eggs placed in the cooking tray.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is intended for household use only.

## PACKAGE CONTENTS

Please check the package contents upon unpacking:

- UNOLD Mini Egg Cooker (Stainless Steel / Black housing)
- Egg insert with handle for 1 to 3 eggs
- Transparent lid
- Measuring cup with egg piercer
- Instruction Manual



Image: The UNOLD 38610 Mini Egg Cooker shown alongside its transparent lid and the included measuring cup with integrated egg piercer.

## SETUP AND FIRST USE

1. Unpack the appliance and all accessories. Remove all packaging materials.
2. Clean the egg insert, transparent lid, and measuring cup with warm soapy water. Rinse thoroughly and dry. The main unit (base) should only be wiped with a damp cloth.
3. Place the egg cooker on a stable, heat-resistant, and dry surface. Ensure there is sufficient space around the appliance for ventilation.
4. Before cooking, use the egg piercer located at the bottom of the measuring cup to gently pierce the larger end of each egg. This prevents the eggs from cracking during cooking.

## OPERATING INSTRUCTIONS

Follow these steps to cook eggs with your UNOLD Mini Egg Cooker:

1. **Add Water:** Use the provided measuring cup to add the appropriate amount of water to the heating plate. The measuring cup has markings for different egg consistencies (soft, medium, hard) and

number of eggs (1-3). Refer to the table below for guidance.

- 2. Place Eggs:** Place the pierced eggs onto the egg insert. The egg insert can hold up to 3 eggs.
- 3. Cover:** Place the transparent lid over the egg insert and the base unit.
- 4. Connect to Power:** Plug the appliance into a suitable electrical outlet (220V).
- 5. Start Cooking:** Press the On/Off switch. The operating indicator light will illuminate, indicating that the appliance is heating.
- 6. Cooking Process:** The water will boil and steam will cook the eggs. The indicator light will remain on during the cooking process.
- 7. Completion Signal:** Once the desired hardness is reached, the appliance will emit an audible signal. The operating indicator light will turn off.
- 8. Remove Eggs:** Immediately switch off the appliance by pressing the On/Off switch again and unplug it from the outlet. Carefully remove the lid (steam will be hot) and use the handle on the egg insert to lift the cooked eggs. Rinse the eggs under cold water to stop the cooking process and make them easier to peel.

## Water Measurement Guide

Egg Hardness	Number of Eggs	Water Level (Measuring Cup)
Soft-boiled	1-3	Refer to "Soft" marking on cup
Medium-boiled	1-3	Refer to "Medium" marking on cup
Hard-boiled	1-3	Refer to "Hard" marking on cup

*Note:* The exact water amount may vary slightly depending on egg size, temperature, and desired consistency. Experiment to find your preferred settings.



Image: A detailed view of the UNOLD Mini Egg Cooker's power button, which also features an illuminated operating indicator light.

## MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your egg cooker.

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Dishwasher Safe Parts:** The egg insert and the transparent lid are dishwasher safe.
- **Hand Washing:** For hand washing, use warm soapy water and a soft sponge. Rinse thoroughly and dry.
- **Base Unit:** The stainless steel housing of the base unit should be wiped clean with a damp cloth. Do not immerse the base unit in water or any other liquid.
- **Heating Plate:** If mineral deposits (limescale) accumulate on the heating plate, they can be removed using a descaling solution suitable for kitchen appliances or a mixture of water and vinegar. Follow the descaling product's instructions. Ensure the heating plate is thoroughly rinsed and dried after descaling.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surfaces.

## TROUBLESHOOTING

If you encounter issues with your UNOLD Mini Egg Cooker, refer to the following table:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; On/Off switch not pressed.	Ensure the plug is securely inserted into a working outlet. Press the On/Off switch.
Eggs are not cooked to desired hardness.	Incorrect water amount; eggs not pierced; lid not properly closed.	Verify water level with measuring cup. Ensure eggs are pierced. Check lid placement.
Eggs crack during cooking.	Eggs not pierced; cold eggs placed directly into hot cooker.	Always pierce the larger end of the egg before cooking. Allow very cold eggs to warm up slightly at room temperature.
Limescale buildup on heating plate.	Hard water usage.	Descale the heating plate regularly using a suitable descaling agent or vinegar solution.

## SPECIFICATIONS

Feature	Detail
Brand	UNOLD
Model Number	38610
Color	Stainless steel, black
Dimensions (L x W x H)	20.2 x 8.4 x 13.4 cm (approx. 7.95 x 3.31 x 5.28 inches)
Weight	500 grams (approx. 1.1 lbs)
Capacity	1 to 3 eggs
Power	210 Watts
Voltage	220V
Material	Stainless steel
Sound Level	44 dB

## WARRANTY AND SUPPORT

UNOLD products are manufactured with high quality standards. For information regarding warranty terms and conditions, or for technical support, please refer to the warranty card included with your product or visit the official UNOLD website. Please retain your proof of purchase for any warranty claims.

For further assistance, you may contact UNOLD customer service through their official channels. Contact information can typically be found on the product packaging or the manufacturer's website.

## Related Documents - 38610

 <p>Copyright UNOLD AG   www.unold.de <b>UNOLD</b> 2in1-Slush und Softeismaschine Sofie</p> <p>Bedienungsanleitung Instructions for use / Notice d'utilisation Gebruiksaanwijzing / Instructions pour l'usage Instrucciones de uso / Instrucción sobre Model 48950</p>	<p><a href="#"><u>UNOLD Sofie 48950: Bedienungsanleitung für Slush- und Softeismaschine</u></a></p> <p>Entdecken Sie die UNOLD Sofie 48950 2-in-1 Slush- und Softeismaschine. Diese Bedienungsanleitung bietet detaillierte Informationen zur Verwendung, Pflege und Sicherheit des Geräts.</p>
 <p>Copyright UNOLD AG   www.unold.de <b>UNOLD</b> EISWÜRFELBEREITER Freeze</p> <p>Bedienungsanleitung Instructions for use / Notice d'utilisation Gebruiksaanwijzing / Instructions pour l'usage Instrucciones de uso / Instrucción sobre Model 48935</p>	<p><a href="#"><u>Bedienungsanleitung UNOLD EISWÜRFELBEREITER Freeze Modell 48935</u></a></p> <p>Diese Bedienungsanleitung für den UNOLD EISWÜRFELBEREITER Freeze Modell 48935 bietet detaillierte Informationen zur sicheren Installation, Bedienung, Wartung und Fehlerbehebung des Geräts. Entdecken Sie, wie Sie einfach Eiszapfen für Ihre Getränke herstellen und die Langlebigkeit Ihres Geräts durch richtige Pflege und Reinigung sicherstellen.</p>
 <p>Copyright UNOLD AG   www.unold.de <b>UNOLD</b> TISCHVENTILATOR Black Steel</p> <p>Bedienungsanleitung Instructions for use / Notice d'utilisation Gebruiksaanwijzing / Instructions pour l'usage Instrucciones de uso / Instrucción sobre Model 86715</p>	<p><a href="#"><u>UNOLD Tischventilator Black Steel Modell 86715 Bedienungsanleitung</u></a></p> <p>Umfassende Bedienungsanleitung für den UNOLD Tischventilator Black Steel Modell 86715. Enthält Sicherheitshinweise, Montageanleitungen, Bedienung, Reinigung, Garantie und Entsorgungsinformationen.</p>
 <p>Copyright UNOLD AG   www.unold.de <b>UNOLD</b> STANDVENTILATOR Black Steel</p> <p>Bedienungsanleitung Instructions for use / Notice d'utilisation Gebruiksaanwijzing / Instructions pour l'usage Instrucciones de uso / Instrucción sobre Model 86725</p>	<p><a href="#"><u>UNOLD Standventilator Modell 86725 Bedienungsanleitung</u></a></p> <p>Die Bedienungsanleitung für den UNOLD Standventilator Modell 86725 bietet detaillierte Informationen zu Montage, Bedienung, Reinigung, Pflege und Garantie. Erfahren Sie alles über Ihren UNOLD Ventilator.</p>
 <p>Copyright UNOLD AG   www.unold.de <b>UNOLD</b> SOUS VIDE STICK Time</p> <p>Bedienungsanleitung Instructions for use / Notice d'utilisation Gebruiksaanwijzing / Instructions pour l'usage Instrucciones de uso / Instrucción sobre Model 58915</p>	<p><a href="#"><u>UNOLD SOUS VIDE STICK Time 58915: Bedienungsanleitung &amp; Anwenderhandbuch</u></a></p> <p>Umfassende Anleitung für den UNOLD SOUS VIDE STICK Time (Modell 58915). Erfahren Sie alles über Sous Vide Kochen, sichere Bedienung, Wartung und Tipps für perfekte Ergebnisse. Besuchen Sie <a href="http://www.unold.de">www.unold.de</a> für weitere Informationen.</p>



**Bedienungsanleitung**  
Instructions for use / Notice d'utilisation  
Gebruiksaanwijzing / Istruzioni per l'uso  
Instrucciones de uso / Instrukcja obsługi

Modell 48020

## [UNOLD Vakuumierer VICKY 48020 Bedienungsanleitung | Lebensmittel frisch halten](#)

Umfassende Bedienungsanleitung für den UNOLD Vakuumierer VICKY (Modell 48020). Erfahren Sie mehr über technische Daten, Sicherheitshinweise, Anwendung, Reinigung und Fehlerbehebung für Ihre Küchenmaschine.