

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Briggs & Stratton](#) /
- › [Briggs & Stratton S2000P Electric Pressure Washer User Manual](#)

## Briggs & Stratton 20667

# Briggs & Stratton S2000P Electric Pressure Washer User Manual

Model: 020667

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Briggs & Stratton S2000P Electric Pressure Washer. Please read this manual thoroughly before operating the unit and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

---

**WARNING:** Failure to follow these instructions may result in serious injury or property damage.

- Always wear appropriate eye protection (safety glasses) and hearing protection when operating the pressure washer.
- Do not direct the spray at people, pets, electrical devices, or the unit itself. High-pressure spray can cause severe injury.
- Ensure all connections are secure before starting the unit.
- Operate the pressure washer on a stable, level surface.
- Keep the operating area clear of bystanders and obstacles.
- Do not operate the unit if the power cord or high-pressure hose is damaged.
- Always disconnect the power supply before performing any maintenance or cleaning.
- Use only detergents recommended for pressure washers.
- This unit is equipped with a Ground Fault Circuit Interrupter (GFCI) for your safety. If the GFCI trips, reset it. If it continues to trip, do not use the unit and have it serviced by qualified personnel.

## SETUP AND ASSEMBLY

---

Your Briggs & Stratton S2000P Electric Pressure Washer is designed for quick and easy setup. Follow these steps to prepare your unit for operation.

### Unpacking and Initial Inspection

- Carefully remove all components from the packaging.
- Inspect the unit for any signs of damage. If damaged, do not operate and contact customer service.
- Ensure all listed components are present.

## Handle Assembly

The pressure washer features a convenient foldaway design for easy storage. To set up for use, extend the handle into the upright position and secure it according to the instructions provided in the product's quick start guide.



Figure 1: Briggs & Stratton S2000P Electric Pressure Washer in its upright, ready-to-use position.



Figure 2: The compact dimensions of the pressure washer, showing its height of 17 inches, length of 37.5 inches, and width of 13 inches.

### Connecting Water Supply

1. Connect a garden hose (not included) to the water inlet on the pressure washer. Ensure the connection is tight to prevent leaks.
2. Connect the high-pressure hose to the outlet on the unit and to the spray gun.
3. Turn on the water supply completely.
4. Squeeze the trigger on the spray gun to purge air from the system until a steady stream of water emerges.

### Connecting Power

Plug the power cord into a grounded 120V AC outlet. The unit features a GFCI plug for safety.

## OPERATING INSTRUCTIONS

---

### Nozzle Selection (7-in-1 Nozzle)

Your pressure washer is equipped with a versatile 7-in-1 nozzle, allowing you to easily switch between different spray patterns and pressures for various cleaning tasks. Rotate the nozzle to select the desired setting.

- **High Pressure:** For tough dirt and grime on durable surfaces.
- **High Flow:** For rinsing large areas or reaching high windows.
- **Other Patterns:** Various fan and jet patterns for different applications.



Figure 3: The 7-in-1 nozzle attached to the spray gun, ready for selection.

### Using Detergent

The integrated detergent tank allows for easy application of cleaning solutions.

1. Fill the detergent tank with a pressure washer-safe cleaning solution.
2. Select the soap/detergent setting on the 7-in-1 nozzle.

3. Apply detergent to the cleaning surface. Allow it to soak for a few minutes (refer to detergent instructions).
4. Switch the nozzle to a high-pressure setting and rinse the surface thoroughly.



Figure 4: The integrated detergent tank, located on the side of the pressure washer, ready for filling.

## POWERflow+ Technology

This technology provides the flexibility to choose between high pressure for tough cleaning and high water flow for faster rinsing or reaching higher areas. Adjust the nozzle to optimize performance for your specific task.

Your browser does not support the video tag.

Video 1: An animated overview of the Briggs & Stratton S2000P Electric Pressure Washer, demonstrating its POWERflow+ Technology, durable brushless motor, 7-in-1 nozzle, tough welded steel frame, and convenient foldaway design for easy storage.

## MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

## After Each Use

- Turn off the water supply and disconnect the power.
- Squeeze the spray gun trigger to release any remaining pressure.
- Disconnect the garden hose and high-pressure hose.
- Drain any remaining water from the unit and hoses.
- Clean the nozzle and filter screen.
- Wipe down the unit with a damp cloth.

## Storage

Store the pressure washer in a dry, frost-free area. The foldaway design allows for compact storage.



Figure 5: The pressure washer folded for compact storage, demonstrating its space-saving design.

## TROUBLESHOOTING

If you encounter issues with your pressure washer, refer to the common problems and solutions below.

| Problem             | Possible Cause  | Solution  |
|---------------------|---|---|
| Unit does not start | No power supply; GFCI tripped; Power switch off                     | Check power connection; Reset GFCI; Turn power switch ON.                     |
| Low pressure        | Insufficient water supply; Clogged nozzle; Air in pump; Kinked hose | Ensure full water flow; Clean nozzle; Purge air from system; Straighten hose. |
| Pulsating pressure  | Air in pump; Water supply restriction; Clogged nozzle               | Purge air from system; Check water inlet filter; Clean nozzle.                |

| Problem     | Possible Cause                     | Solution  |
|-------------|------------------------------------|---|
| Water leaks | Loose connections; Damaged O-rings | Tighten all connections; Replace damaged O-rings. |

If problems persist after attempting these solutions, contact Briggs & Stratton customer support.

## SPECIFICATIONS

---

| Feature                        | Detail                    |
|--------------------------------|---------------------------|
| Model Number                   | 020667                    |
| Brand                          | Briggs & Stratton         |
| Maximum Pressure (PSI)         | 2000 MAX PSI              |
| Maximum Flow Rate (GPM)        | 3.5 GPM                   |
| Power Source                   | Corded Electric           |
| Hose Length                    | 300 Inches (25 feet)      |
| Product Dimensions (L x W x H) | 37.5" x 13" x 17"         |
| Item Weight                    | 43.25 Pounds              |
| Nozzle Type                    | 7-in-1 Nozzle             |
| Detergent System               | Integrated Detergent Tank |

## WARRANTY AND SUPPORT

---

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Briggs & Stratton website. You can also contact their customer service for assistance with parts, service, or technical questions.



© 2023 Briggs & Stratton. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.