

Wildgame Innovations KP10i8-7

Wildgame Innovations Cloak Pro 10 Trail Camera

MODEL: KP10i8-7 USER MANUAL

1. INTRODUCTION

The Wildgame Innovations Cloak Pro 10 is a compact and efficient trail camera designed for capturing high-quality still images and 720p HD video. Its discreet bark texture and earth-tone gray color allow it to blend seamlessly into natural environments. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your Cloak Pro 10 trail camera.

Key features include:

- 10 Megapixel IR trail camera for clear images.
- 70 ft. illumination and detection range.
- Fast trigger speed of less than 1 second.
- Daytime color photos and nighttime infrared photos.
- 720p HD video recording (up to 30 seconds per clip).
- Designed for easy setup and use.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Cloak Pro 10 trail camera.



Figure 2.1: Front view of the Wildgame Innovations Cloak Pro 10 Trail Camera. This image displays the camera's lens, infrared LEDs, motion sensor, and the integrated display screen with control buttons.



Figure 2.2: Side view of the Wildgame Innovations Cloak Pro 10 Trail Camera. This perspective highlights the camera's compact design and textured casing.



Figure 2.3: Front view of the Wildgame Innovations Cloak Pro 10 Trail Camera, showing the included bungee strap for mounting. The display and control buttons are visible at the bottom of the unit.

3. SETUP

3.1 Battery Installation

1. Open the camera housing latch.
2. Locate the battery compartment.
3. Insert 8 AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment securely.

Note: For optimal performance and battery life (up to 6 months depending on usage), use high-quality alkaline or lithium AA batteries.

3.2 SD Card Installation

1. Ensure the camera is powered **OFF** before inserting or removing the SD card.
2. Locate the SD card slot.
3. Insert an SDHC card (up to 32 GB, not included) into the slot until it clicks into place.
4. To remove, gently push the card in until it springs out.

Caution: Inserting or removing the SD card while the camera is powered on may cause data corruption or damage to the card.

3.3 Mounting the Camera

The Cloak Pro 10 includes bungee cords for easy mounting.

1. Thread the bungee cords through the designated slots on the camera housing.
2. Secure the camera to a tree or post at the desired height and angle. Ensure the camera is stable and pointed towards the area you wish to monitor.
3. Position the camera to avoid direct sunlight or strong artificial light sources, which can affect image quality and trigger false detections.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- To power on, slide the power switch to the 'ON' position. The display will illuminate.
- To power off, slide the power switch to the 'OFF' position.

4.2 Menu Navigation and Settings

Use the control buttons (typically 'POWER', '+', '-', 'ENTER') located below the display screen to navigate the menu and adjust settings.

- **Setting Time and Date:** Access the 'Time/Date' setting in the menu to ensure accurate timestamps on your photos and videos. Use '+' and '-' to adjust values and 'ENTER' to confirm.
- **Photo/Video Mode:** Select between 'Still' (photo) or 'Video' mode. In video mode, the camera records 720p HD video clips up to 30 seconds in length.
- **Image Quality:** Adjust photo resolution (10 Megapixels is default).
- **Delay Setting:** Configure the delay between detections to prevent excessive captures of the same event.

4.3 Capturing Images and Videos

Once configured, the camera will automatically capture images or videos when motion is detected within its 70 ft. range. The trigger speed is less than 1 second, ensuring minimal delay in capturing events.

5. MAINTENANCE

- **Cleaning:** Periodically clean the camera lens, IR LEDs, and motion sensor window with a soft, dry cloth to ensure clear images and proper detection. Avoid abrasive materials or harsh chemicals.
- **Battery Replacement:** Replace all 8 AA batteries when the low battery indicator appears on the display or when performance degrades. Always replace all batteries at once with new ones.
- **SD Card Management:** Regularly transfer captured images and videos to a computer or external storage device. Format the SD card periodically (after backing up data) to maintain optimal performance and prevent errors.
- **Storage:** When not in use, store the camera in a cool, dry place. Remove batteries if storing for extended periods to prevent leakage.

6. TROUBLESHOOTING

- **Camera Not Powering On:**
Ensure batteries are correctly installed with proper polarity and are not depleted. Try a fresh set of batteries.
- **Poor Image/Video Quality:**
Check if the lens is clean and free from obstructions. Ensure the camera is not pointed directly into strong light sources. For nighttime images, ensure the IR LEDs are not obstructed.
- **No Images/Videos Captured:**
Verify the SD card is properly inserted and has sufficient free space. Check camera settings to ensure it is in the correct mode (photo/video) and the motion sensor is enabled. Ensure the camera is positioned within the detection range of the target area.
- **False Triggers / Capturing "Ghost Figures":**
This can occur if the camera is placed near moving branches, tall grass, or heat sources that can trigger the motion sensor. Reposition the camera to an area with less environmental interference. Avoid placing near spotlights or other artificial light sources at night.
- **Visible IR Flash at Night:**
The infrared flash on this model may be visible as a red glow at night. This is normal operation for the camera's IR illumination system. If discretion is paramount, consider alternative camera models with 'no-glow' IR technology.
- **SD Card Errors:**
Always power off the camera before inserting or removing the SD card. If errors persist, try formatting the SD card (after backing up data) or using a different compatible SDHC card.

7. SPECIFICATIONS

Feature	Specification
Model Number	KP10i8-7
Image Resolution	10 Megapixels
Video Resolution	720p HD (30 frames per second)

Feature	Specification
Illumination/Detection Range	70 ft.
Trigger Speed	Less than 1 second
Power Source	8 AA Batteries (not included)
Storage	SDHC Card up to 32 GB (not included)
Light Source Type	Infrared
Dimensions (L x W x H)	25.4 x 14.3 x 7.6 cm (approx. 9 x 6 x 3 inches)
Weight	453.59 g (approx. 1 lb)
Included Components	Trail Camera, Bungee Cords

8. WARRANTY AND SUPPORT

Specific warranty details are not provided in the available product information. For warranty claims, technical support, or further assistance with your Wildgame Innovations Cloak Pro 10 Trail Camera, please contact Wildgame Innovations directly through their official website or customer service channels.

Always refer to the manufacturer's official documentation for the most current warranty terms and support procedures.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question