

[Manuals.plus](#) /

› [V-MODA](#) /

› V-MODA REMIX Bluetooth Speaker User Manual

V-MODA REMIX-SILVER

V-MODA REMIX Bluetooth Speaker User Manual

Model: REMIX-SILVER

1. INTRODUCTION

The V-MODA REMIX is a portable Bluetooth Hi-Fi speaker designed to deliver high-quality audio in a compact form factor. It features a durable metal construction, a built-in headphone amplifier, and versatile connectivity options including Bluetooth and wired connections. This manual provides essential information for setting up, operating, and maintaining your REMIX speaker.



Figure 1: V-MODA REMIX Bluetooth Speaker (Silver)

2. WHAT'S IN THE BOX

Verify that all items are present in your REMIX package:

- V-MODA REMIX Bluetooth Speaker
- 4x Remix Rings (pre-installed or in packaging)
- USB to USB-C Charging Cable
- Daisy-chain Audio Cable



Figure 2: Package Contents

3. PRODUCT FEATURES

The V-MODA REMIX speaker incorporates several advanced features:

- **Glass Fiber Dual-Driver and Passive Bass Reflector:** Delivers award-winning V-MODA sound with deep bass.
- **Bluetooth Connectivity:** Wireless range of up to 33 feet (10 meters) with simultaneous pairing to two devices.
- **Extended Battery Life:** Up to 10+ hours of continuous music playback, entertainment, and calls.
- **USB-C Charging:** Modern and fast charging standard.
- **Built-In VAMP Headphone Amplifier:** Powers headphones with enhanced audio quality.
- **Built-In Microphone:** For hands-free voice calls.
- **Daisy Chain Feature:** Connect multiple REMIX speakers for a larger sound experience using the included audio cable.

- **Amazon Alexa Compatibility:** Can be used with an Echo Dot for voice assistant functions.
- **Customizable Design:** Features a luxurious black vegan leather finish and supports 3D printed customization (RemixRings).



Figure 3: REMIX Speaker with Amazon Echo Dot

4. SETUP

4.1 Initial Charge

Before first use, fully charge your V-MODA REMIX speaker. Connect the USB-C end of the charging cable to the speaker's USB-C port and the USB-A end to a compatible USB power adapter (not included) or computer USB port. The LED indicator will show charging status.

4.2 Powering On/Off

- To power on: Press and hold the power button until the indicator light illuminates.
- To power off: Press and hold the power button until the indicator light turns off.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Pairing

1. Ensure the REMIX speaker is powered on.
2. Press the "PAIR" button on the top panel of the speaker. The LED indicator will flash, indicating it's in pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for "V-MODA REMIX" in the list of available devices.
4. Select "V-MODA REMIX" to connect. The LED indicator will turn solid when successfully paired.
5. The speaker can simultaneously pair with two devices.

5.2 Wired Connection (Analog Mode)

Use the included daisy-chain audio cable to connect your audio source directly to the "IN" port on the speaker. This mode is useful for devices without Bluetooth or for preserving battery life.

5.3 Daisy Chain Multiple REMIX Speakers

To connect multiple REMIX speakers for a synchronized audio experience:

1. Connect the audio output of the first REMIX speaker (using the daisy-chain cable) to the "IN" port of the second REMIX speaker.
2. Repeat for additional speakers.



Figure 4: Daisy Chaining REMIX Speakers

5.4 Using the VAMP Headphone Amplifier

The REMIX features a built-in VAMP headphone amplifier. Connect your headphones to the dedicated headphone output port on

the speaker to experience enhanced audio quality and power for your headphones.

5.5 Volume Control

Adjust the volume using the '+' and '-' buttons on the top panel of the speaker, or directly from your connected device.

5.6 Voice Calls

When connected via Bluetooth, the built-in microphone allows for hands-free voice calls. Incoming calls will pause music playback. Press the multi-function button (usually the play/pause button) to answer or end calls.

5.7 Battery Level Check

To check the battery level, briefly press the power button. The LED indicator will flash a certain number of times to indicate the charge level (e.g., 4 flashes for full charge, 1 for low). Specific details on LED patterns can be found in the full user guide (PDF).

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Avoid abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge regularly.
- **Water Resistance:** The product is NOT waterproof. Avoid exposure to liquids.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker using the USB-C cable.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode (flashing LED). Turn device Bluetooth off/on. Move device closer to speaker (within 33 ft/10m).
No sound.	Volume too low; incorrect input source; speaker not connected.	Increase volume on speaker and device. Check Bluetooth connection or wired cable.
Sound distortion.	Volume too high; audio source quality.	Reduce volume. Try a different audio source.
Speaker turns off automatically.	Auto-off feature (after 10 minutes of no audio input).	This is a design feature to conserve battery. Ensure continuous audio playback or keep the speaker connected to power if prolonged idle time is expected.

8. SPECIFICATIONS

Feature	Detail
Model Name	REMIX
Item Model Number	REMIX-SILVER
Brand	V-MODA
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Bluetooth

Feature	Detail
Speaker Type	Bookshelf (Portable)
Speaker Maximum Output Power	25 Watts
Battery Life	10+ Hours
Power Source	Battery Powered (1 Lithium Ion battery included)
Item Weight	1.5 Pounds (0.68 kg)
Product Dimensions	8 x 2.5 x 2.5 inches (20.32 x 6.35 x 6.35 cm)
Impedance	12.8 Ohm
Microphone Sensitivity	-42dB ± 3dB @1kHz (Omni-directional)
Speaker Sensitivity	79 dB ± 3dB @1kHz
Waterproof	No
UPC	877653006631

9. WARRANTY AND SUPPORT

V-MODA offers comprehensive support for its products:

- **1-Year Premier Warranty:** Covers manufacturing defects and issues under normal use.
- **50% Immortal Life Replacement Program:** Allows replacement of the product at 50% off the current retail price if damaged outside of warranty.
- **Six-Star Customer Support:** V-MODA aims to provide excellent customer service.

For detailed warranty information or to contact support, please refer to the official V-MODA website or the full user manual (PDF) available for download.

Official User Manual (PDF): [Download PDF](#)

10. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: V-MODA Remix Bluetooth Hi-Fi Metal Mobile Speaker overview. This video showcases the design, features, and customization options of the V-MODA REMIX speaker, including its built-in headphone amplifier, glass fiber drivers, and modular components.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question