

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Troy Lighting](#) /

› [Troy Lighting LBLEDWT3LBM018 LS LED Wall Sconce User Manual](#)

## Troy Lighting LBLEDWT3LBM018

# Troy Lighting LBLEDWT3LBM018 LS LED Wall Sconce User Manual

Model: LBLEDWT3LBM018

## 1. INTRODUCTION

Thank you for purchasing the Troy Lighting LBLEDWT3LBM018 LS LED Wall Sconce. This product is designed to provide efficient and adjustable lighting for various indoor environments. This manual provides essential information for safe installation, proper operation, and effective maintenance of your new lighting fixture. Please read these instructions thoroughly before beginning installation or use, and retain them for future reference.

### 1.1 Safety Information

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- This fixture is intended for indoor use only. Do not expose to water or moisture.
- Do not attempt to alter the fixture. Any modifications may void the warranty and create a safety hazard.
- Handle the fixture with care. Avoid dropping or subjecting it to strong impacts.

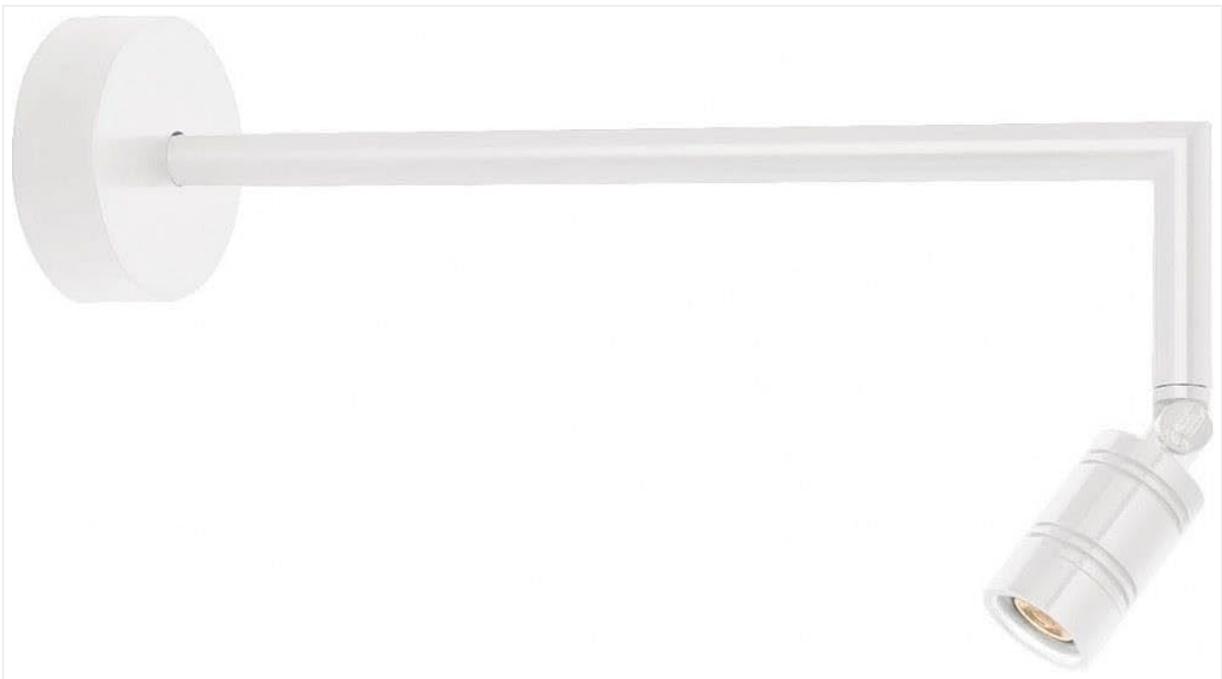


Figure 1: Front view of the Troy Lighting LBLEDWT3LBM018 LS LED Wall Sconce in Gloss White finish.

## 2. INCLUDED COMPONENTS

Carefully unpack your fixture and identify all parts. Ensure all components are present and undamaged before discarding packaging materials.

- 1 x LED Bullet Head Miter Arm Wall Sconce (18" Arm, Gloss White)
- 1 x Mounting Hardware Kit (includes mounting plate, screws, wire nuts)
- 1 x Instruction Manual

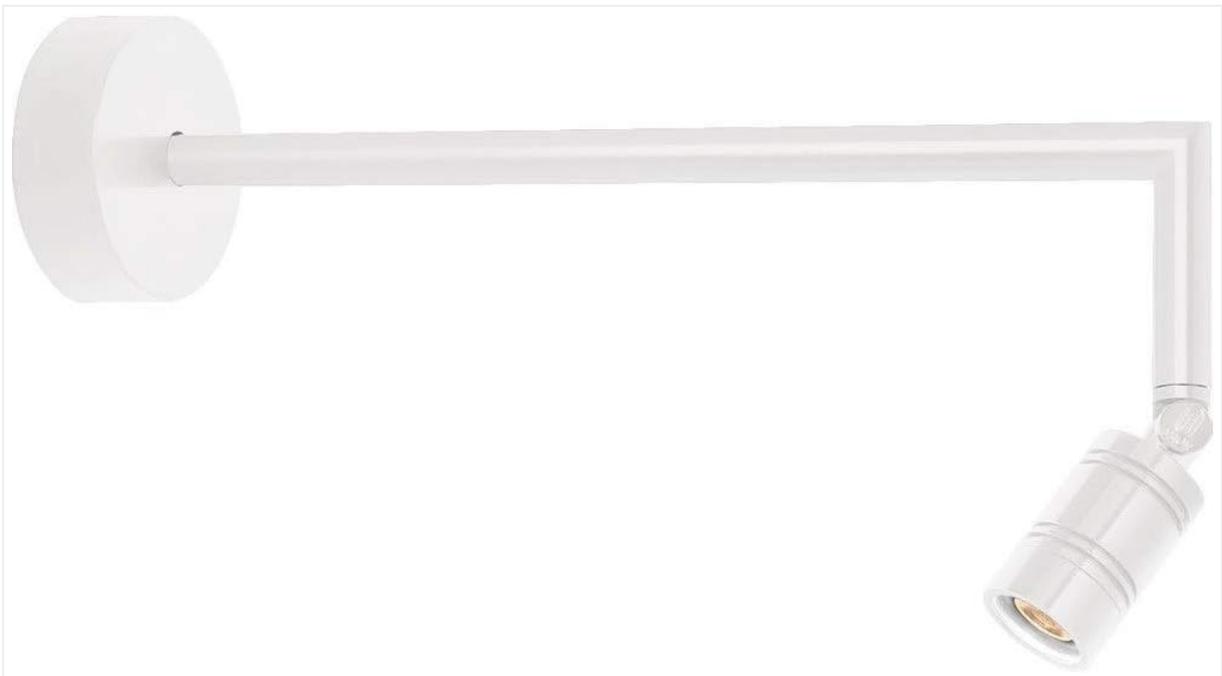


Figure 2: Angled view of the Troy Lighting LBLEDWT3LBM018 LS LED Wall Sconce, highlighting the miter arm and bullet head.

## 3. INSTALLATION INSTRUCTIONS

**Important:** Before starting installation, ensure the power supply to the circuit is turned off at the circuit

breaker or fuse box. If you are unsure about electrical wiring, consult a qualified electrician.

1. **Prepare the Installation Area:** Ensure the wall surface is clean, dry, and structurally sound to support the fixture.
2. **Turn Off Power:** Locate the circuit breaker or fuse box and turn off the power to the wall switch or outlet where the fixture will be installed. Verify power is off using a voltage tester.
3. **Attach Mounting Plate:** Secure the mounting plate (included in hardware kit) to the junction box in the wall using the provided screws. Ensure the plate is firmly attached.
4. **Make Electrical Connections:**
  - Connect the **black** wire from the fixture to the **black** (hot) wire from the junction box using a wire nut.
  - Connect the **white** wire from the fixture to the **white** (neutral) wire from the junction box using a wire nut.
  - Connect the **ground** wire (bare copper or green) from the fixture to the **ground** wire from the junction box and to the mounting plate using a ground screw.

*Ensure all wire connections are secure and properly insulated with wire nuts.*

5. **Mount the Fixture:** Carefully tuck all wires into the junction box. Align the fixture's back plate with the mounting plate and secure it using the provided screws.
6. **Restore Power:** Once the fixture is securely mounted, turn the power back on at the circuit breaker. Test the light fixture.

## 4. OPERATING INSTRUCTIONS

---

The Troy Lighting LBLEDWT3LBM018 LED Wall Sconce is designed for straightforward operation.

- **Power On/Off:** Operate the fixture using the standard wall switch connected to its circuit.
- **Adjusting the Light:** The bullet head of the sconce is adjustable, allowing you to direct the light beam as needed. Gently pivot the bullet head to achieve the desired lighting angle.
- **Remote Control (if applicable):** If your installation includes a compatible remote control system (as indicated by "Control Method: Remote" in specifications), refer to the remote control's specific instructions for pairing and operation.

## 5. MAINTENANCE AND CARE

---

Proper care will ensure the longevity and appearance of your Troy Lighting fixture.

- **Cleaning:** Turn off power before cleaning. Use a soft, dry, or slightly damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **LED Light Source:** The LED light source in this fixture is non-removable and designed for long-term use. Do not attempt to replace the LED bulb.
- **Inspection:** Periodically check for any loose connections or signs of wear. If any issues are observed, disconnect power and consult a qualified electrician.

## 6. TROUBLESHOOTING

---

If you experience issues with your fixture, refer to the following common problems and solutions:

| Problem                    | Possible Cause  | Solution  |
|----------------------------|---|---|
| Fixture does not light up. | No power to the fixture.<br>Loose wire connection.<br>Faulty wall switch. | Check circuit breaker/fuse.<br>Ensure wall switch is ON.<br>Verify all wire connections are secure (with power off).<br>Test wall switch functionality. |
| Light flickers or is dim.  | Loose wire connection.<br>Incompatible dimmer switch (if applicable).     | Check all wire connections (with power off).<br>Ensure dimmer switch is compatible with LED fixtures.   |

If these steps do not resolve the issue, please contact customer support or a qualified electrician.

## 7. PRODUCT SPECIFICATIONS

|                              |  |
|------------------------------|--|
| <b>Model Number</b>          | LBLEDWT3LBM018                                   |
| <b>Brand</b>                 | Troy Lighting                                    |
| <b>Finish</b>                | Gloss White                                      |
| <b>Material</b>              | Aluminum   |
| <b>Lamp Type</b>             | Integrated LED                                   |
| <b>Wattage</b>               | 14 Watts   |
| <b>Brightness</b>            | 980 Lumens                                       |
| <b>Color Temperature</b>     | 2700 Kelvin                                      |
| <b>Voltage</b>               | 120 Volts  |
| <b>Product Dimensions</b>    | 18 x 2.25 x 8.5 inches (Length x Width x Height) |
| <b>Back Plate Dimensions</b> | 5.13" Width x 5.13" Length                       |
| <b>Item Weight</b>           | 6 Pounds   |
| <b>Mounting Type</b>         | Wall Mount                                       |
| <b>Control Method</b>        | Remote (if applicable)                           |
| <b>Special Feature</b>       | Adjustable Light Head                            |
| <b>UPC</b>                   | 782042544529                                     |

## 8. WARRANTY INFORMATION

This Troy Lighting product is covered by a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications. For warranty claims, please retain your proof of purchase and contact customer support.


## 9. CUSTOMER SUPPORT

If you have any questions, require assistance with installation, or need to report a problem with your Troy Lighting LBLEDWT3LBM018 LS LED Wall Sconce, please contact Troy Lighting customer service or your retailer. Please have your model number (LBLEDWT3LBM018) and proof of purchase ready when contacting support.

For more information about Troy Lighting products, you may visit the official Troy Lighting website or their store on Amazon: [Troy Lighting Amazon Store](#).

© 2023 Troy Lighting. All rights reserved.

### Related Documents - LBLEDWT3LBM018
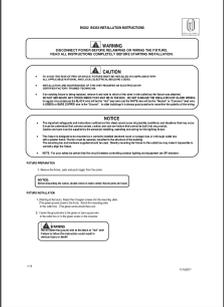
|   |   |
|---|---|
|   | <p><a href="#">B6352 B6353 Installation Instructions - Troy Lighting Outdoor Wall Sconce</a></p> <p>Detailed installation guide for Troy Lighting B6352 and B6353 outdoor wall sconces, covering safety precautions, preparation, wiring, and assembly steps.</p>   |
|  | <p><a href="#">Troy Lighting Jonah B8224 Installation Instructions</a></p> <p>Detailed installation guide for the Troy Lighting Jonah B8224 vanity light, including safety warnings, step-by-step instructions, and parts list.</p>   |
|  | <p><a href="#">Troy Lighting PEZANTE PTL1029 Table Lamp Installation Guide</a></p> <p>Installation instructions and safety information for the Troy Lighting PEZANTE PTL1029 table lamp. Includes parts list, diagram description, and general care guidelines.</p>   |
|  | <p><a href="#">Troy Lighting Irvine F3820 Installation Guide and Safety Information</a></p> <p>Comprehensive installation instructions and safety warnings for the Troy Lighting Irvine F3820 lighting fixture. Includes parts list and diagram identification. Ensure safe and proper installation by following these guidelines.</p>  |
|  | <p><a href="#">Troy Lighting Alameda PFL1868 Floor Lamp Installation Guide</a></p> <p>Official installation instructions for the Troy Lighting Alameda PFL1868 floor lamp, including safety warnings, assembly steps, and parts list. The document is primarily in English, with safety notices also present in French and Spanish.</p> |
|  | <p><a href="#">Troy Lighting Fahrenheit F5541 Pendant Light Installation Guide</a></p> <p>Comprehensive installation instructions and safety warnings for the Troy Lighting Fahrenheit F5541 pendant light. Learn how to safely assemble and install your new lighting fixture.</p>   |

