

Dunlop 190T

Dunlop 2-Person Pop-Up Dome Tent (Model 190T) Instruction Manual

Model: 190T

INTRODUCTION

Thank you for choosing the Dunlop 2-Person Pop-Up Dome Tent, Model 190T. This tent is designed for ease of use and quick setup, making it ideal for camping, festivals, and outdoor activities. Its pop-up design allows for near-instant deployment, and its water-resistant construction provides protection from the elements. Please read this manual carefully to ensure proper setup, operation, and maintenance of your tent.

SETUP INSTRUCTIONS

The Dunlop Pop-Up Dome Tent is designed for rapid deployment. Follow these steps for quick and secure setup:

1. **Unpack the Tent:** Remove the tent from its storage bag. The tent is pre-assembled and will spring into shape automatically upon release.
2. **Position the Tent:** Place the tent in your desired location, ensuring the ground is as level and clear of sharp objects as possible.
3. **Secure with Pegs:** Use the included 8 pegs to secure the tent to the ground. Insert pegs through the loops at the base of the tent and push them firmly into the soil at an angle.
4. **Attach Guy Ropes:** For added stability, especially in windy conditions, attach the 4 included guy ropes to the designated attachment points on the tent. Extend the ropes outwards and secure them with pegs, ensuring they are taut.



Image: The Dunlop 2-Person Pop-Up Dome Tent fully set up in an outdoor environment, demonstrating its compact and functional design.



Image: An angled view of the tent with its key dimensions (length, width, height) clearly indicated, providing a visual reference for its size.

OPERATING INSTRUCTIONS

Using your Dunlop Pop-Up Dome Tent is straightforward:

- **Entrance:** The tent features one main entrance. Use the zipper closure to open and close the door.
- **Mosquito Net:** The entrance is equipped with a mosquito net. This can be zipped closed independently to allow for ventilation while keeping insects out.
- **Windows:** The tent includes two windows for additional ventilation and light. These can typically be opened or covered as needed.
- **Ventilation:** Ensure adequate airflow by utilizing the mosquito net and windows to prevent condensation buildup inside the tent.



Image: A detailed shot highlighting the tent's mesh window, which provides ventilation and protection from insects.

MAINTENANCE

Proper care and maintenance will extend the lifespan of your tent:

- **Cleaning:** The tent should be hand washed only. Use mild soap and water to clean any soiled areas. Do not use harsh detergents or put the tent in a washing machine.
- **Drying:** Always ensure the tent is completely dry before packing it away. Packing a damp tent can lead to mildew and damage to the fabric. Air dry in a shaded area.

- **Storage:** Once dry, carefully fold the tent back into its compact shape. This may require some practice. Store the tent in its original carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Seam Care:** The tent's seams are sealed with seam tape for water resistance. Avoid excessive scrubbing on these areas.



Image: The tent neatly folded and stored in its circular carry bag, ready for transport or storage.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Difficulty Folding:** Pop-up tents require a specific folding technique. If you are having trouble, search for online tutorials specific to pop-up tent folding. Practice will make it easier.

- **Water Leakage:** Ensure all zippers are fully closed and the tent is properly pegged down and guyed out to maintain its shape. While the tent is water-resistant with sealed seams, extreme weather conditions or improper setup can affect its performance.
- **Condensation Inside:** This is common in tents. Ensure proper ventilation by opening windows and the mosquito net when conditions allow.
- **Damaged Fabric:** Avoid placing the tent on sharp objects. Small tears can often be repaired with a tent repair kit.

SPECIFICATIONS

Feature	Detail
Model Number	190T
Type	Pop-Up Dome Tent
Occupancy	2 Persons
Dimensions (L x W x H)	255 x 155 x 95 cm
Item Weight	1.9 kg
Outer Tent Material	100% Polyester (210T)
Inner Tent Material	100% Polyester (210T)
Tent Floor Material	100% Polyester (190T)
Pole Material	Fiberglass
Water Column	2000 mm
Number of Doors	1
Number of Windows	2
Included Components	Pop-up tent, storage bag, 4 guy ropes, 8 pegs
Color	Blue/Grey
Assembly Required	No (Pop-up design)



Image: The Dunlop brand logo prominently displayed on the tent fabric.

WARRANTY INFORMATION

This Dunlop tent comes with a standard limited warranty against manufacturing defects. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with setup, or encounter any issues not covered in this manual, please contact the retailer where you purchased the tent. They will be able to provide further support or direct you to the manufacturer's customer service.

© 2023 Dunlop. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question