

Axess CKRD3801

Axess CKRD3801 Dual Alarm Clock with AM/FM Digital Radio User Manual

Model: CKRD3801 | Brand: Axess

1. PRODUCT OVERVIEW

The Axess CKRD3801 is a compact dual alarm clock featuring an AM/FM digital radio and a 0.6-inch red LED display. Designed for convenience, it includes a battery backup option to maintain time and alarm settings during power outages. Its dual alarm functionality allows for two separate wake-up times, making it suitable for various schedules.



Figure 1: Front and top view of the Axess CKRD3801 Dual Alarm Clock, showcasing the display and control buttons.

Key features include:

- 0.6-inch red LED display for clear time visibility.
- AM/FM digital radio for listening to your favorite stations.
- Dual alarm function for setting two independent wake-up times.

- Snooze and Sleep functions for added convenience.
- Battery backup capability (requires 2 AAA batteries, not included) to preserve settings during power interruptions.

2. INITIAL SETUP

2.1 Power Connection

1. Unpack the Axxess CKRD3801 unit and place it on a stable, flat surface.
2. Locate the AC power cord attached to the unit.
3. Plug the AC power cord into a standard 120V AC wall outlet. The LED display will illuminate, and the clock will be ready for time setting.

2.2 Battery Backup Installation

For uninterrupted timekeeping and alarm functionality during power outages, install two AAA batteries (not included) as backup power.

1. Locate the battery compartment cover on the bottom of the unit.
2. Remove the battery compartment cover.
3. Insert two new AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.



Figure 2: The Axess CKRD3801 positioned on a desk, illustrating its compact size and placement flexibility.

3. OPERATING INSTRUCTIONS

3.1 Setting the Time

1. Press and hold the **TIME MEM** button until the display flashes.
2. Press the **TUN HOUR** button to adjust the hour. Observe the PM indicator for correct AM/PM setting.
3. Press the **TUN MIN** button to adjust the minute.
4. Press the **TIME MEM** button again to confirm and save the time.

3.2 Setting Alarms (Alarm 1 & Alarm 2)

The CKRD3801 features two independent alarms.

1. Press and hold the **ALM 1** button (for Alarm 1) or **ALM 2** button (for Alarm 2) until the display flashes.
2. Press the **TUN HOUR** button to set the desired alarm hour.
3. Press the **TUN MIN** button to set the desired alarm minute.
4. Press the respective **ALM 1** or **ALM 2** button again to confirm the alarm time.
5. To activate the alarm, press the **AM/FM AL OFF** button repeatedly until the desired alarm source

(Buzzer or Radio) is displayed next to the alarm indicator. To turn off the alarm, select 'OFF'.

3.3 Using the AM/FM Radio

1. Press the **AM/FM AL OFF** button to cycle through modes until 'AM' or 'FM' is displayed.
2. Press the **TUN HOUR** or **TUN MIN** buttons to manually tune to a desired frequency. Press and hold these buttons for automatic scanning.
3. Adjust the volume using the **VOL -** and **VOL +** buttons.
4. For optimal FM reception, extend the built-in wire antenna fully. For AM reception, rotate the unit for best signal.

3.4 Snooze and Sleep Functions

- **Snooze:** When an alarm sounds, press the large **SNOOZE** button to temporarily silence the alarm for approximately 9 minutes. The alarm will sound again after this period.
- **Sleep:** To fall asleep to the radio, press the **SLEEP** button. Each press cycles through preset sleep times (e.g., 90, 60, 30, 15 minutes, OFF). The radio will automatically turn off after the selected duration.



Figure 3: Top view of the Axess CKRD3801, highlighting the layout of control buttons for time, alarm, radio, and volume adjustments.

4. CARE AND MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Battery Replacement:** Replace the AAA backup batteries annually or when the display shows signs of dimming during a power outage. Ensure correct polarity when inserting new batteries.
- **Placement:** Avoid placing the unit in direct sunlight, near heat sources, or in areas with high humidity or

dust.

5. TROUBLESHOOTING GUIDE


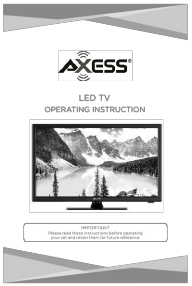



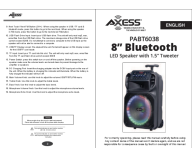
Problem	Possible Cause	Solution
Clock display is off or dim.	No AC power; backup batteries depleted or not installed.	Ensure AC power cord is securely plugged in. Check and replace AAA backup batteries if necessary.
Alarm does not sound.	Alarm not activated; alarm volume too low; incorrect alarm time set.	Verify alarm is set to Buzzer or Radio. Increase radio volume if alarm source is radio. Re-check alarm time setting.
Poor radio reception.	Antenna not extended; interference; weak signal.	Fully extend the FM wire antenna. For AM, rotate the unit to find the best signal. Move unit away from other electronic devices.
Buttons are unresponsive.	Temporary system glitch.	Unplug the unit from AC power and remove backup batteries for 1 minute. Reconnect power and batteries.

6. PRODUCT SPECIFICATIONS

- **Display:** 0.6-inch Red LED
- **Radio:** AM/FM Digital Tuner
- **Alarm:** Dual Alarm (Buzzer or Radio)
- **Power Source:** AC 120V, 60Hz
- **Battery Backup:** 2 x AAA batteries (not included)
- **Special Features:** Snooze, Sleep Timer
- **Manufacturer:** AXESS
- **Model:** CKRD3801
- **UPC:** 818443013330

7. WARRANTY AND CUSTOMER SUPPORT

This product is covered by a limited manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact Axess customer support. For technical assistance, troubleshooting, or warranty inquiries, please visit the official Axess website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

	<p>AXESS SPBT1076 Bluetooth Media Speaker User Manual</p> <p>User manual for the AXESS SPBT1076 Bluetooth Media Speaker, detailing features, specifications, operation, and charging instructions.</p>
	<p>Acess 23.6" LED TV Operating Instructions Manual</p> <p>Comprehensive operating instructions for the Acess 23.6-inch LED Television, covering setup, features, remote control, and troubleshooting. Learn how to use your Acess LED TV safely and effectively.</p>
	<p>Acess PR3206 AM/FM Radio with Media Player User Manual</p> <p>User manual for the Acess PR3206 AM/FM Radio with Media Player, detailing operation instructions, features, and specifications.</p>
	<p>Acess PABT6020 Double 15" Woofer Bluetooth Speaker User Manual</p> <p>Comprehensive user manual for the Acess PABT6020 Double 15" Woofer Bluetooth Speaker. Provides detailed information on specifications, panel functions, operation of microphones, Bluetooth connectivity, FM radio, and recording features.</p>
	<p>AXESS SPBT1058 Bluetooth Media Speaker User Manual - Features, Specs, and Operation</p> <p>Comprehensive user manual for the AXESS SPBT1058 Bluetooth Media Speaker. Learn about its features, specifications, controls, Bluetooth pairing, USB playback, FM radio, AUX-IN connection, and charging instructions.</p>
	<p>Acess PABT6038 8" Bluetooth LED Speaker with 1.5" Tweeter User Manual</p> <p>This manual provides instructions for the Acess PABT6038 8" Bluetooth LED Speaker with 1.5" Tweeter, covering specifications, remote control functions, and rear panel layout. It details how to connect devices, operate the speaker, and adjust settings.</p>