



Manuals.plus /

- › PERSANG KARAOKE /
- › PERSANG KARAOKE Aspire Plus PK-8161 Karaoke System User Manual

PERSANG KARAOKE PK-8161

PERSANG KARAOKE Aspire Plus PK-8161 Karaoke System User Manual

Model: PK-8161

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your PERSANG KARAOKE Aspire Plus PK-8161 Karaoke System. Please read this manual thoroughly before operating the device and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

- Do not expose the unit to rain or moisture.
- Do not open the casing; refer all servicing to qualified personnel.
- Use only the provided power adapter.
- Keep the unit away from heat sources and direct sunlight.
- Ensure proper ventilation during use.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Aspire Plus PK-8161 Karaoke System (Microphone Unit)
- Power Adapter
- 16GB SD Card (pre-installed or separate)
- Audio/Video Connection Cable (3.5mm TRS to RCA, if applicable)
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Aspire Plus PK-8161 Karaoke System.



Figure 4.1: Aspire Plus PK-8161 Karaoke Microphone Unit

This image displays the main microphone unit of the Aspire Plus PK-8161 Karaoke System. It features a black body with a metallic grille at the top, housing the microphone. Below the grille, a control panel is visible with numerical buttons (0-9), navigation buttons (MENU, ENTER, PAUSE/PLAY), and function buttons (LIST, REC, FAV, PROG, DEL). The brand "PERSANG KARAOKE" and "Aspire plus" are printed on the lower part of the handle. A wired connection extends from the bottom.



Figure 4.2: Power Adapter

This image shows the power adapter for the Aspire Plus PK-8161 Karaoke System. It consists of a black wall plug with two prongs (suitable for Indian sockets) and an attached black cable terminating in a barrel connector, used to supply power to the karaoke unit.

4.1 Microphone Unit Controls

- **Numerical Buttons (0-9):** For selecting songs by number or inputting menu options.
- **DEL:** Delete function, typically for correcting input.
- **PROG:** Program function, likely for creating song playlists.
- **MENU:** Access the main menu.

- **ENTER/SELECT:** Confirm selections or enter sub-menus.
- **PAUSE/PLAY:** Start or pause song playback.
- **LIST:** View the song list.
- **REC:** Initiate song recording.
- **FAV:** Access favorite songs list.
- **A+/A-:** Adjust key or tempo.
- **VOL+/VOL-:** Adjust microphone volume.
- **Power Button:** Turn the unit on or off.

5. SETUP

5.1 Connecting the Power Adapter

1. Insert the barrel connector of the power adapter into the DC IN port on the karaoke microphone unit.
2. Plug the power adapter into a standard electrical outlet.
3. The unit is now ready to be powered on.

5.2 Connecting to a Display/Audio System

The PK-8161 typically connects to a TV or audio system using an AV cable (3.5mm TRS connector). This allows you to view lyrics on a screen and output audio through external speakers.

1. Locate the AV OUT port on the karaoke microphone unit.
2. Connect one end of the AV cable to the AV OUT port.
3. Connect the other end of the AV cable to the corresponding AV INPUT ports on your television or audio receiver. Ensure correct color matching (e.g., yellow for video, red/white for audio).
4. Select the correct AV input source on your television or audio system.

5.3 Inserting the SD Card

The unit supports an SD card for storing songs, images, and videos.

1. Locate the SD card slot on the karaoke microphone unit.
2. Gently insert the provided 16GB SD card (or another compatible SD card up to 32GB) into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

- To power on, press and hold the **Power Button** until the display (if any, or connected screen) illuminates.
- To power off, press and hold the **Power Button** again until the unit shuts down.

6.2 Selecting and Playing Songs

1. Press the **LIST** button to view the available song catalog.
2. Use the **Numerical Buttons (0-9)** to enter the song number directly, or use navigation buttons (if available, implied by MENU/ENTER) to scroll through the list.
3. Press **ENTER/SELECT** to confirm your song selection.
4. Press **PAUSE/PLAY** to start playback.

5. During playback, press **PAUSE/PLAY** to pause, and press again to resume.

6.3 Adjusting Microphone Volume and Key/Tempo

- Use the **VOL+** and **VOL-** buttons to increase or decrease the microphone volume.
- Use the **A+** and **A-** buttons to adjust the song's key or tempo to suit your vocal range.

6.4 Recording Songs

The PK-8161 features a song recorder function.

1. Ensure an SD card is properly inserted.
2. While a song is playing, press the **REC** button to begin recording your performance.
3. Press **REC** again to stop recording.
4. Recorded files are typically saved to the SD card and can be accessed via the menu.

6.5 Viewing Images and Videos

The system supports viewing images and videos stored on the SD card.

1. Access the main menu by pressing the **MENU** button.
2. Navigate to the "Media" or "Files" section (exact naming may vary).
3. Select "Images" or "Videos" to browse files on the SD card.
4. Use **ENTER/SELECT** to open and view selected media.

7. MAINTENANCE

7.1 Cleaning

- Always disconnect the power adapter before cleaning.
- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use liquid cleaners, aerosols, or abrasive materials.

7.2 Storage

- Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the SD card and store it separately.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure power adapter is securely connected and the outlet is functional.
No sound output	AV cable not connected correctly; TV/audio system input incorrect; volume too low.	Check AV cable connections. Select correct input on TV/audio system. Increase volume on both karaoke unit and external system.
No video output	AV cable not connected correctly; TV input incorrect.	Check AV cable connections (especially the yellow video cable). Select correct input on TV.
SD card not recognized	SD card incorrectly inserted or corrupted.	Re-insert the SD card correctly. Try a different compatible SD card.
Cannot record	SD card full or not inserted.	Ensure SD card is inserted and has sufficient free space.

9. SPECIFICATIONS

- **Model:** PK-8161
- **Brand:** PERSANG KARAOKE
- **Recommended Uses:** Karaoke, Singing
- **Connectivity Technology:** Wired
- **Connector Type:** 3.5 mm TRS
- **Special Feature:** Volume Control
- **SD Card Support:** 16GB (included), expandable up to 32GB
- **Functions:** Song recorder, image/video viewer

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact PERSANG KARAOKE customer service directly. Contact details can typically be found on the manufacturer's official website or product packaging.

