

Schleich 72102

Schleich Farm World Red Barn Set Instruction Manual

Model: 72102

Brand: Schleich

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Schleich Farm World Red Barn Set, Model 72102. Please read all instructions carefully before use to ensure proper setup and safe play.



Image 1.1: The complete Schleich Farm World Red Barn Set.

2. SAFETY INFORMATION

Warning: Choking Hazard - Small Parts. Not for children under 3 years.

This product contains small parts which may pose a choking hazard. Adult supervision is recommended during assembly and play. Ensure all components are securely attached before allowing children to play.

3. WHAT'S IN THE BOX

The Schleich Farm World Red Barn Set (Model 72102) includes the following components:

- 1x Farm Building (Red Barn)

- 1x Black Angus Cow Figure
- 1x Black Angus Calf Figure
- 1x Farmer Action Figure
- 1x Wheelbarrow
- 5x Fence Sections
- Various Accessories (e.g., hay bale, feed, pitchfork, bucket, massage brush)



Image 3.1: All included components of the 27-piece set.

4. ASSEMBLY INSTRUCTIONS

Assembly of the Schleich Farm World Red Barn Set requires careful attention to detail. While some parts may require firm pressure to snap into place, ensure not to apply excessive force to avoid damage. The roof sections are designed to be detachable for enhanced playability.

1. **Unpack Components:** Carefully remove all pieces from the packaging and verify against the 'What's in the Box' list.

2. **Assemble Barn Structure:** Connect the main wall sections of the barn. Ensure all tabs align with their corresponding slots.
3. **Attach Roof Sections:** Secure the roof panels to the top of the barn structure. These are designed to be removable.
4. **Install Interior Elements:** Place the internal stalls and platforms as indicated in the visual guide.
5. **Attach Fences and Accessories:** Connect the fence sections to create animal enclosures. Position the ladder, winch, and other accessories as desired.



Image 4.1: A child assembling the barn, illustrating the interior layout.

For a visual guide on assembly and features, please refer to the official product video:

Your browser does not support the video tag.

Video 4.1: Official Schleich video demonstrating the assembly and features of the Large Red Barn Playset.

5. OPERATING INSTRUCTIONS

The Schleich Farm World Red Barn Set offers various interactive features for imaginative play:

- **Moving Barn Doors:** The large barn doors can slide open and closed, allowing access for figures and animals.
- **Detachable Roof:** The roof sections can be removed to easily access the interior of the barn for play.
- **Functioning Winch:** Use the red winch to lift and lower hay bales or other small accessories to different levels of the barn.
- **Movable Massage Brush:** The yellow massage brush can be moved to simulate grooming the animal figures.
- **Adjustable Fences:** The fence sections can be rearranged to create different sized enclosures or pathways for animals.



Image 5.1: Interior features including the massage brush and hay bale.

Observe the playset in action with this merchant-provided video:

Your browser does not support the video tag.

Video 5.2: Merchant video showcasing the Large Red Barn with Animals & Accessories.

6. MAINTENANCE

To ensure the longevity of your Schleich Farm World Red Barn Set:

- **Cleaning:** Wipe down all plastic components with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the playset in a dry, cool place away from direct sunlight to prevent material degradation.
- **Inspection:** Periodically check for any loose or damaged parts. Replace any broken components immediately to maintain safety and playability.

7. TROUBLESHOOTING

If you encounter any issues with your Schleich Farm World Red Barn Set, consider the following:

- **Difficulty Assembling:** Ensure all pieces are correctly oriented and aligned before applying pressure. Some connections may require a firm push. Refer to the visual guides in the manual or product videos for assistance.
- **Missing Parts:** In the event of missing components, please contact Schleich customer service for assistance.
- **Loose Doors/Windows:** The doors and windows are designed to be removable for flexible play. If they become detached, they can typically be re-attached by aligning the hinges and snapping them back into place.

8. SPECIFICATIONS

- **Product Dimensions:** 22 x 6.3 x 14.8 inches
- **Item Weight:** 10.78 pounds
- **Item Model Number:** 72102
- **Manufacturer Recommended Age:** 36 months - 8 years
- **Release Date:** July 1, 2017
- **Manufacturer:** Schleich

9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or further support, please visit the official Schleich website or contact their customer service department. You can also visit the [Schleich Store on Amazon](#) for additional product information and accessories.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question