



[Manuals.plus](#) /

- › [Cirbic](#) /
- › Cirbic Talking Large Button Alarm Clock (Model tcw001) Instruction Manual

Cirbic tcw001

Cirbic Talking Large Button Alarm Clock (Model tcw001) Instruction Manual

Your guide to easy time and date announcements

[Overview](#) [Setup](#) [Operation](#) [Introduction](#) [Product](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The Cirbic Talking Large Button Alarm Clock (Model tcw001) is designed to provide clear, audible time and date announcements for individuals with visual impairments, the elderly, or those with hearing difficulties. Its simple operation and large, high-contrast button make it an accessible and convenient daily companion. This manual provides instructions for setup, operation, and maintenance to ensure optimal performance of your device.



Figure 1: Cirbic Talking Large Button Alarm Clock with its packaging.

2. PRODUCT OVERVIEW

The Cirbic Talking Large Button Alarm Clock features a minimalist design with a prominent white button for easy interaction. The device is compact and portable, suitable for various indoor environments.

2.1 Front View



Figure 2: Front view of the clock, highlighting the large white button.

The top surface features a large, high-contrast white button. This is the primary control for announcing time and date, and for setting the alarm.

2.2 Side View



Figure 3: Side view of the clock, showing its compact profile.

The clock has a sleek, round design with a black base and a white top button. Its compact size makes it suitable for bedside tables, desks, or for travel.

2.3 Bottom View



Figure 4: Bottom view of the clock, showing the battery compartment and speaker.

The bottom of the clock houses the battery compartment and the speaker grille. It also includes non-slip feet to keep the clock stable on surfaces.

3. SETUP

3.1 Battery Installation

The Cirbic Talking Large Button Alarm Clock requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Turn the clock upside down to access the battery compartment on the bottom.
2. Locate the battery compartment cover.
3. Gently slide or unclip the cover to open it.
4. Insert two fresh AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
5. Replace the battery compartment cover, ensuring it clicks securely into place.

Once batteries are installed, the clock will be ready for initial setup and operation.

4. OPERATING INSTRUCTIONS

The clock is designed for simple, intuitive operation using its large top button.

4.1 Announcing Time

To hear the current time, simply press the large white button once. The clock will announce the time in a clear, loud male English voice (North American accent), including AM or PM.

Easy Battery Access!

Conveniently located battery compartment for hassle-free battery replacement.

One-Press Time Update

Simply press the button for an immediate announcement of the current time, making it easier to start your day.



Figure 5: Pressing the large button to hear the time.

4.2 Announcing Date

To hear the current date (month, day, and day of the week), press the large white button twice in quick succession. The clock will announce the date.

4.3 Setting Time and Alarm

The clock features an alarm function and is easy to set with audio instructions. Specific setting instructions are typically provided via audio prompts directly from the device. Refer to the audio guidance for detailed steps on setting the time and alarm.

4.4 Video Overview of Operation

Video 1: An overview of the Cirbic Talking Clock's features and basic operation, including time and date announcements. This video is provided by the seller, Cirbic.

5. MAINTENANCE

5.1 Cleaning

To clean the clock, gently wipe its surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish or internal components.

5.2 Battery Replacement

When the voice announcements become faint or the clock stops responding, it is time to replace the batteries. Follow the battery installation steps outlined in Section 3.1. Always use fresh AAA batteries and dispose of old batteries responsibly.

6. TROUBLESHOOTING

- **No Sound or Faint Sound:** Ensure batteries are correctly installed and are not depleted. Replace with fresh AAA batteries if necessary. Check that the battery compartment cover is securely closed.

- **Clock Stops Working After a Drop:** If the clock has been dropped and stops functioning, open the battery compartment and ensure the batteries are still properly seated and making contact. Reinsert them if loose.
- **Volume Too Loud:** This model does not feature an adjustable volume control. If the volume is too loud for your environment, consider placing a soft material underneath the clock to help absorb some sound.
- **Incorrect Time/Date Announcement:** If the time or date is incorrect, follow the audio instructions provided by the device to reset them.

7. SPECIFICATIONS

Brand	Cirbic
Model Number	tcw001
Color	White
Display Type	Digital (Audible)
Special Feature	Alarm, Talking Function
Product Dimensions	3.5"W x 1.2"H
Power Source	Battery Powered (2 AAA batteries required, not included)
Room Type	Bedroom, Kitchen, Living Room (Indoor)
Shape	Round
Item Weight	0.26 Pounds
Material Type	Plastic
Voice Accent	Male English (North American accent)

8. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Cirbic customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.