

Smoby 7600520116

Smoby Maggie & Bianca 3-in-1 Microphone Stand User Manual

Model: 7600520116

1. INTRODUCTION

The Smoby Maggie & Bianca 3-in-1 Microphone Stand is designed to provide an engaging musical experience. This versatile product functions as a microphone, a karaoke station, and a portable speaker. It features voice amplification, recording capabilities, light effects, and pre-recorded songs and melodies. It is compatible with external audio players for expanded music options.

2. SAFETY INFORMATION

- **Warning:** Not suitable for children under 36 months due to small parts.
- Adult supervision is recommended during use.
- Do not expose the product to water or excessive moisture.
- Ensure batteries are inserted correctly according to polarity markings.
- Remove batteries if the product will not be used for an extended period.

3. PACKAGE CONTENTS

Please check that all items are present:

- Smoby Maggie & Bianca 3-in-1 Microphone Stand
- Decorative adhesive jewels

Note: 4 LR6/AA batteries and a 3.5 mm audio jack cable are not included.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the base of the microphone stand.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert 4 new LR6/AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

4.2 Assembly and Height Adjustment

The microphone stand is adjustable in height from 0.90 meters to 1.20 meters. Adjust the stand to the desired height by loosening the locking mechanism, extending or retracting the pole, and then securely tightening the mechanism.

4.3 Decoration

The microphone is equipped with a bow-shaped charm. Use the included pink adhesive jewels to personalize and decorate the charm and other parts of the microphone stand as desired.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **On/Off** button located on the base unit to power the device on or off.

5.2 Volume Control

Adjust the volume using the dedicated volume control knob on the base unit.

5.3 Microphone Use and Voice Amplification

Speak directly into the microphone. Your voice will be amplified through the integrated speaker. For best results, speak closely to the microphone.

5.4 Karaoke Mode

To activate karaoke mode and remove the vocals from pre-recorded songs, press the **Karaoke** button. This allows you to sing along to the instrumental versions.

5.5 Portable Speaker Function (External Audio)

Connect an external audio player (such as a smartphone or MP3 player) to the microphone stand using a 3.5 mm audio jack cable (not included). This allows you to play your favorite music through the integrated speaker.

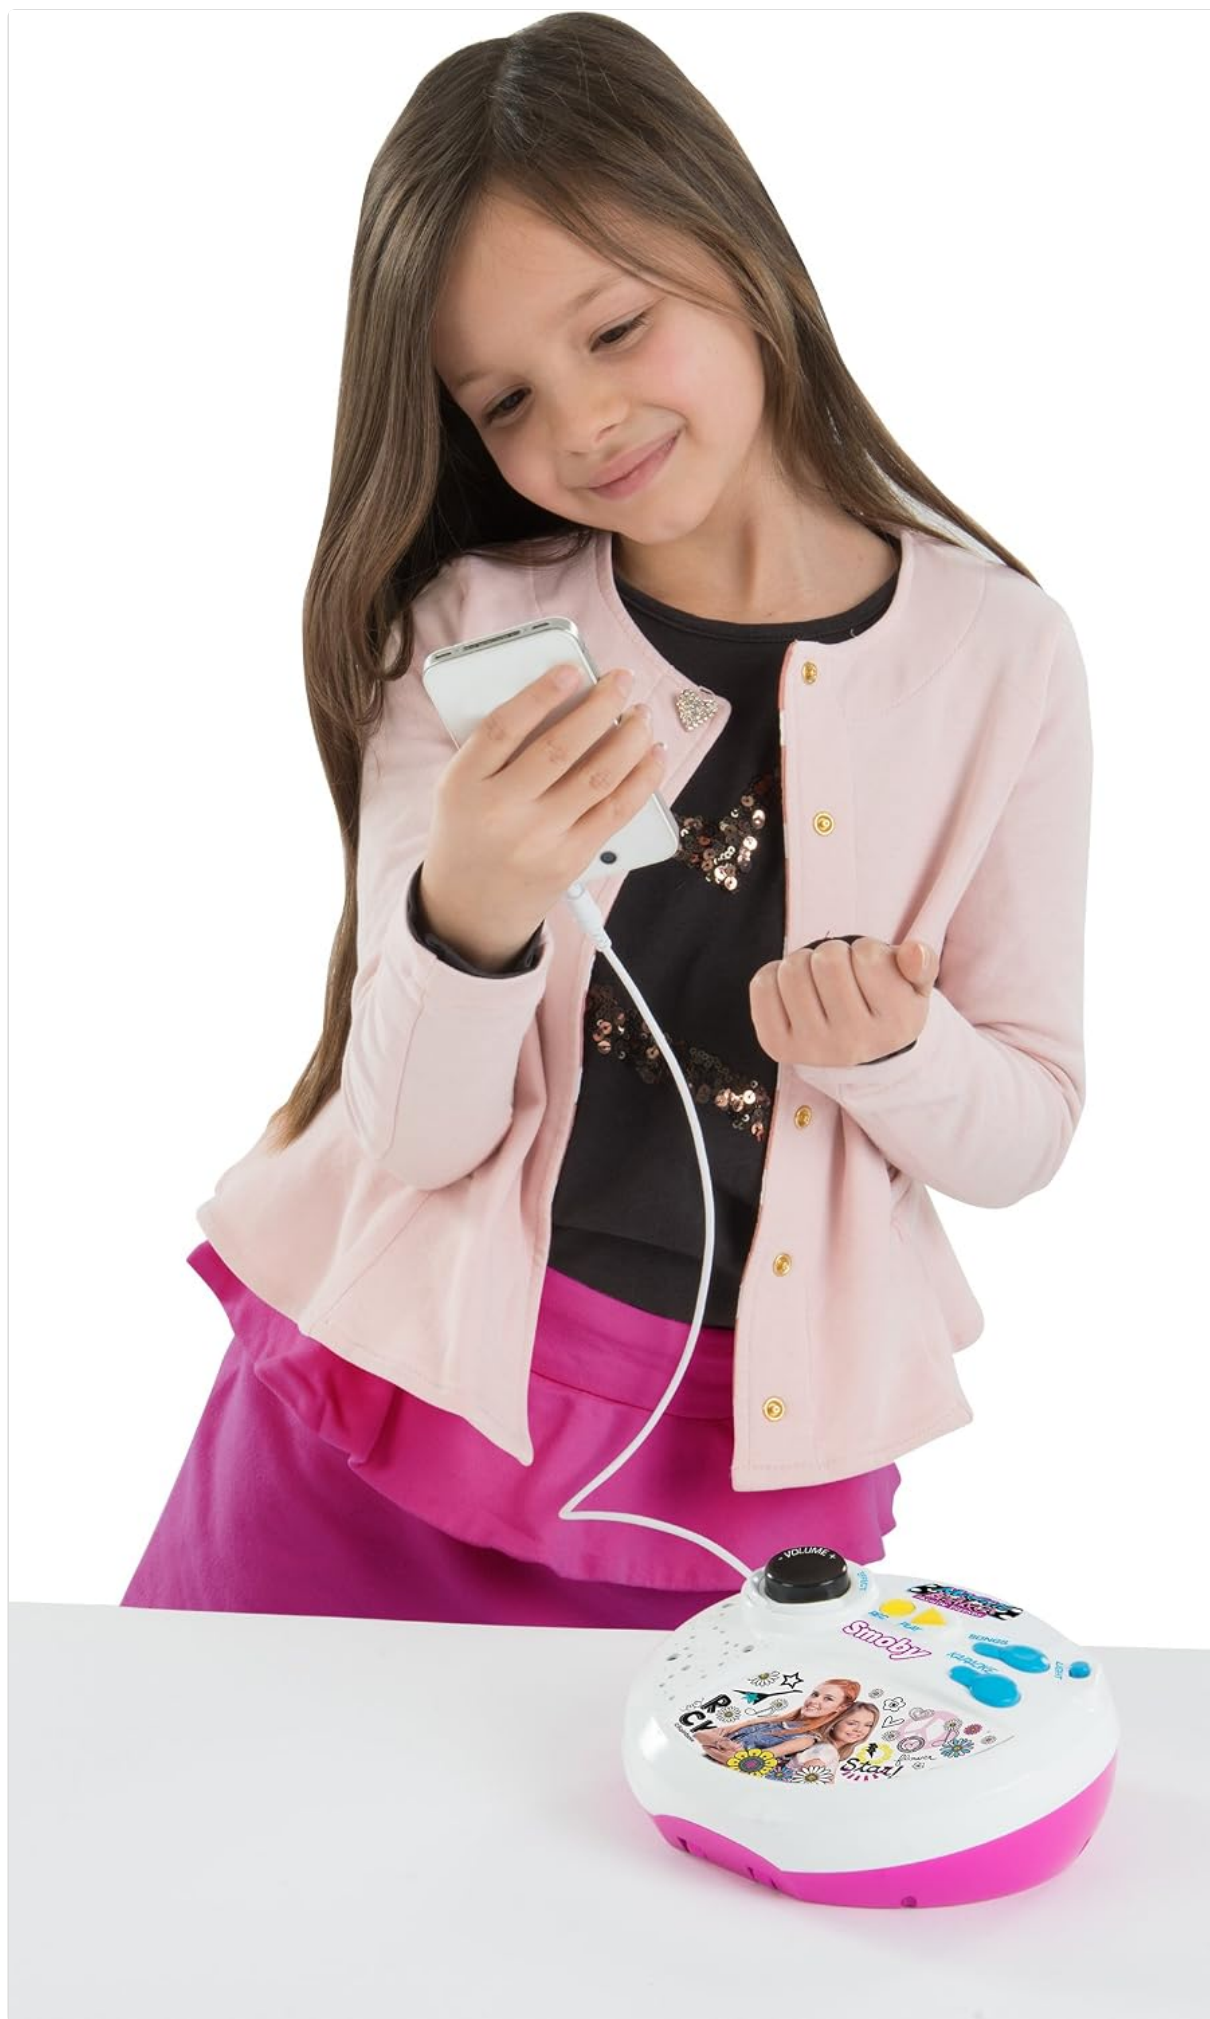


Image: A young girl connecting a smartphone to the Smoby Maggie & Bianca 3-in-1 Microphone Stand, demonstrating its

5.6 Voice Recording

The device allows for voice recording up to 1 minute. Refer to the specific buttons on the unit for recording and playback functions.

5.7 Light Effects and Pre-recorded Content

- The microphone stand features light effects that vary with the rhythm of the music, simulating a concert atmosphere.
- Enjoy 4 original Maggie & Bianca songs and 4 instrumental melodies pre-loaded on the device.
- Activate 3 concert effects, including applause, to enhance your performance.

6. MAINTENANCE

- Clean the product with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the product away from direct sunlight and heat sources.
- Store in a cool, dry place when not in use.

7. TROUBLESHOOTING

7.1 No Sound or Low Volume

- Check if the device is powered on.
- Ensure the volume knob is turned up.
- Verify that the batteries are correctly installed and not depleted. Replace if necessary.
- If using an external audio player, ensure the cable is securely connected and the external device's volume is up.

7.2 Microphone Not Working

- Ensure the microphone is properly connected to the stand.
- Speak directly and closely into the microphone for optimal sound capture.
- Check battery levels.

7.3 Lights Not Functioning

- Ensure the device is powered on.
- Check battery levels.

8. SPECIFICATIONS

Brand	Smoby
Model Number	7600520116
Connections	3.5 mm Jack
Battery Type	4 x AA (LR6) Alkaline (not included)

Height Adjustable	0.90 m to 1.20 m
Voice Recording	Up to 1 minute
Recommended Age	From 5 years

9. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For details regarding warranty coverage, technical support, or spare parts availability, please contact Smoby customer service directly or refer to the official Smoby website.