

[Manuals.plus](#) /

› [Muse](#) /

› MUSE M-60 BT CD Micro System User Manual

Muse M-60 BT

MUSE M-60 BT CD Micro System User Manual

Model: M-60 BT

1. INTRODUCTION

Thank you for purchasing the MUSE M-60 BT CD Micro System. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

Key Features:

- FM PLL Stereo Radio with 30 preset stations
- CD Player compatible with CD, CD-R/RW, MP3
- USB Port for MP3 playback
- Bluetooth connectivity for wireless audio streaming
- Clock with Alarm, Snooze, and Sleep functions
- Wake up to FM, CD, USB, or Buzzer
- Remote control included
- Wall-mountable design

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Do not open the unit's casing; there are no user-serviceable parts inside.

3. PACKAGE CONTENTS

Carefully unpack your MUSE M-60 BT Micro System and check that all items are present:

- MUSE M-60 BT CD Micro System
- Remote Control
- AUX IN Cable
- AC Adapter
- Stand
- Screws x2 (for mounting the stand)
- Wall plugs x2 (for wall mounting)
- Screws x2 (for wall mounting)

4. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your micro system.

Front View



Figure 4.1: Front view of the MUSE M-60 BT CD Micro System, featuring the digital display on the right and the sliding CD cover on the left.

CD Mechanism



Figure 4.2: The CD compartment with its cover slid open, ready for disc insertion.

Top Panel Controls and Ports



Figure 4.3: Top panel showing various control buttons, the USB MP3 port, and the AUX IN jack.

Rear View



Figure 4.4: Rear view of the unit, indicating power input and wall mounting points.

5. SETUP

5.1 Power Connection

1. Connect the supplied AC adapter to the DC IN jack on the rear of the unit.
2. Plug the AC adapter into a standard wall outlet (AC 100-240V ~ 50/60Hz).

5.2 Antenna Connection

For optimal FM radio reception, fully extend the FM wire antenna located at the rear of the unit. Adjust its position for the best signal.

5.3 Wall Mounting

The unit can be mounted on a wall using the provided screws and wall plugs. Ensure the mounting surface is sturdy enough to support the unit's weight. Refer to the rear panel for designated mounting points.

1. Mark the desired positions for the mounting screws on the wall.
2. Drill pilot holes and insert the wall plugs.
3. Insert the screws into the wall plugs, leaving a small portion exposed.
4. Carefully align the unit's mounting slots with the screws and slide the unit down to secure it.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Mode Selection

- Press the **POWER/SOURCE** button to turn the unit on or off.
- Press the **POWER/SOURCE** button repeatedly to cycle through available modes: FM Radio, CD, USB, Bluetooth, AUX IN.

6.2 FM Radio Operation

1. Switch to FM mode.
2. **Auto Scan:** Press and hold the **PLAY/PAUSE** button to automatically scan and store available FM stations.
3. **Manual Tuning:** Press the **SKIP FORWARD** or **SKIP BACKWARD** buttons to manually tune to a desired frequency.
4. **Preset Stations:** Use the **PRESET +/-** buttons on the remote control to navigate through stored stations.

6.3 CD Playback

1. Slide the CD cover open and carefully place a CD (label side up) into the compartment. Close the CD cover.
2. Switch to CD mode. The unit will read the disc and begin playback automatically.
3. Press **PLAY/PAUSE** to pause or resume playback.
4. Press **SKIP FORWARD** or **SKIP BACKWARD** to skip tracks.
5. Press and hold **SKIP FORWARD** or **SKIP BACKWARD** for fast forward/rewind.
6. Press **STOP** to stop playback.

6.4 USB Playback

1. Insert a USB flash drive (containing MP3 files) into the USB port on the top panel.
2. Switch to USB mode. The unit will automatically detect and begin playing MP3 files.
3. Use **PLAY/PAUSE**, **SKIP FORWARD**, and **SKIP BACKWARD** buttons as with CD playback.

6.5 Bluetooth Pairing

1. Switch to Bluetooth mode. The display will show "BT" and flash, indicating it's in pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
3. Select "M-60 BT" from the list of devices.
4. Once paired, the unit will emit a confirmation sound, and "BT" will stop flashing.
5. You can now play audio from your device through the M-60 BT.

6.6 Clock and Alarm Settings

Refer to the detailed instructions in the full manual for specific button sequences for setting the clock, alarm, snooze, and sleep timer functions.

7. MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **CD Lens Cleaning:** Use a commercially available CD lens cleaner disc to clean the CD player's lens periodically.
- **Storage:** If the unit will not be used for an extended period, unplug it from the power outlet and store it in a cool, dry place.

8. TROUBLESHOOTING

If you encounter problems with your unit, consult the table below for possible solutions.

Problem	Possible Cause	Solution
No power	AC adapter not connected or power outlet faulty.	Ensure AC adapter is securely connected and the power outlet is working.
No sound	Volume too low; incorrect source selected; headphones connected.	Increase volume; select correct source (CD, FM, USB, BT, AUX); disconnect headphones.
CD not playing	CD inserted incorrectly; disc scratched/dirty; incompatible disc format.	Reinsert CD correctly; clean or replace disc; ensure it's an audio CD or MP3 CD.

Problem	Possible Cause	Solution
USB not playing	USB drive not inserted correctly; incompatible file format; corrupted files.	Reinsert USB drive; ensure files are MP3 format; try another USB drive.
Bluetooth not connecting	Unit not in pairing mode; Bluetooth disabled on device; device too far.	Ensure unit is in BT pairing mode; enable Bluetooth on your device; move device closer.
Poor FM reception	Antenna not extended or poorly positioned; interference.	Fully extend and adjust the FM antenna; move unit away from other electronic devices.

9. SPECIFICATIONS

Feature	Specification
Brand	Muse
Model Number	M-60 BT
Connectivity Technology	Bluetooth
Color	Black
Speaker Type	Stereo (2 Speakers)
Audio Output Mode	Stereo (2.0 Channels)
Power Source	AC Adapter
Compatible Devices	Bluetooth-enabled Smartphone, Tablet, PC
Wattage	40W
Compatible Audio Formats	CD, MP3
Weight	2.36 Kilograms
Country of Origin	China

10. WARRANTY AND SUPPORT

10.1 Product Warranty

This MUSE M-60 BT CD Micro System comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

10.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact your retailer or the official Muse customer support. Contact information can typically be found on the manufacturer's website or on your purchase documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B06XPS6Y6F>

More documents and user manuals: <https://manuals.plus/>