

DICKIE TOYS 203765001

Dickie Toys 203765001 Skullracer Motorised Toy Racing Car Instruction Manual

1. INTRODUCTION

Welcome to the instruction manual for your new Dickie Toys 203765001 Skullracer Motorised Toy Racing Car. This manual provides essential information for the safe and proper use, setup, and maintenance of your toy. Please read it thoroughly before first use and retain it for future reference.

The Skullracer is a dynamic toy vehicle featuring a motorised drive, an exciting wheelie function, and integrated light and sound effects. It offers two distinct driving modes: Cruise and Drag, providing varied play experiences.

2. SAFETY INFORMATION

- **Warning:** Not suitable for children under 3 years due to small parts that could be swallowed.
- Adult supervision is recommended during play.
- Do not operate the toy near stairs, roads, or other hazardous areas.
- Keep hair, loose clothing, and fingers away from moving parts.
- **Battery Safety:**
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Remove exhausted batteries from the toy.
 - Dispose of batteries responsibly according to local regulations.
 - Ensure batteries are inserted with correct polarity (+ and -).

3. PACKAGE CONTENTS

Upon opening the package, please ensure all items listed below are present:

- 1x Dickie Toys Skullracer Motorised Toy Racing Car (Model: 203765001)
- 3x AA Batteries (pre-installed)



Image: The Dickie Toys Skullracer Motorised Toy Racing Car as it appears in its original retail packaging.

4. SETUP

4.1. Battery Installation / Replacement

Your Skullracer comes with 3 AA batteries pre-installed. If replacement is needed, follow these steps:

1. Locate the battery compartment on the underside of the vehicle.
2. Using a Phillips head screwdriver (not included), carefully loosen the screw and open the battery compartment cover.
3. Remove the old batteries (if any) and insert 3 new AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and tighten the screw securely.



Image: Top view of the Skullracer, showing the detailed engine area which may contain controls or the battery compartment access.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Locate the ON/OFF switch, typically found on the underside or side of the vehicle. Slide the switch to the 'ON' position to activate the toy. Slide to 'OFF' when not in use to conserve battery life.

5.2. Driving Modes: Cruise and Drag

The Skullracer offers two distinct driving modes:

- **Cruise Mode:** For standard forward driving. The vehicle will move at a steady pace.
- **Drag Mode:** For accelerated driving. The vehicle will move forward with increased speed and power, often accompanied by the wheelie function.

A selector switch or button, usually located on the top or side of the car, allows you to switch between Cruise and Drag modes. Refer to the markings on the toy for specific control locations.

5.3. Wheelie Function

When in Drag Mode, the Skullracer is designed to perform an impressive wheelie. The front wheels will lift off the ground as the car accelerates, creating a dynamic visual effect. This function is automatically engaged when the car is in Drag Mode and moving forward.



Image: The Skullracer demonstrating its wheelie function, with the front wheels lifted and a simulated flame effect beneath.

5.4. Light and Sound Features

The Skullracer is equipped with 4 distinct light and sound features that activate during operation, enhancing the play experience. These effects are typically synchronized with the vehicle's movement and selected driving mode.

6. MAINTENANCE

6.1. Cleaning

To clean your Skullracer, gently wipe the surface with a slightly damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components.

6.2. Storage

When not in use for extended periods, store the toy in a cool, dry place away from direct sunlight. It is recommended to remove the batteries to prevent leakage and corrosion.

7. TROUBLESHOOTING

- **Car not moving or lights/sounds not working:**
 - Check if the ON/OFF switch is in the 'ON' position.
 - Verify that the batteries are correctly installed with the proper polarity.
 - Replace old or depleted batteries with new AA batteries.
 - **Wheelie function not engaging:**
 - Ensure the car is in 'Drag Mode'.
 - Check battery power; low batteries may affect motor performance.
 - Ensure the car is on a flat, smooth surface.
-

8. SPECIFICATIONS

Model Number	203765001
Brand	DICKIE TOYS
Product Dimensions	13.58 x 5.12 x 7.68 inches (34.5 x 13 x 19.5 cm)
Item Weight	1.13 pounds (0.51 kg)
Power Source	3 x AA Batteries (included)
Recommended Age	3 years and up
Key Features	Motorised drive, Wheelie function, Cruise/Drag modes, 4 light and sound features

9. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Dickie Toys Skullracer, please refer to the contact information provided on the product packaging or visit the official Dickie Toys website. Keep your purchase receipt as proof of purchase.

For further assistance, you may contact Dickie Toys customer service directly.