

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [RYOBI](#) /

› [Ryobi RSW1240G Scroll Saw Instruction Manual](#)

## RYOBI RSW1240G

# Ryobi RSW1240G Scroll Saw Instruction Manual

Model: RSW1240G | Brand: RYOBI

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and setup of your Ryobi RSW1240G Scroll Saw. This versatile electric tool is designed for precise and delicate cuts on various materials, including wood, plastic, and soft metals. Please read this manual thoroughly before using the scroll saw to ensure proper handling and to maximize its performance and longevity.

## 2. SAFETY INFORMATION

Always prioritize safety when operating power tools. Failure to follow safety instructions can result in serious injury or damage to the tool. Keep this manual for future reference.

- **Wear appropriate personal protective equipment (PPE):** Always wear safety glasses, hearing protection, and a dust mask.
- **Ensure a clean and well-lit workspace:** Cluttered or dark areas invite accidents.
- **Keep children and bystanders away:** Distractions can cause you to lose control.
- **Secure the workpiece:** Use clamps or a vise to hold the material firmly.
- **Avoid accidental starting:** Ensure the switch is in the off-position before plugging in the tool.
- **Do not overreach:** Maintain proper footing and balance at all times.
- **Disconnect power:** Always unplug the tool before making any adjustments, changing accessories, or storing it.
- **Use the correct blade:** Match the blade type to the material being cut.
- **Maintain the tool:** Keep cutting tools sharp and clean for better and safer performance.

## 3. PRODUCT OVERVIEW AND FEATURES

The Ryobi RSW1240G Scroll Saw is engineered for precision and ease of use. Key features include:

- **Precision and Versatility:** Ideal for delicate cuts on wood, plastic, and soft metals.
- **Deep Cutting Capacity:** Features a 52mm cutting depth and a 405mm gooseneck, allowing work on larger pieces.
- **Stable Performance & Variable Speed:** A 125W induction motor offers stable performance with variable

speed from 550 to 1600 rpm, adaptable to different materials and cut types.

- **Quick Blade Replacement & Easy Adjustment:** Tool-free blade replacement offers flexibility for both pinned and pinless blades. Blade tension is easily adjusted for clean, precise cuts.
- **Stability & Clean Workspace:** The cast aluminum work surface and cast iron base reduce vibrations, enhancing stability and comfort. A side suction channel helps keep the workspace clean and can be connected to a vacuum cleaner.
- **Optimal Visibility:** Equipped with an adjustable transparent guard and an integrated blower for clear visibility during cutting.



*Image 1: A user demonstrating the Ryobi RSW1240G Scroll Saw in a workshop setting, highlighting its use for intricate woodworking.*



*Image 2: Detailed view of the scroll saw in action, emphasizing the precision of the cut and the clear visibility provided by the transparent guard.*



*Image 3: An overhead perspective of the scroll saw, illustrating the ergonomic design and the stability of the machine during operation.*

## 4. SETUP

Before operating your scroll saw, ensure it is properly set up on a stable workbench. The unit comes with a base that can be clamped to a surface for stability.

- 1. Unpacking:** Carefully remove all components from the packaging. Verify that all parts listed in the packing list are present.
- 2. Mounting the Base:** Position the scroll saw base on a sturdy workbench. Use the provided clamps to securely fasten the base to the work surface. Ensure the base is stable and does not wobble.
- 3. Blade Installation:**
  - Ensure the power cord is disconnected.
  - Loosen the blade tension knob.
  - Insert the blade into the lower blade holder, ensuring the teeth are pointing downwards.
  - Attach the upper end of the blade to the upper blade holder.
  - Tighten the blade tension knob until the blade is taut but not overly stressed.
- 4. Adjusting the Work Surface:** The cast aluminum work surface can be tilted for angled cuts. Loosen the locking knob, adjust to the desired angle, and re-tighten.
- 5. Connecting Dust Extraction:** Attach a vacuum cleaner hose to the side suction channel to maintain a clean workspace and improve visibility.
- 6. Power Connection:** Plug the scroll saw into a suitable power outlet (230V AC).

## 5. OPERATION

Follow these steps for safe and effective operation of your Ryobi RSW1240G Scroll Saw:

- 1. Material Preparation:** Ensure your workpiece is clean, free of obstructions, and properly marked for cutting.
- 2. Adjusting Speed:** Use the variable speed control (550 to 1600 rpm) to match the cutting speed to the material. Slower speeds are generally for harder materials or intricate cuts, while faster speeds are for softer materials.
- 3. Starting the Saw:** Press the power switch to turn on the scroll saw. Allow the blade to reach full speed before beginning the cut.
- 4. Making the Cut:** Gently guide the workpiece into the blade. Apply steady, even pressure. Do not force the material, as this can cause the blade to bind or break. Use the integrated blower and transparent guard for optimal visibility of the cutting line.
- 5. Internal Cuts:** For internal cuts, drill a pilot hole in the workpiece large enough to thread the blade through. Disconnect the blade from the upper holder, thread it through the pilot hole, and reattach it before starting the cut.
- 6. Stopping the Saw:** Release the power switch to turn off the scroll saw. Wait for the blade to come to a complete stop before removing the workpiece or making any adjustments.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your scroll saw.

- Cleaning:** After each use, disconnect the power and clean the saw dust and debris from the work surface, blade area, and motor vents. Use a brush or compressed air.
- Blade Inspection:** Regularly inspect blades for sharpness and damage. Replace dull or damaged blades immediately.
- Lubrication:** Refer to the detailed product manual for specific lubrication points and schedules.
- Storage:** Store the scroll saw in a clean, dry place, out of reach of children.

## 7. TROUBLESHOOTING

If you encounter issues with your Ryobi RSW1240G Scroll Saw, refer to the following common problems and solutions:

- **Saw does not start:**

- Check power connection.
- Ensure the power switch is fully engaged.
- Verify that the circuit breaker has not tripped.

- **Blade breaks frequently:**

- Blade tension might be too high or too low. Adjust as needed.
- Using the wrong blade type for the material.
- Forcing the material too quickly.
- Blade is dull or damaged. Replace the blade.

- **Inaccurate cuts:**

- Blade might be dull or bent. Replace the blade.
- Workpiece not securely clamped.
- Blade tension is incorrect.
- Table angle adjustment is loose.

- **Excessive vibration:**

- Ensure the saw is securely mounted to a stable surface.
- Check for loose components.

For issues not covered here, please contact Ryobi customer support or a qualified service technician.

## 8. SPECIFICATIONS

Specification	Value
Manufacturer	Ryobi
Model Number	5133002860
Product Dimensions	33 x 40 x 66 cm
Weight	12 kg
Color	Green and Anthracite
Style	Scroll Saw
Power Source	Corded Electric
Voltage	230 Volts (AC)
Wattage	70 watts (Note: Product description mentions a 125W induction motor)
Blade Length	12.7 Centimeters
Speed	1700 RPM (max, with variable speed from 550 to 1600 rpm as per description)

Specification	Value
Special Features	Depth adjustment, Keyless blade change
Included Components	Scroll saw base, Blower, Hex key
Blade Material	Alloy steel
Recommended Surfaces	Metal (also suitable for wood and plastic as per product description)

## 9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official RYOBI website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

© 2023 RYOBI. All rights reserved.